

Read this instruction booklet carefully before installing and using the appliance.

This is the only way to ensure the best results and maximum safety for the user.

Description (see page 3)

The terminology below will be used repeatedly on the following pages.

- A. Pot lid
- B. Coffee slits
- C. Pot
- D. Disk filter
- E. Gasket
- F. Safety valve
- G. Boiler
- H. Half pot adapter disk
- I. Funnel filter
- L. Power cable
- M. Base
- N. Electrical connector
- O. ON/OFF switch

Safety warnings



Please note:

This symbol identifies important advice or information for the user.

- This appliance has been manufactured to “make coffee”. Never use other extracts, cocoa powder, camomile, other infusions or instant mixes as these could block the holes in the filter.
- After removing the packaging, make sure the product is complete.

If in doubt, do not use the appliance and contact a professionally qualified person.

- The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of reach of children as they are a safety hazard.
- This appliance is designed and made to prepare coffee. All other use is considered improper. This appliance is not suitable for commercial use. The manufacturer is not liable for damage deriving from improper use of the appliance. This is a household appliance only. All other uses are improper and therefore dangerous.

It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type envi-

ronments; bed and breakfast type environments.



Important!

Failure to observe the warning could result in injury or damage to the appliance.

- The coffee maker may be used on the base provided only.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- To guarantee the safety of the appliance, make sure the safety valve is working correctly.

In the event of damage or doubts, do not use the appliance and contact the manufacturer's authorised customer services.

All operations involving the valve must be performed by personnel authorised by the manufacturer.

- In the event of faults or malfunctioning of the appliance, switch it off and do not tamper with it.

For any repairs, contact customer service centres authorised by the manufacturer only and insist on the use of original spare parts.

Failure to respect the above could jeopardise the safety of the appliance.



Danger of burns!

Failure to observe the warning could result in scalds or burns.

- Take care to avoid scalding caused by jets of water or steam or improper use of the appliance itself.
- When using the appliance do not touch the hot surfaces. Use the buttons or handle.



Danger!

Failure to observe the warning may result in life threatening injury by electric shock.

- During cleaning, never immerse the base and boiler in water. This is an electrical appliance.
- The coffee maker must be operated exclusively by plugging into the electrical supply and never by resting it on lit gas rings or hot plates.
- Never touch the appliance with wet or damp hands or feet.
- The power cable for this appliance must not be replaced by the user, as this operation requires the use of special tools. If the cable is damaged or requires replacing, contact a service centre authorised by the manufacturer only


to avoid all risks.


Installation

- Place the appliance on a work surface away from water taps and sinks.
- Check that the voltage of the mains power supply corresponds to the value indicated on the appliance rating plate. Connect the appliance to an efficiently earthed electrical socket with a minimum rating of 6A only. The manufacturer declines all liability for any accidents caused by the absence of an efficient earth system.
- If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified electrician.

i Important: the first time the coffee maker is used, all the accessories and internal components should be washed with hot water. Then make and throw away a few batches of coffee without drinking.

How to make coffee

- Assicurarsi che la caffettiera sia fredda e svitarla tenendo la caldaia (G) con una mano e con l'altra ruotare la caraffa (C) in senso antiorario (fig. 1).
- Remove the funnel filter (I) and, to make a full pot of coffee, fill the boiler with cold water up to the top drop  (figs. 2, 3 and 4), without covering the safety valve (visible inside the boiler).

If you want to make just half a pot, fill the boiler with water up to the bottom drop  (figs. 2, 3 and 4).

i Please note: we recommend using soft cold water. Brackish or hard water will weaken the flavour. The coffee should ideally be up to filter level.

! Important: do not use the coffee maker without water in the boiler. Do not use hot water to speed up coffee making.

- Insert the funnel filter (I) in the boiler (fig. 5). To prepare half a pot, insert the adapter disk (H) in the funnel filter (I). (fig. 6).
- Fill the funnel filter (I) with ground coffee, without pressing down (fig. 7). Fill a little at a time to avoid the ground coffee overflowing.
- Distribute the ground coffee uniformly and remove any excess coffee from the edge of the filter.

i Please note: Use good quality, medium-ground coffee, for moka coffee makers.

- Tighten the coffee maker firmly but without exaggera-

ting, holding the boiler with one hand and turning the pot clockwise with the other, without pushing on the handle.

⚠ Danger of burns! To avoid dangerous splashes of boiling water, never use the coffee maker unless the disk filter (F) is correctly in position.

- Rest the coffee maker on the base (fig. 8).
Close the lid (A).
- Press the ON/OFF switch (O).
The light in the button shows that the coffee maker is on.
- Coffee delivery will begin after a few minutes.
- At the end of brewing, mix the coffee to make it uniform then serve.

Keep-warm function

Once you have made the coffee, you can keep it warm for about 30 minutes by simply leaving it on the base.

To disable the function, press the ON/OFF switch (O).

If you remove the coffee maker from the base, the keep warm function goes off automatically. Remember that coffee loses its characteristic aroma when warmed up.

Cleaning and maintenance

⚠ Danger of burns! Before cleaning the appliance, wait until it has cooled down after use.

⚡ Danger! Unplug the base (M) from the mains socket before cleaning.

- Check regularly to make sure the coffee slits are not blocked. Clean using a pin (fig. 9).
- Over time, the gasket (E) and funnel (I) become old. When signs of wear and deterioration become evident, they must be replaced. Use only gaskets and funnels available from authorised customer service centres or identical to the originals provided.
- Every so often check that the holes in the disk filter are not blocked. If necessary, clean using a pin (fig. 10).
- Do not wash the coffee maker in the dishwasher.
- Do not use solvents or abrasive detergents to clean the boiler (G), safety valve (F) and base (M).
Cleaning with a damp cloth is sufficient, making sure water does not penetrate the connector.

⚠ Danger of burns! When you remove the disk filter (D) for cleaning or to replace the gasket (E), remember to replace it correctly before using the coffee maker to avoid dangerous splashes of hot water.

- Never rinse the boiler (G) under the tap and never immerse in water (fig. 11).

Technical data

Voltage/Frequency:	220-240 V~ 50/60 Hz
Absorbed power:	550W
Dimensions (LxDxH):	EMKM4 194x127x219mm EMKM6 194x127x261mm EMKM2 194x127x203mm
Cable length:	0,98 m
Weight:	EMKM4 1,01 kg EMKM6 1,15 Kg EMKM2 0,92 Kg

CE The appliance complies with the following EC directives

- Low Voltage Directive 2006/95/EC and subsequent amendments;
- EMC Directive 2004/108/EC and subsequent amendments;
- Materials and accessories coming into contact with food conform to EC regulation 1935/2004.
- European Stand-by Regulation 1275/2008

Disposal



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

Troubleshooting

PROBLEM	PROBABLE CAUSES	SOLUTION
No coffee is delivered	No water in the boiler	Fill the boiler with fresh water
Coffee delivery takes a long time	The coffee used is not the right type	Use ground coffee expressly for moka coffee makers
	The disk filter is blocked	Clean the disk filter as described in the paragraph "Cleaning and maintenance"
	The coffee has been pressed	Do not press the ground coffee
Coffee leaks from the edges of the boiler	The disk filter is blocked	Clean the disk filter as described in the paragraph "Cleaning and maintenance"
	The pot is not screwed to the boiler properly.	Screw up firmly
	The gasket is burned or torn	Replace the gasket.