


MACHINE SET UP

DeLonghi

571322774/11.15

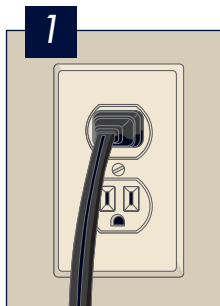

Plug into outlet



Push ON main switch, located on back of machine.



SETTING LANGUAGE:
When English appears, HOLD the button for Three Seconds. Once the language has been saved, the message "English Set" is displayed.



Remove and fill water tank, then replace.



Fill coffee beans



Insert water spout and place a container underneath.



Press OK Button. The machine will prime. A little water will be released by the hot water spout. The machine will then switch it off automatically.



Press ON/OFF button to turn ON machine.

Machine is now ready to work!

Video available on <http://ecam23460.delonghi.com>

ECAM23460