



- G. Water tank (removable)
- H. Power cable
- I. Pre-ground coffee measure
- J. Cup tray (removable)
- K. Coffee grounds container (removable)
- L. Service door
- M. Coffee spout, adjustable in height
- N. Infuser
- O. Control panel



Natural Descaler $100 \, \text{ml} / 3.4 \, \text{oz}.$



Owner's Instructions **Booklets**




MACHINE SET UP







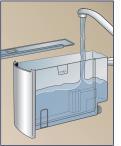



Plug into outlet

Fill water tank

Fill bean container with coffee beans


4 Priming the appliance







Push ON main switch, located on back of machine

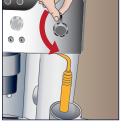

Turn knob counter-clockwise to start the prime. Hot water will be released by the milk frother.



After 1/3 of the cup is full turn the knob clockwise to stop the water flow.

5

Flashing





Steady

Machine is now ready to work!

Video available on http://esam04110.delonghi.com

