

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles and knobs.
- To protect against fire, electrical shock and personal injury, do not immerse cord, plug or appliance in water or other liquid.
- Never allow the appliance to be used by children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before fitting or taking off parts, and before cleaning the appliance.
- Do not operate with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments or spare parts not recommended by the appliance manufacturer may result in fire, electrical shock or personal injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electrical burner, or in a heated oven.
- Plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than the intended use. This appliance is to be utilized for domestic use only. Any other use is to be considered improper and, therefore, dangerous.

WARNING: To reduce the risk of fire or electric shock, do not remove the cover. Don't attempt to repair or modify the machine, doing so will void the warranty. Repair should be done by authorized service personnel only!

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

SHORT CORD INSTRUCTIONS

- A short power cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer, detachable power supply cords or extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of the appliance. If the appliance is provided with 3- wire, grounding type cord, the extension should be a GROUNDING TYPE 3 - WIRE CORD. The longer cord should be arranged so that it will not drape over the counter-top or table top where it can be pulled on by children or tripped over.
- Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Read this instruction booklet carefully before installing and using the appliance. This is the only way to ensure the best results and maximum safety for the user.

Description (see page 3)

The terminology below will be used repeatedly on the following pages.

- 1 Cup storage tray
- 2 Steam knob
- 3 Water level indicator
- 4 Power cord
- 5 Water tank
- 6 Patented cappuccino system frother
- 7 Steam tube
- 8 ON/OFF button
- 9 Coffee/hot water button
- 10 Steam button
- 11 ON/OFF indicator light
- 12 Preheating completed indicator light
- 13 Steam indicator light
- 14 Small filter for 1 cup ground coffee or 1 pod
- 15 Large filter for 2 cups ground coffee
- 16 Patented dual-function filter holder
- 17 Tamper
- 18 Boiler outlet
- 19 Measuring scoop
- 20 Removable drip tray
- 21 Removable cup support
- 22 Cup tray bars

Attention: Before using the machine for the first time all accessories and internal circuits must be washed by making at least five cups of coffee without using ground coffee.

Safety Warnings

- This appliance is designed to “make espresso coffee” and “hot drinks”. Use with care to avoid scalds from the water and steam jets or through incorrect use.
- Never touch hot parts.
- After removing the packaging, make sure the product is complete. If in doubt, do not use the appliance and contact a De’Longhi customer service representative.
- The packing elements (plastic bags, polystyrene foam, etc.) should be kept out of reach of children as they are a safety hazard.
- This appliance is intended for domestic use only. Any other use is considered improper and thus dangerous.
- The manufacturer cannot be held responsible for any damage caused through incorrect, wrong or unreasonable use.
- Never touch the appliance with wet or damp hands.
- Never let children use the appliance without supervision.
- Never allow children to play with the appliance.
- Should the appliance break or not function correctly, turn it off and do not tamper with it. For all repairs, contact authorized service centers only and insist on the use of original spare parts.
Failure to respect the above could reduce the safety of the appliance.
- The power cord for this appliance must not be replaced by the user as this operation requires the use of special tools. In the event of damage, contact an authorized service center only to avoid all risks.

Installation

- Place the appliance on a work surface away from water faucets and sinks.
- Check that the voltage of the outlet corresponds to the value indicated on the appliance rating plate. Connect the appliance to an efficiently grounded electrical socket with a minimum rating of 10A only. The manufacturer declines all liability for any accidents caused by the absence of an efficient ground system.
- If the plug fitted to the appliance does not match the electrical socket, have the outlet replaced with a suitable type by a qualified electrician.
- Never install the appliance in environments where the temperature may reach 0°C (32°F) or lower (the appliance may be damaged if the water freezes).

Filling the water tank

Remove the water tank by pulling sideways and lifting the intake tubes out of the water (fig. 1).

Rinse and fill with clean cold water (fig 2). Check the water level by viewing the floating ball. Replace the water tank in the housing, making sure the tubes are in the water.

The water tank can also be filled by extracting it just enough to pour in water directly from a jug.

Preheating the coffee unit

To obtain espresso coffee at the right temperature, the coffee machine must be preheated. It is, therefore, recommended to press the ON/OFF button (fig. 3) at least 15 minutes before preparing the espresso, making sure the filter holder is attached to the appliance (check that the steam knob is closed).

To attach the filter holder, position it under the boiler outlet with the handle towards the left (fig. 4), push it upwards while at the same time rotating the handle towards the right. Rotate firmly. Wait for 15 minutes, then make the coffee as described in the following section.

Alternatively, you can preheat more rapidly by proceeding as follows:

1. Press the ON/OFF button (fig. 3) and attach the filter holder to the appliance without adding ground coffee.
2. Place a cup under the filter holder. Use the same cup that will be used to prepare the coffee in order to preheat it.
3. Wait for the OK indicator light to come on (fig. 5), then immediately press the coffee button (fig. 6). Run the water off until the OK indicator light goes out, then interrupt delivery by pressing the coffee button again (fig. 6).
4. Empty the cup, detach the filter holder and empty out the hot water.

(It is normal for a small and harmless puff of steam to be emitted when removing the filter holder).

How to prepare Espresso coffee using the patented filter holder for ground coffee

1. After preheating the appliance as described in the previous section, place the ground coffee filter in the filter holder. Make sure the tab is correctly inserted in the slot as shown in fig. 7, otherwise you will not be able to attach the filter holder to the appliance. The appliance comes with two filters; the small filter should be used for one coffee and the large filter for two coffees.
2. To make a single coffee only, place one level measure of ground coffee, about 0.24 ounces (7 grams), in the filter (fig. 8). To prepare two coffees, place two loosely filled measures of ground coffee (0.42 ounces/6+6 grams) in the filter. Fill the filter a little at a time to prevent the

ground coffee from overflowing.

IMPORTANT: to ensure correct operation, before placing the ground coffee in the filter holder, clean the filter of residues of ground coffee from the previous infusion.

3. Distribute the ground coffee evenly and tamp lightly with the tamper (fig. 9).

Note: Correct tamping of the ground coffee is essential to obtain a good espresso. If tamping is excessive, espresso delivery will be slow and the crema will be dark. If tamping is too light, coffee delivery will be too rapid and the froth will be skimpy and light colored.

4. Remove any excess coffee from the rim of the filter holder and attach to the appliance. Rotate firmly (fig. 4) to avoid water leaking out.
5. Place the cup or cups under the filter holder spouts (fig. 10). It is recommended to heat the cups before making the coffee by rinsing them with a little hot water or placing them to warm on the cup storage tray for at least 15-20 minutes (fig. 26).
6. Make sure the OK indicator light (fig. 5) is on (if it is off, wait until it comes on), then press the coffee button (fig. 6). Once the required quantity of espresso has been obtained, interrupt delivery by pressing the coffee button again (fig. 6).
7. To remove the filter holder, rotate the handle from right to left.

IMPORTANT: to avoid splashes, never remove the filter holder while the appliance is delivering espresso.

8. To dispose of the used coffee, lock the filter in place using the lever incorporated in the handle then empty the grounds by turning the filter holder upside down and tapping (fig. 11).
9. To turn the coffee machine off, press the ON/OFF button (fig. 3).

IMPORTANT: The first time the appliance is used, all accessories must be washed thoroughly.

How to prepare Espresso coffee using pods

1. Preheat the appliance as described in the section "PREHEATING THE COFFEE UNIT", making sure the filter holder is attached.

Note: use pods conforming to the ESE standard, indicated on the pack by the following symbol:



The ESE standard is a system accepted by leading pod producers and enables espresso coffee to be prepared simply and cleanly.

- Place the small 1 cup ground coffee or pod filter in the filter holder, making sure the filter is correctly inserted in the slot as shown in fig. 7.
- Insert a pod, centering it as close as possible on the filter (fig. 12). Always follow the instructions on the pod packaging to position the pod on the filter correctly.
- Attach the filter holder to the appliance. Always rotate as far as it will go (fig. 4).
- Proceed as in points 5, 6 and 7 in the previous section.

How to make Cappuccino

- Prepare the espresso coffee as described in the previous section, using a sufficiently large cup.
- Press the steam button (fig. 13) and wait for the steam indicator light to come on (fig. 13). The OK indicator light indicates that the boiler has reached the ideal temperature for steam production.
- In the meantime, fill a container with about 3.5 ounces (100 grams) of milk for each cappuccino to be prepared. The milk must be at refrigerator temperature (not hot!). In choosing the size of the container, bear in mind that the milk increases in volume by 2 or 3 times.

Note: It is recommended to use skim milk at refrigerator temperature.

- Place the container with milk under the cappuccino frother.
- Dip the cappuccino frother into the container with milk (fig. 14), taking care not to immerse the raised line on the cappuccino frother (indicated by the arrow in fig. 15). Turn the steam knob at least a half turn counter-clockwise (fig. 16). Steam is given off by the cappuccino frother, giving the milk a creamy frothy appearance. To obtain a creamier froth, dip the cappuccino frother into the milk and rotate the container with slow movements from the bottom upwards.
- When the required temperature is reached (140°F/60°C is ideal), interrupt steam delivery by rotating the steam knob clockwise and at the same time pressing the steam button (fig. 13).
- Pour the frothed milk into the cup containing the espresso coffee prepared previously. The cappuccino is ready. Sweeten to taste and if desired, sprinkle the froth with a little cocoa powder.

Note: To prepare more than one cappuccino, first make all the espressos then at the end prepare the frothed

milk for all the cappuccinos.

IMPORTANT: Always clean the cappuccino frother after use. Proceed as follows:

- Discharge a little steam for a few seconds by turning the steam knob counter-clockwise (fig. 16). This empties any milk left inside the steam tube.
IMPORTANT: It is recommended to follow this procedure each time you make cappuccino to avoid milk stagnating in the steam tube.
- With one hand, hold the steam tube firmly and with the other unscrew the cappuccino frother by rotating clockwise and pulling downwards (fig. 17).
- Remove the nozzle from the steam tube by pulling it downwards (fig. 18).
- Wash the cappuccino frother and steam nozzle thoroughly with warm water.
- Make sure the two holes indicated by the arrows in fig. 19 are not blocked. If necessary, clean with a pin.
- Replace the steam nozzle by inserting it onto the steam tube and rotating firmly towards the top of the tube.
- Replace the cappuccino frother by inserting it and rotating counter-clockwise.

Hot water production

- Turn the appliance on by pressing the ON/OFF button (fig. 3). Wait until the OK indicator light comes on (fig. 5).
- Place a container under the cappuccino frother.
- Press the coffee button (fig. 6) and at the same time open the steam knob. Hot water is delivered from the cappuccino frother.
- To interrupt delivery of hot water, close the steam knob by rotating clockwise and press the coffee button again (fig. 6).

Note: Maximum delivery of 60 seconds is recommended.

Cleaning and maintenance

Before cleaning the outside of the appliance, always turn off, unplug from the outlet and allow to cool.

Cleaning the filter holder for ground coffee

About every 200 coffees, clean the filter holder for ground coffee as follows:

- Remove the filter from the filter holder.
- Clean the inside of the filter holder. Never wash in a dishwasher.
- Remove the cap (fig. 20) by unscrewing in the direction indicated by the arrow on the cap.
- Remove the filter from the container by pushing it from the cap end.
- Remove the gasket.

- Rinse all components and clean the metal filter thoroughly in hot water using a brush (fig. 21). Make sure the holes in the metal filter are not blocked. If necessary, clean with a pin (see fig. 22).
- Replace the filter and plastic disk on the gasket as shown in fig. 23. Make sure to insert the pin on the plastic disk into the hole in the gasket indicated by the arrow in fig. 23.
- Replace the assembly in the steel filter container (fig. 24), making sure the pin is inserted in the hole in the support (see arrow in fig. 24).
- Finally, screw on the cap.

Failure to clean as described above invalidates the warranty.

Cleaning the boiler outlet

About every 200 coffees, the espresso boiler outlet must be cleaned as follows:

- Make sure the appliance is not hot and that it is unplugged from the outlet;
- Using a screwdriver, unscrew the screw fixing the espresso boiler outlet (fig. 25);
- Clean the boiler with a damp cloth;
- Clean the boiler outlet thoroughly in hot water using a brush. Make sure the holes are not blocked. If necessary, clean with a pin (fig. 22).
- Rinse under running water, rubbing all the time.
- Replace the espresso boiler outlet, making sure the gasket is correctly positioned.

Failure to clean as described above invalidates the warranty.

Other cleaning operations

1. Do not use solvents or abrasive cleaning products to clean the appliance. A soft, damp cloth is sufficient.
2. Clean the filter holder, filters, drip tray and water tank regularly.

IMPORTANT: During cleaning, never immerse the espresso maker in water. It is an electrical appliance.

Descaling

You must descale the coffee machine about every 200 coffees. Use the descaler provided only. To descale, proceed as follows:

1. Fill the tank with 34 ounces (1 liter) of water;
2. Pour the contents of the descaler provided (3.38 fl oz / 100ml) into the tank. For subsequent descaling operations, descaling solution can be purchased from authorized technical service centers.
3. Make sure the filter holder is not attached and position a container under the boiler outlet.
4. Press the ON/OFF button (fig. 3) and wait for the OK indicator light to come on.
5. Press the coffee button, 1/4 empty the tank and every now and then rotate the steam knob to allow a little of the solution to run off. Then interrupt by pressing the coffee button again and leave the solution to act for about 5 minutes.
6. Repeat point 5 another 3 times or until the tank is completely empty.
7. To eliminate residues of the solution and scale, rinse the water tank well, fill with clean water and replace in its housing. Press the coffee button and operate the appliance until the water tank is completely empty;
8. Press the coffee button again and repeat the last operation.

Repair of damage to the espresso maker caused by scale is not covered by the warranty unless descaling is performed regularly as described above.

Problem	Possible causes	Solution
No espresso coffee is delivered	No water in the tank	Fill the tank with water
	The holes in the filter holder are blocked	Clean the filter holder spout holes
	The espresso boiler outlet is blocked	Clean as described in the section "Cleaning the boiler outlet"
The espresso coffee drips from the edges of the filter holder rather than the holes	The filter holder is inserted incorrectly	Attach the filter holder correctly and rotate as far as it will go
	The espresso boiler gasket has lost elasticity	Have the espresso boiler gasket replaced at a service center
	The holes in the filter holder are blocked	Clean the holes
The espresso coffee is cold	The espresso OK indicator light was not on when the coffee button was pressed	Wait until the espresso OK indicator light comes on
	No preheating performed	Preheat as described in the section "Preheating the coffee unit"
	The cups were not preheated	Preheat the cups by rinsing with hot water
The pump is excessively noisy	The water tank is empty	Refill the tank
The crema is too light (delivered from the spout too fast)	The ground coffee is not pressed down firmly enough	Tamp/Press the ground coffee down more firmly
	There is not enough ground coffee	Increase the quantity of coffee
	The ground coffee is too coarse	Use ground coffee for espresso coffee machines only
The crema is too dark (delivered from the spout too slowly)	The ground coffee is pressed down too firmly	Tamp/Press the coffee down less firmly
	There is too much ground coffee	Reduce the quantity of ground coffee
	The espresso boiler outlet is blocked	Clean as described in the section "Cleaning the boiler outlet"
	The ground coffee is too fine	Use ground coffee for espresso coffee machines only
The coffee has an acidic taste	Inadequate rinsing after descaling	After descaling, rinse the appliance as described in the section "Descaling"
No milk froth is formed when making cappuccino	Milk not cold enough	Always use skim milk at refrigerator temperature.
	Cappuccino maker dirty	Thoroughly clean the holes in the cappuccino frother

De'Longhi Group
LIMITED WARRANTY



This warranty applies to the home appliances with De'Longhi brand name which you just purchased

De'Longhi Group warrants each product to be free from defects in material and workmanship. From the purchase date, our obligation under this warranty is to provide one (1) year free parts and labor on the entire unit.

All products in need of repair are to be shipped to an authorized De'Longhi Group service center at the owner's expense, and De'Longhi Group will then incur the return shipping costs. For added protection and secure handling of any of our products that is being sent, we recommended you use a trackable insured delivery method. De'Longhi Group cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

This warranty shall apply only if the product is used in accordance with the factory directions that accompany it, and on an Alternating Current (AC) circuit. This warranty is in lieu of all other warranties and representations, expressed or implied, and all other obligations or liabilities on our part. We do not authorize any other person or company to assume for us any liability in connection with the sale or use of our product. Within the warranty period, De'Longhi Group may, at its sole discretion, either repair the product with new or remanufactured parts, or replace the product entirely, either with a new or a certified remanufactured product at no additional charge to consumer. De'Longhi Group may replace defective parts with any serviceable remanufactured parts that meet the performance specifications of new parts for any applicable product. This warranty shall not apply to any product that has been repaired or altered outside our factory nor shall it apply to any product that has been subjected to misuse, negligence or accidents. This warranty covers only products purchased through De'Longhi Group or one of De'Longhi Group's authorized resellers or distributors. This warranty does not cover any products purchased through an auction, a private seller (such as E-Bay,...) or a non-authorized online reseller.

This warranty does not cover consequential or incidental damages. (Please note, however, that some jurisdictions do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

This warranty is only valid for products purchased, located and used in North America jurisdiction* and shall not extend to any product not purchased in North America.

For any inquiries with your product, see contact information below:

U.S. Residents:

Please contact our toll free hotline at **1-800-322-3848**

or log onto our website at www.delonghi.com

CANADA Residents:

Please contact our toll free hotline at **1-888-335-6644**

or log onto our website at www.delonghi.com

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. No other warranties, express or implied, are made by De'Longhi Group or are authorized to be made on behalf of De'Longhi Group by any retailer, agent, distributor or other party with respect to any product to any consumer or other party. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does country law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state/ country to country. Some states/countries do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you.

Note: Check the warranty information contained in the product packaging and see the website for further warranty information.

* North America jurisdiction shall means either: (i) the 50 United States and the District of Columbia only, not including any other U.S. territories, commonwealths, possession or protectorates or (ii) a province or territory of Canada.