




## IN THE BOX

- A1. Water tank lip and filter storage
- A2. Cup warmer / storage tray
- A3. Control panel dial
- A4. Boiler outlet
- A5. Steam dial
- A6. Steam spout / frother
- A7. High glass tray
- A8. Drip tray
- A9. Water tank

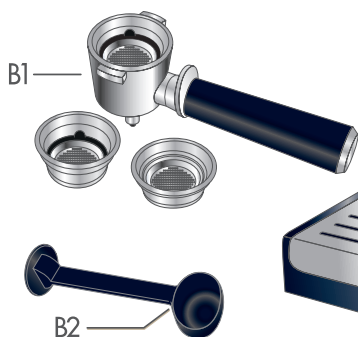

Get Started &  
Owner's Instructions  
Booklets


ECP3X20

# MACHINE SET UP

**DeLonghi**



Remove tank, fill with water

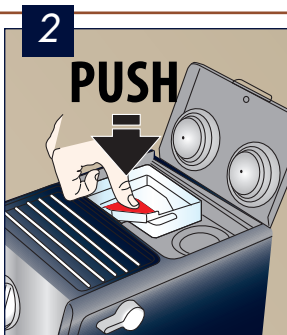


Replace water tank and plug the appliance in



Place containers under boiler outlet and cappuccino maker




Turn dial to ON position, red light is on and unit is heating up.

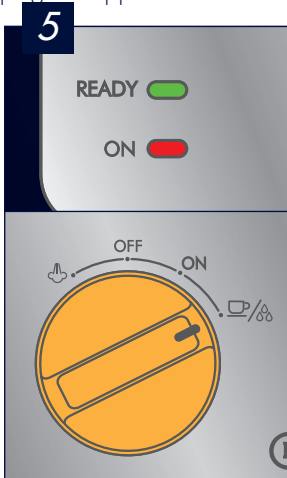

When READY light is green, turn dial to ☕/⌂ position let about half the tank discharge from the boiler outlet.

*Note: This operation can take a few minutes. The machine may vibrate.*

**Machine is now ready to work!**

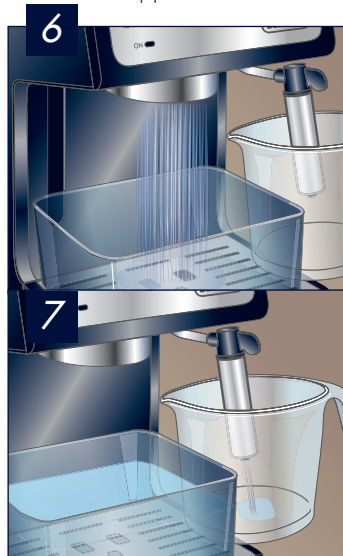

Then turn the steam dial to the ☕/⌂ position and discharge all the water remaining in the tank from the cappuccino maker. Turn the steam dial back to 0 and the selector dial to ON position to stop the flow.

5713235611\_00\_0817

5713236591\_00\_1117

ECP3X20