

- Dimensioni: 21x29,7 cm
- Cartoncino: 300 g, plastificato opaco
- stampato fronte e retro
- stampa: quadricromia + PANTONE 289

- Dimensions: 21x29,7 cm
- Paper: 300 g with uncoated plastic film
- both side printing
- printing: 4-colour and PANTONE 289 for background

die-cut line  
do not print

### QUICK SET-UP GUIDE

Please review before attempting install. For more detailed instructions, please refer to included product manual.

#### PARTS INCLUDED

#### EASY SET UP - ALL PARTS INCLUDED - NO TOOLS REQUIRED!

STEP 1

**Step 1 - Placement**  
Select the best window for the air conditioner. The window kit will fit from a 20" to 47" opening. You will need some clearance for the hose and a convenient 3 hole grounded outlet within 5 1/2 feet. Choose a window that is centrally located so it is best positioned to cool the entire room. Do not install in same circuit as other major appliances.

STEP 2

**Step 2 - Window kit**  
Take the window kit (1) and install in selected window. If there is still window area exposed, add the additional window bracket (2) to fill the space.

STEP 3

**Step 3 - Hose assembly**  
**A** - Screw hose adapter (4) to air exhaust hose (3)  
**B** - Screw window outlet (5) to the other end of the air exhaust hose (3)  
**C** - Attach the hose adapter (4) with assembled hose to the back of the air conditioner.

STEP 4

**Step 4 - Vent air exhaust hose out window**  
Insert the window outlet (5) with assembled hose into the oval opening of the installed window kit (1).

STEP 5

**Step 5 - Plug the unit in**  
Be sure it is a 3 hole grounded outlet within 5 1/2 feet of air conditioner.

STEP 6

**Step 6 - Turn unit on** and set to your desired temperature. See reverse for control panel operations.

**For best performance**, ensure that air exhaust hose is as close to the window as possible without kinks or bends in the hose that could block air flow and reduce cooling performance.

**IMPORTANT NOTES TO PREVENT LEAKING:** 1) Make sure air conditioner is on a level surface to prevent any condensate leakage.  
2) Before you move the unit, unplug the unit from the wall, and drain any condensation from the drain valve located on the back of the unit into container. If you are in an especially humid region, you should do this regularly to prevent potential leaking. Make sure drain cap is back on tightly.

<b>A</b> ON/OFF	<b>I</b> TIMER SYMBOL
<b>B</b> TEMPERATURE INCREASE KEY	<b>L</b> AIR CONDITIONER SYMBOL
<b>C</b> TEMPERATURE DECREASE KEY	<b>M</b> DEHUMIDIFIER SYMBOL
<b>D</b> FUNCTION SELECTION KEY <b>MODE</b>	<b>N</b> FAN SYMBOL
<b>E</b> FAN SPEED SELECTION KEY (MIN/MED/MAX/AUTO)	<b>O</b> SWING SYMBOL
<b>F</b> SET TEMPERATURE VALUES, PROGRAMMED ON/OFF TIME	<b>P</b> FAN SPEED INDICATOR
<b>G</b> SELECTED TEMPERATURE SCALE INDICATOR	<b>Q</b> ALARM SYMBOL
<b>H</b> HOURS INDICATOR	

For additional questions or comments, please call our Customer Service Hotline at 1-800-322-3848 (Toll Free – U.S. Only)

[www.delonghiusa.com](http://www.delonghiusa.com)