

INTRODUCTION

Thank you for choosing a De'Longhi product. Please take a few moments to read the instructions to avoid risks or damage to the appliance.

DESCRIPTION

Description of the appliance (see page 2 - A)

- A1** air outlet flap
- A2** control panel
- A3** handles
- A4** castors
- A5** silver ions filter
- A6** air intake grille
- A7** air exhaust hose housing
- A8** air intake grille
- A9** power cable
- A10** drainage hose with cap
- A11** remote control signal receiver
- A12** remote control compartment

Description of the accessories (see page 2 - B)

- B1** wall flange with cap
- B2** air exhaust hose
- B3** hose adaptor
- B4** adapter for window bracket
- B5** window bracket with wing nut
- B6** adapter for wall mounting/window outlet
- B7** window outlet
- B8** remote control
- B9** window bracket cap

ELECTRICAL CONNECTION

Before plugging into the mains, check the following:

- the mains voltage is the same as that indicated on the plate on the back of the appliance;
- the socket and electrical line are sized to support the load required;
- the socket is the proper type for the plug, otherwise, replace the socket;
- the socket is connected to an efficient earthing system.

The manufacturer is not responsible in the event of non-compliance with these injury prevention standards.

The power cable must only be replaced by specialised technicians.

USE

The instructions below will enable you to prepare your air conditioner for operation as efficiently as possible. Before use, make sure the air intake and outlet grilles are unobstructed.

Please note: This appliance is provided with an auto-evaporation feature for condensate removal during cooling and dehumidifying modes.

AIR CONDITIONING WITHOUT INSTALLATION

CASEMENT WINDOW

If you have a casement window proceed as follows:

- Fit the air exhaust hose (B2) in the relevant housing located on the rear side of the appliance (fig. 1).
- Screw the window outlet (B7) and place outside the window to exhaust the hot air (fig. 2).

DOUBLE-HUNG WINDOW

If you have a double-hung window proceed as follows:


- Insert and lock the adapter for window bracket (B4) into the slot of the window bracket (B5) (fig.3)
- Place the window bracket in the window sill, and extend the bracket fully within the window frame (fig. 4).
- Fix the bracket by the wing nut (fig. 5) (Should the window bracket be too large for the window the plastic can be cut with a saw by a qualified professional).
- Insert the air exhaust hose (B2) into the adapter for window bracket (B4) and rotate it as shown in fig. 6.
- In order to facilitate the fitting of the air exhaust hose (B2) in the relevant housing located on the rear side of the appliance, position the hose adapter's tabs (B3) in a vertical axis as shown in fig. 7 and proceed as shown in fig.1.

SLIDING WINDOWS

- Thanks to the locking wing nut, it's possible to use the window bracket also for sliding windows. Position the bracket vertically with the hole in the lower part so to allow a easier installation of the exhaust hose.

AIR CONDITIONING WITH INSTALLATION

- Fit the air exhaust hose (B2) in the relevant housing located on the rear side of the appliance (fig. 1).
- Drill a hole 150 mm in an outside wall or through a window panel. Respect the distances, dimensions and height of the hole given in figure 8.

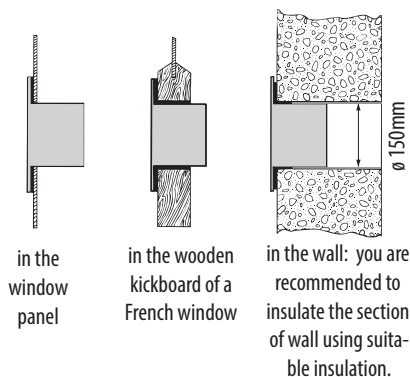


- Fit the wall flange (B1) into the hole.
- Fit the air exhaust hose (B2) into the wall flange (B1) (Fig. 9)
- When the hose (B2) is not connected, the drilled hole can be closed with the flange cap (B1).

Please note: As special tools are required for installation, we suggest you have the appliance installed by specialized personnel.

- When installing the air conditioner, you should leave a door slightly open little as 1 cm to guarantee correct ventilation and room pressure.
- Keep the air hose as short and free of curves as possible to avoid constrictions.

OPERATING FROM THE CONTROL PANEL

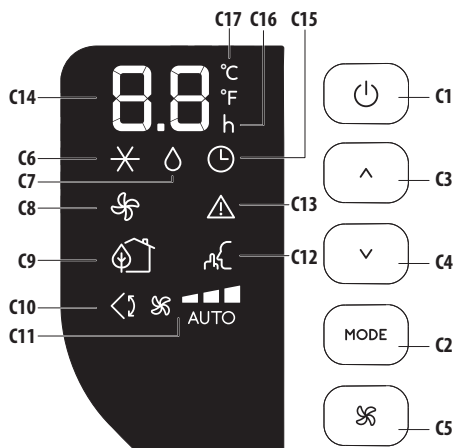

DESCRIPTION OF THE CONTROL PANEL (C)

- C1.** ON/STAND-BY (on/off) key
- C2.** Function selection key MODE (air conditioner, dehumidifier, fan)
- C3.** Temperature increase key
- C4.** Temperature decrease key
- C5.** Fan speed selection key (MIN/MED/MAX/AUTO)
- C6.** Air conditioner symbol
- C7.** Dehumidifying symbol
- C8.** Fan symbol
- C9.** ECO REAL FEEL status indicator
- C10.** Swing symbol
- C11.** Fan speed indicator
- C12.** SILENT symbol
- C13.** Alarm symbol
- C14.** Set temperature values, programmed on/off time
- C15.** Timer symbol
- C16.** Timer indicator
- C17.** Selected temperature scale indicator

CONTROL PANEL OPERATION

TURNING THE APPLIANCE ON AND OFF

Insert the plug in the socket. Two dashes appear on the display indicating that the appliance is in stand-by.




Touch the  (C1) key to turn on the appliance.

The flap A1 will open after few seconds. When the appliance comes on the last function set before it was shut off is activated.

Please note: If start-up is not continued, after a few minutes the display light dims in order to reduce energy consumption. To turn the appliance off, touch the  key and then pull the plug.

Please note: Never turn off the air conditioner by simply pulling the plug. Touch the  key in order to put your air conditioner in stand-by and wait a few minutes before pulling the plug. In this way, the appliance can perform the operating status checks..

MODES SELECTION

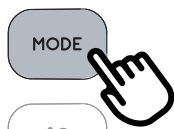

To select the desired operating mode, touch repeatedly the **MODE** key (C2) until the desired function is selected.

Note: The appliance may take a few minutes before starting to cool or dehumidify. Meanwhile, the selected mode's indicator flashes.

✱ AIR CONDITIONING MODE



This is ideal for hot and humid weather when the room needs to be both cooled and dehumidified.

To correctly set this mode:

- Touch repeatedly the **MODE** key (C2) until the air conditioning ✱ symbol appears. The display will show the desired temperature.
- To change the temperature to be reached, touch the $\wedge$ (C3) or $\vee$ (C4) key.

- Select the desired fan speed by touching the $\mathcal{S}$ (C5) key.

The speeds available are:

- $\mathcal{S}$ **Minimum speed:** when maximum silent operation is desired.
- $\mathcal{S}$ **Medium speed:** when the noise level needs to be low but with a good comfort level.
- $\mathcal{S}$ **Maximum speed:** to reach the desired temperature as soon as possible.
- $\mathcal{S}$ **AUTO** The appliance automatically chooses the best fan speed based on the temperature selected and the environmental conditions.

The most suitable temperatures during the summer range from 24 to 27°C. However, setting the temperature significantly lower than the outdoor temperature is not recommended.

◊ DEHUMIDIFYING MODE




This is ideal for reducing humidity in the room (spring and autumn, damp rooms, rainy periods, etc). For this type of use, the appliance must be set up as for air conditioning mode. That is, the air exhaust hose (B2) must be fitted to the appliance to allow the humidity to be discharged outside.

To correctly set this mode:

- Touch repeatedly the **MODE** key (C2) until the dehumidifying ◊ symbol appears.
- The appliance will automatically choose the best air flow.

$\mathcal{S}$ FAN MODE

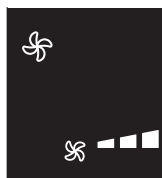

When using this mode, the air exhaust hose (B2) does not need to be attached to the appliance.

To correctly set this mode:


- Touch repeatedly the **MODE** (C2) key until the fan $\mathcal{S}$ symbol appears.

- Select the desired air flow by touching the increase $\wedge$ (C3) or decrease $\vee$ (C4) key.

The air flows available are:

- $\mathcal{S}$ **Minimum air flow:** when most silent operation is desired.
- $\mathcal{S}$ **Medium air flow:** when the noise level needs to be low but with a good comfort level.
- $\mathcal{S}$ **Maximum air flow:** for maximum performance.

SELECT THE TEMPERATURE SCALE

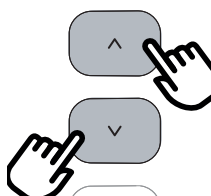

The temperature can be displayed in °C or °F. To change the temperature unit of measure touch simultaneously for ten seconds the increase $\wedge$ (C3) and decrease $\vee$ (C4) key.

OPERATING FROM THE REMOTE CONTROL

INSERTING OR REPLACING THE BATTERIES

- Remove the cover on the rear of the remote control;
- Insert or replace the batteries with two new LR03 "AAA" 1.5V batteries, inserting them correctly (see the directions inside the battery compartment) (fig. 10);

- Replace the cover.

Please note: If the remote control unit is replaced or discarded, the batteries must be removed and disposed of in accordance with current legislation as they are harmful to the environment. Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Do not dispose of batteries in fire. Batteries may explode or leak. If the remote control is not be used for a certain length of time, remove the batteries.


USING THE REMOTE CONTROL

- Point the remote control at the receiver (A11) on the air conditioner. The remote control must be no more than 7 metres away from the appliance (fig. 10) (without obstacles between the remote control and the receiver).
- The remote control must be handled with care. Do not drop it or expose it to direct sunlight or sources of heat.

Please note: The remote control can be safely stored in the appropriate compartment (A12).

DESCRIPTION OF THE REMOTE CONTROL

- D1. ON/STAND-BY button
- D2. MODE button
- D3. Decrease button
- D4. Increase button
- D5. Air flow
- D6. Swing button
- D7. Silent button
- D8. Timer button
- D9. ECO REAL FEEL button

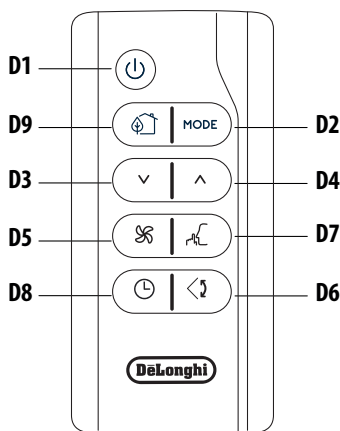

TURNING THE APPLIANCE ON/OFF

- Plug into the outlet.
- Press the  button (D1) (when turned on, the air conditioner starts operating in the same mode as when it was turned off).
- To switch the appliance off, press the  button (D1).

Please note: Never switch the appliance off by removing the plug. Always switch it off by pushing the  button and waiting few minutes before removing the plug. Only in this way the appliance will perform the standard checkings.

SELECTING THE OPERATING MODES

To select the desired operating mode, touch repeatedly the MODE button (D2) until the desired function is selected. Most of the commands available on the remote control correspond to those on the appliance control panel (C).


SELECTING THE TEMPERATURES

In conditioning mode press  (D3) and  (D4) buttons to decrease/increase the desired temperature.

SELECTING THE AIR FLOW

In conditioning and fan modes, press  (D5) button to increase/decrease the desired air flow.

SWING FUNCTION

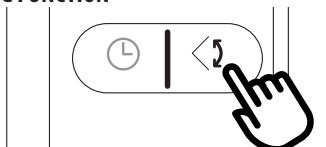

The SWING button (D6) moves the flap, evenly distributing the air into the room.

When the SWING button is pressed, the flap will begin to move forwards and backwards alternatively.

If pressed again, the flap will be locked into its current position. When the button is next pressed, the flap will start to move forwards and backwards again.

Notes: in order to avoid damaging the internal mechanisms, the flap must not be moved manually.

 **SILENT FUNCTION** (available in conditioning mode only)



By activating this function, the operating noise is further reduced. To activate it, press  (D7) button on the remote control. The display shows the relative symbol (C12).

SETTING THE TIMER



The timer allows the delayed start up or shut down of the appliance. This function will prevent wasting electricity by optimising the operating periods.

How to program delayed shut down

- While the appliance is on in any operating mode, delayed shut down can be programmed.
- Press the  timer button (D8), the timer symbol (C15) and hours (C14) light up.
- Press the  (D3) and  (D4) buttons until the desired numbers of hours to shut down appears on the display.

A few seconds after the timer is set, the setting is acquired, the display shows the operating mode and the timer symbol stays lit. Once the set time is elapsed, the air conditioner goes into standby.

To cancel the timer program, press the  timer button (D8) twice. The timer symbol (C15) will go off.

Please note: Once the timer has been activated, by pressing the timer button only one time, the remaining hours to shut down will be displayed.

How to program delayed start up

- Plug in the appliance and set to standby.
- Press the  timer button (D8), the timer symbol (C15) and hours (C14) light up.
- Press the  (D3) and  (D4) buttons until the desired numbers of hours to start up appears. Start up can be programmed at any time within the 24 hours that follow.

When the set time is elapsed, the appliance will start to operate in the same operating mode that was previously set.

To cancel the timer program, touch the timer button (D8) twice. The timer symbol (C15) will go off.


Please note: Once the timer has been activated, by pressing the timer key only one time, the remaining hours to the start up will be displayed.



ECO REAL FEEL FUNCTION

ECO REAL FEEL is the innovative De'Longhi technology that works simultaneously on temperature reduction and humidity control, securing best comfort level.

With traditional systems, during working time, optimal comfort conditions may be reached but not secured over time. With ECO REAL FEEL, once optimal comfort is reached, PAC automatically modulates compressor action and air flow, to keep it over time. To activate the function, press the ECO REAL FEEL button (D9). The ECO REAL FEEL symbol (C9) appears.

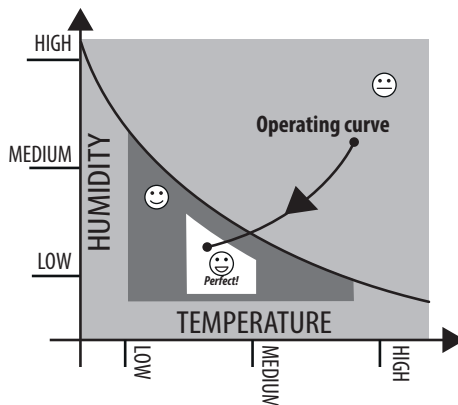

The "ECO REAL FEEL" status indicator (C9) becomes white for approx. 1 min. to indicate that the appliance is checking the room conditions. After a while the "ECO REAL FEEL" status indicator (C9) changes colour as it approaches comfort conditions (see graph below).



ORANGE LIGHT: Room conditions far from optimal level.



GREEN LIGHT: Most people feel good room conditions, near optimal level.



BLUE LIGHT: Best comfort level.

Perfect!

- The well-being feeling is a subjective condition. For this reason, different people may judge differently the same environmental conditions.
- In particularly severe environmental conditions (large size of the environment, high temperature or humidity outside, poor insulation of the room, too many of people or strong heat load in the room, strong exposure to the sun ...) this device may not be able to reach the best comfort level.

SELF-DIAGNOSIS


The appliance has a self diagnosis system to identify a number of warning/malfunctions. Error messages are displayed on the appliance display.

IF ... IS DISPLAYED,	IF ... IS DISPLAYED,	IF ... IS DISPLAYED,	IF ... IS DISPLAYED,	IF ... IS DISPLAYED,	IF ... IS DISPLAYED,
Lt	Lh	F1 ⚠	F2 ⚠	PF ⚠	HL ⚠
"Low Temperature" (Frost prevention)	"Low humidity"	Failure 1	Failure 2	"Probe Failure" (Probe damaged)	"High Level" (Internal tray full)
..WHAT SHOULD I DO?	..WHAT SHOULD I DO?	..WHAT SHOULD I DO?	..WHAT SHOULD I DO?	..WHAT SHOULD I DO?	..WHAT SHOULD I DO?
The appliance is fitted with a frost protection device to avoid excessive formation of ice. The appliance starts up again automatically when the defrosting process is completed.	This message will only be displayed when in Real Feel function, indicating that the room humidity level is extremely low. To resume operation, switch the unit to any other mode other than the Real Feel function.	If this appears, consult the nearest authorised service centre.	If this appears, consult the nearest authorised service centre.	If this is displayed, contact our toll free customer service number.	Empty the internal safety tank following the instructions in the section "End of season operations"

TIPS FOR CORRECT USE

To ensure optimal results from your air conditioner, follow these recommendations:

- close the windows and doors in the room to be air conditioned. When installing the air conditioner semi-permanently, you should leave a door slightly open (as little as 1 cm) to guarantee proper ventilation.
- Never use the appliance in very damp rooms (laundries for example).
- Protect the room from direct exposure to the sun by partially closing curtains and/or blinds to make the appliance much more economical to run.
- Never use the appliance outdoors.
- Make sure there are no heat sources in the room.
- Make sure the air conditioner is standing on a level surface.

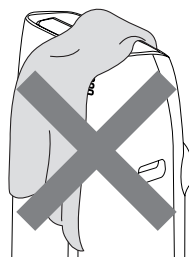

do not cover the appliance

- Never rest objects of any kind on the air conditioner.
- Never obstruct the air intake or outlet flap.

CLEANING

Before cleaning or maintenance, turn the appliance off by touching the  button, then unplug from the outlet.

CLEANING THE CABINET

You should clean the appliance with a slightly damp cloth then dry with a dry cloth. For safety reasons, never wash the air conditioner with water.

Attention! Never use petrol, alcohol or solvents to clean the appliance. Never spray insecticide liquids or similar.

CLEANING THE AIR FILTER OR SILVER IONS AIR FILTER (only in some models)

The silver ions filter helps capture dust and pollen and helps reduce the growth of bacteria and mold on the filter.

If the filter is dirty, air circulation is compromised and the efficiency of the appliance decreases. It is therefore good practice to clean the filter at regular intervals. The frequency depends on the duration and conditions of operation. If the unit is used constantly or systematically, you are recommended to clean the filter once a week.

The filter is housed in the intake grille.

To clean the filter, extract as shown in fig. 11.

Use a vacuum cleaner to remove the dust collected on the filter. If it is very dirty, immerse in warm water and rinse a number of times. The water should never be hotter than 40°C.

After washing the filter, allow it to dry completely before repositioning it.

START OF SEASON CHECKS

Make sure the power cable and plug are undamaged and the earth system is efficient.

Follow the installation instructions precisely.

END OF SEASON OPERATIONS

To drain all water from the circuit, remove the external cap by unscrewing it in the anticlockwise (fig. 12) direction and allow the water to drain out into a basin.

When the appliance is empty, replace the caps.

Clean the filter and dry thoroughly before putting back.

TECHNICAL SPECIFICATIONS

Power supply voltage see rating label

Max. absorbed power

during air conditioning

Refrigerant

Cooling capacity

"

"

"

LIMIT CONDITIONS

Room temperature for air conditioning

18° ÷ 35°C

Transport, filling, cleaning, recovery and disposal of refrigerant should be performed by a technical service centre appointed by the manufacturer only.

The appliance should be disposed of by a specialist centre appointed by the manufacturer only.

Attention! TO AVOID DAMAGE TO THE UNIT:

NEVER TRANSPORT OR TURN THE APPLIANCE UPSIDE DOWN OR ON ITS SIDE. IF THIS OCCURS, WAIT 6 HOURS BEFORE TURNING THE APPLIANCE ON, 24 HOURS IS RECOMMENDED. After the unit has been on its side, oil needs to return to the compressor to ensure proper function. Without allowing the unit this time (6-24 hours) the unit may function for only a short time, and then the compressor will break down from lack of oil.

TROUBLESHOOTING

Check the following points before calling the authorised Technical Service Centre in your area.

PROBLEMS	CAUSES	SOLUTIONS
The local air conditioner does not turn on	It is not plugged in	plug it in
	there is no power	wait
	the internal protection device was triggered	call the help centre
The local air conditioner works for a short period of time	the air exhaust hose is obstructed or bent	correctly position the air exhaust hose, limiting the length and curves as much as possible and avoiding any obstructions
	an obstruction is impeding air exhaust outside	identify and remove the obstacles that impede air exhaust outside
The local air conditioner runs but does not cool the room	windows, doors, drapes open	close the windows, doors and drapes, keeping in mind the "recommendations for proper use"
	there is some heat source in the room (oven, hair dryer, etc.)	eliminate the heat source
	the air exhaust hose is disconnected from the appliance	attach the air exhaust hose to the housing on the back of the appliance (fig.1)
	dust filters clogged	clean or replace the filters as previously described
	the technical characteristics of the appliance are not suitable for cooling the room where it is located	
During operation there is an unpleasant odour in the room	dust filters clogged	clean or replace the filters as previously described
The local air conditioner does not work for about 3 minutes from restart	to protect the compressor there is an internal device that delays startup for about 3 minutes from restart	wait; this time delay from restart is normal
One of the following messages appears on the display: <i>Lt/Lh/HL/PF/F1/F2</i>	the appliance has a self-diagnosis system that identifies some operating errors	refer to the SELF-DIAGNOSIS chapter