

## 1. GENERAL FEATURES

Remove the appliance from the packaging, turn upside down and rest on the polystyrene. Check that neither the appliance nor the power cable has been damaged in any way during transportation. Do not operate the appliance if damaged.

## 2. FITTING THE WHEELS

Remove the feet and the castors from the polystyrene packing. Fit the castors to the spindles on the feet and push firmly until they click into position (fig. 1). Pull each castor to check that it is fitted correctly. Fit the feet to the bottom of the radiator using the threaded bar and wing nut provided. Fit only between the external elements as shown in figures 2, 3 and 4.

### Models with "Easy wheel" system

Turn the radiator upside-down on a rug or a soft surface in order to prevent damaging the paint finish. Fully unfold the castors by turning them outwards (Fig. 5).

Turn the radiator back to its upright position.

## 3. ELECTRICAL CONNECTION

- Before plugging the radiator into the mains, check that the voltage of your mains electricity supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriately dimensioned.
- CONNECT THE RADIATOR TO EFFICIENTLY EARTHED SOCKETS ONLY
- This appliance complies with EEC Directive 89/336 and D.M. 476/92, relating to electromagnetic compatibility.

## 4. INSTRUCTIONS FOR USE

### Switching on

Plug into the mains. Turn the thermostat as far as it will go to maximum position. Turn the radiator on using the switch following the procedure described below.

- Place the switch in the "**MIN**" position to select minimum power.
- Place the switch in the "**MED**" position to select medium power.
- Place the switch in the "**MAX**" position to select maximum power.
- Place the switch in the "☼" position to select turbo heating.
- Place the switch in the "☼" + "**MAX**" position to select turbo heating + maximum power.
- Place the switch in the "**0**" position to turn the appliance off.

### Adjusting the thermostat

When the room has reached the required temperature, slowly turn the thermostat until the indicator light goes off (or to the position marked by a click) and no further. The set temperature will then be regulated automatically and kept constant by the thermostat.

### Frost prevention mode

With the thermostat in the ☼ position and the switch in any position other than 0, the appliance maintains the room at a temperature of about 5°C, preventing freezing with minimum energy consumption.

### TURBO HEATING

The appliance has a fan heater which heats the room more quickly. Place the switch in the "☼" or "☼" + **MAX** position.

**Important:** A safety device trips and turns the appliance off in the event of overheating due to an accumulation of dust on the air intake and output grills. To reset, unplug the appliance from the mains socket and leave to cool down. Clean the air intake and output grills with a vacuum cleaner, then replug into the mains and turn on again.

## 5. MAINTENANCE

Before carrying out any operation on the radiator, unplug from the electric mains and wait for it to cool. The oil-filled electric radiator requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrations of dirt using a vacuum cleaner.

## 6. IMPORTANT



**WARNING:** In order to avoid overheating, never under any circumstances cover the appliances during operation, as this would lead to dangerous overheating.

The appliance is fitted with a **safety device** which will switch off it in case of accidental overheating. To reset, disconnect the plug from the power for 30 minutes, remove the cause of overheating then plug the appliance in again.

**ATTENTION:** in order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.

- Never use the radiator near a bath, shower, basin or swimming pool.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Never use the radiator to dry damp garments. Never rest the cable on hot elements.
- Use the radiator in the vertical position only.
- If the electric cable has been damaged, it must be replaced by the manufacturer or the technical service centre or by a qualified person so as to avoid all risks.
- When you start the radiator for the first time, leave it operating at maximum power for at least two hours. During this operation, ventilate the room well to eliminate the "new" smell emanating from the appliance.
- It is normal for the appliance to emit a squeaking noise when turned on for the first time.
- The appliance must never be placed immediately under a fixed mains socket.
- This radiator is filled with a precise quantity of oil and repairs which require it to be opened must be carried out exclusively by the manufacturer or an authorised service centre. In the case of oil leaks, contact the manufacturer or the authorised service centre.
- When scrapping the appliance, respect legislation on the disposal of oil.
- Do not use the appliance in rooms with a base area of less than 4 m<sup>2</sup>.



### Disposing of the appliance

In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

## AFTER-SALES SERVICE

### Before contacting the Customer Care Centre:

Turn the appliance off and restart it to see if the fault persists.

**If after carrying out the above checks, the fault persists, contact the Customer Care Centre.**

Please give:

- a short description of the fault;
- the exact model of the air conditioner;
- the service number (this is the number found after the word Service on the rating plate), located on the back of the appliance. The service number can also be found in the warranty booklet;

- your full address;
- your telephone number.

If repair work has to be carried out, contact the **Customer Care Centre** (Use of original spare parts and a proper repair is guaranteed).

You will need to present the original invoice.

**Failure to comply with these instructions could compromise the safety and quality of your product.**

**SERVICE** 0000 000 00000

