

## IMPORTANT WARNINGS

### Safety warnings

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance. **CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**
- **WARNING:** In order to avoid overheating, never under  any circumstances cover the appliances during operation, as this would lead to dangerous overheating.
- The body of this radiator is filled with

a precise quantity of special oil, so that repairs requiring the opening of the oil body must only be made by the service agent. Any oil leakage must be reported to the Customer Experience, see enclosed guarantee for details.

- The appliance must not be located immediately below a fixed socket-outlet.
- Do not use the heater in the vicinity of bathtubs, wash basins, showers, sinks and swimming pools.
- If the power cable has been damaged, it must be replaced by the manufacturer or the technical service centre or by a qualified person so as to avoid all risks.
- **ATTENTION:** in order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.



### **Danger of burns!!**

Failure to observe the warning could result in burns or scalds.

- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of the heater.



### **Please note:**

This symbol indicates recommendations and important information for the user.

- Never use the heater to dry laundry.
- Never place the power cable on top of the heater while it is hot.
- We recommend that you not place the heater in a draught, because strong draughts of air may adversely affect the equipment's operational efficiency.
- Only use the heater in an upright position.
- The heater must be positioned at least 50cm from furniture or other objects.
- The first time you use the appliance, operate it of at least 15 minutes with the thermostat at maximum to eliminate the "new" smell.

A little smoke due to the protective substances applied to the heating element before transport may be given

off.

- Do not obstruct the hot air outlet grilles or the air intake grille on the bottom of the appliance.
- Position the appliance so that the plug and the outlet can be easily reached even after installation.
- Do not use the appliance in rooms less than 4 m<sup>2</sup> in area.
- The appliance is fitted with a safety device which will switch off it in case of accidental overheating.  
To reset, please contact Customer Experience, see enclosed guarantee.

**CE** The appliance complies with the following EC directives:

- Low Voltage Directive 2006/95/EC and subsequent amendments;
- EEC Directive 2004/108 on electromagnetic compatibility (EMC) and subsequent amendments;

### Disposing of the appliance



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

## INTRODUCTION

Thank you for choosing a De'Longhi product.

Please take a few moments to read the instructions to avoid risks or damage to the appliance.

## DESCRIPTION

- A** Thermostat
- B** Power selector
- C** Indicator light

## Connection

- Before using the appliance check that your supply voltage is the same of that shown on the rating label of the unit and that the power socket and power supply line correspond to the load specified.
- CONNECT YOUR HEATER TO EARTH PROVIDED SOCKET ONLY.
- This appliance complies with directive 2004/108/ec on electromagnetic compatibility.  
Keep loose clothing or bedding, furniture and flammable material away from the heater's wall outlet.

## USE


Remove the appliance from the packaging, turn upside down and rest on the polystyrene.

Check that neither the appliance nor the power cable has been damaged in any way during transportation.

Do not operate the appliance if damaged.

## Fitting the wheels

Remove the feet and the castors from the polystyrene packing. Fit the castors to the spindles on the feet and push firmly until they click into position (fig. 1). Pull each castor to check that it is fitted correctly. Fit the feet to the bottom of the radiator using the threaded bar and wing nut provided. Fit only between the external elements as shown in figures 2, 3 and 4.

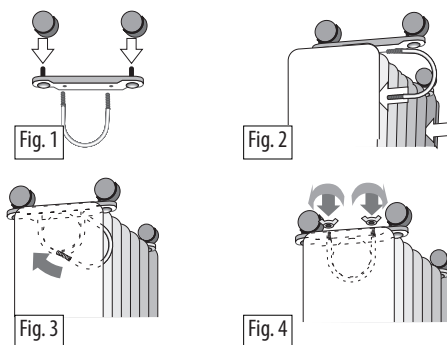

## Models with "Easy wheel" system

Turn the radiator upside-down on a rug or a soft surface in order to prevent damaging the paint finish. Fully unfold the castors by turning them outwards (Fig. 5).

Turn the radiator back to its upright position.





## Instructions for use

### Switching on

Plug into the mains. Turn the thermostat as far as it will go to maximum position. Turn the radiator on using the switch following the procedure described below.


- Place the switch in the "MIN" position to select minimum power.
- Place the switch in the "MED" position to select medium power.

- Place the switch in the "MAX" position to select maximum power.
- Place the switch in the  position to select turbo heating.
- Place the switch in the " + MAX" position to select turbo heating + maximum power.
- Place the switch in the "0" position to turn the appliance off.



### Adjusting the thermostat

When the room has reached the required temperature, slowly turn the thermostat until the indicator light goes off (or to the position marked by a click) and no further. The set temperature will then be regulated automatically and kept constant by the thermostat.

### Frost prevention mode

With the thermostat in the  position and the switch in any position other than 0, the appliance maintains the room at a temperature of about 5°C, preventing freezing with minimum energy consumption.

### Turbo heating

The appliance has a fan heater which heats the room more quickly. Place the switch in the " or " + MAX" position. Important: A safety device trips and turns the appliance off in the event of overheating due to an accumulation of dust on the air intake and output grills. To reset, unplug the appliance from the mains socket and leave to cool down. Clean the air intake and output grills with a vacuum cleaner, then replug into the mains and turn on again.

## MAINTENANCE

Before carrying out any operation on the radiator, unplug from the electric mains and wait for it to cool. The oil-filled electric radiator requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrations of dirt using a vacuum cleaner.

## TECHNICAL CHARACTERISTICS

Power supply	See rating plate
Absorbed power	"