

IMPORTANT SAFEGUARDS

When using any electrical appliance, some basic safety precautions should always be observed to reduce the risk of fire, electric shock, and/or injury to persons. Read all instructions carefully before using the appliance. Specifically:



Danger!

Failure to observe the warning may result in life threatening injury by electric shock.

- The appliance must not be placed immediately under a fixed power socket.
- Do not use the appliance outdoors.
- This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. Never position the appliance where it may fall into a bathtub or come in contact with water.
- If the power cable is damaged, stop using the product. Power cable must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.



Important!

Failure to observe the warning could result in injury or damage to the appliance.

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children

should be supervised to ensure that they do not play with the appliance.

- **CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**

- The internal parts of the appliance can become very hot or produce sparks during operation. Do not use the appliance in areas where gasoline, paints, or other flammable liquids are used or stored.
- This heater is filled with a precise quantity of special oil. Repairs requiring opening of the oil container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak; when scrapping the heater, follow the regulations concerning the disposal of oil.
- **ATTENTION:** To avoid the safety system resetting accidentally, this appliance must not be powered through an external on/off device such as a timer, or connected to a circuit which is turned off and on regularly by the energy supplier.
- Do not use the appliance in small rooms when they are occupied by persons that are not capable of leaving the room, unless constant supervision is provided.
- Always disconnect the plug from the power outlet when the appliance is not in use.
- Do not wrap the cord around the appliance immediately after use.
- When the appliance is in use unwrap the cord from the cord holder.

- The appliance must not be located immediately below a fixed socket-outlet.



Danger of burns!!

Failure to observe the warning could result in burns or scalds.

- **WARNING:** To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature, and risk of fire. Do not use the appliance on soft surfaces, such as beds, where the openings may become blocked.
- Do not run the power cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Keep the cord away from any passageways where it could be tripped over.



Please note:

This symbol indicates recommendations and important information for the user.

- Always use the appliance in an upright position.
 - Do not use this appliance with an extension cord or outlet strip. Connect the appliance directly to a suitable outlet.
 - Make sure that the plug is fully inserted into the outlet. Wall outlets may deteriorate with time, so check the plug periodically for signs of overheating or deformation. If the outlet has deteriorated, stop using it and have it repaired.
 - To prevent burns, do not touch hot surfaces with bare skin. Use the handle when moving the appliance. Keep all flammable materials, such as furniture, pillows, bedding, paper, clothing, and curtains at least 90 cm (3 feet) from the front and top of the appliance
- also avoid contact with the sides and back.
 - Do not use the appliance in rooms with a floor area of less than 4m².
 - Before putting the appliance away, make sure it is completely off and unplugged from the mains socket. Wrap the cable around the base. Do not store in dusty atmospheres.
 - Do not rest anything on the appliance.
 - Do not use the appliance to dry laundry. Do not obstruct the air intake and outlet grilles (danger of overheating).
 - Do not use the appliance near walls, furniture, curtains, etc.
 - Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
 - Never place the power cable on top of the heater while it is hot.
 - We recommend that you not place the heater in a draught, because strong draughts of air may adversely affect the equipment's operational efficiency.
 - The first time you use the appliance, operate it of at least 2 hours with the thermostat at maximum to eliminate the "new" smell. A little smoke due to the protective substances applied to the heating element before transport may be given off.
 - Position the appliance so that the plug and the outlet can be easily reached even after installation.
 - The appliance is fitted with a safety device which will switch off it in case of accidental overheating. To reset, please contact Customer Experience, see enclosed guarantee.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

DESCRIPTION

- A display
- B on-standby button
- C increase button
- D decrease button
- E power button
- F eco button
- G timer button
- H cord holder
- I wheel

 
USE

"Easy wheel" system

Turn the radiator upside down on a rug or a soft surface in order to prevent damaging the paint finish.

Fully unfold the wheels by turning them outwards (Fig. 1).

Turn the radiator back to its upright position.

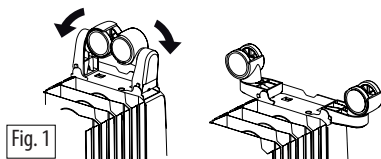


Location

The heater must not be placed immediately below a power outlet. Do not use this radiator in rooms having a surface area of less than 43 square feet (4 sq.m.).

Power connection


- Before using the appliance check that your supply voltage is the same of that shown on the rating label of the unit and that the power socket and power supply line correspond to the load specified.
- Check also the current capacity of your fuses. **CONNECT YOUR HEATER TO EARTH PROVIDED SOCKET ONLY.**
- This appliance complies with directive 2004/108/ec on electromagnetic compatibility.




Plug in the heater, the appliance will be set in the stand-by condition. The display will show the  symbol. Keep loose clothing or bedding, furniture and flammable material away from the power outlet where the heater is plugged in. After

 
an interruption of the power supply (power failure or appliance unplugged) the unit goes always to stand-by.

Heating function

To turn the appliance on, press the  (B) button.

Press button  (E) to set the required power level:


MIN (); MED (); MAX (). To select the desired temperature, press button + or - (C or D). By pushing the + or - button once, the temperature (shown on the display) will increase or decrease by 1°C (34°F). Keeping the + or - button depressed the value will increase or decrease rapidly.

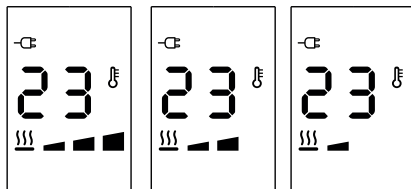

The appliance allows to set the temperature from 5°C (41°F) to 28°C (82°F).


Anti-freeze function

 
Setting the temperature to 5°C (41°F) with the "-" button, the appliance will activate the Antifreeze function.

The display will show the  symbol, in this way the appliance will turn on automatically, at the max power, only if the room temperature falls below 5°C (41°F). If you wish to go back to the Heating function, press the "+" button once. After an interruption of the power supply (probe failure or appliance unplugged) the unit goes always to stand-by.

Eco function

When this function is active the appliance automatically sets the most appropriate power level to guarantee optimum comfort while reducing energy consumption.

 To activate this function press the "ECO" (F) button. The display will show  symbol. If the selected temperature is much higher than the actual room temperature, the appliance will start automatically and rapidly to heat the room. The appliance will automatically select the most convenient power level (**MAX-MED-MIN-OFF**).

If **MAX** power level has been selected using the  button, the appliance will cycle between: **MAX-MED-MIN-OFF**. If **MED** power level has been selected, the appliance will cycle between: **MED-MIN-OFF**.

If **MIN** power level has been selected, the appliance will cycle between: **MIN-OFF**.

Working indicator

The symbol  indicates the heating status by means of its colors.


 **RED:** the unit is heating at the maximum power.

 **ORANGE:** the unit is heating at the medium power.

 **GREEN:** the unit is heating at the minimum power.



 **absent:** the unit is not heating.


Key lock

 
In order to avoid accidental operation, you can lock the keyboard using the keylock function. To activate this function during on mode, press buttons + and - together for at least 3 seconds. The display shows the symbol  and a double acoustic signal will be emitted. To deactivate the function proceed in the same way.


 
Timer function



This function can be activated in two different ways.

Delayed start: With the appliance in standby mode, press the timer button (G) . The hours left before the appliance comes on is displayed together the  symbol and "h" symbol flashing. Change the hours using the + and - buttons, then wait a few seconds for the program to be stored.

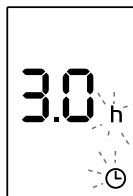 
The display will return to off and the  symbols remains on. When the programmed time has elapsed, the appliance will come on with the previous settings.



Delayed stop: with the appliance on, press the timer button . The hours left before the appliance goes to standby mode, the power level and in case the function selected are displayed together with the  symbol and "h" symbol flashing. Change the hours using the + and - buttons, then wait a few seconds for the program to be stored.

The current settings and  symbol are displayed. At the end of the set time the appliance switches to standby mode automatically. To go back to operating without the timer, press the timer button twice. The timer symbol  disappears from the display.

 **Please note:** the time is settable from 0.5 to 24 hours.

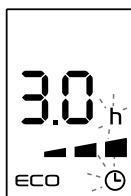

Change of the temperature scale

The display can show the temperature in both °F and °C.

 
To select the desired temperature scale, when the unit is in standby position, press and hold the "+" and "ECO" keys for at least 10 seconds, then release.

The change of scale will be indicated by two short beeps.

Brightness of the display

The appliance allows two different brightness settings for the display. The highest is active when any key button is pressed. After a few seconds of key board inactivity, the brightness will decrease to the operating brightness level. This lower level can be adjusted in this way:

- with the appliance in on mode after pressing for 5 seconds the ECO button the display will show:

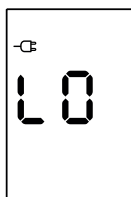

- With the + and - button is possible to select the desired brightness (three brightness levels available).
- After 5 seconds without to press any button, the brightness level will be memorized and the operating conditions will be the same ones previously set.

Alarms

The appliance has a diagnostic system that makes it possible to signal malfunctions.

In case of problems, the display will show an alarm message:

- **P.F** (Probe Failure) blinking
With this alarm the appliance does not operate. Contact the De'Longhi Customer Service.

- **H.E** (High temperature)
When the product's internal temperature is too high, the heating power will progressively and automatically be reduced. The display shows **H.E** for two seconds, blinking. To remove the cause of this alarm check that the unit is not covered and let the appliance cool down.

SAFETY DEVICE

A safety device switches the heater off in the event of overheating.

To restart the heater, call the De'Longhi Customer Service.

MAINTENANCE

Always remove the plug from the power outlet and allow the radiator to cool. Wipe radiator with a soft damp cloth, do not use detergents and abrasives. Should the radiator not be in use over a certain length of time, wind the cord around the cord holder and store it in a dry place. This appliance has been built to give many years of trouble free service.

In case of malfunction or doubt, do not try to repair the heater by yourself: this may result in a fire hazard or electric shock. Call the De'Longhi Customer Service (see attached list of De'Longhi Customer Service).

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The display doesn't work	Be sure it is plugged in and that the electrical outlet is working	Plug into the power outlet
	The safety device may have switched off the appliance	Remove the obstruction and let the appliance cool down. If the appliance doesn't work please contact the De'Longhi Customer Service
The appliance doesn't warm up	The temperature may be set too low	Set the temperature to a higher value
The display shows: P.F. blinking	It indicates that the room temperature sensor has failed	Please contact the De'Longhi Customer Service
The display shows: H.L. (High temperature) blinking	The unit has reached a too high internal temperature	Check that the unit is not covered and let the appliance cool down. When the product internal temperature decreases, the alarm will disappear. If the appliance doesn't work please contact the De'Longhi Customer Service