

DESCRIPTION

(see figure on pag. 3).

- A** Thermostat
- B** Switches
- C** Comfortemp button
- D** Cord holder
- E** Wheel

USE

“Easy wheel” sytem

Turn the radiator upside-down on a rug or a soft surface in order to prevent damaging the paint finish.

Fully unfold the castors by turning them outwards (Fig.6).

Turn the radiator back to its upright position.



Important!

When in use, the radiator should always be kept vertical (wheels at the bottom, controls at the top). Any other position could be dangerous!

Electrical connection

- Before plugging the radiator into the mains, check that the voltage of your mains electricity supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriately dimensioned.
- CONNECT THE RADIATOR TO EFFICIENTLY EARTHED SOCKETS ONLY.

INSTRUCTIONS FOR USE

Switching on

Insert the plug, turn the thermostat dial clockwise to maximum. Turn on both switches. The lights on the switches remain on irrespective of the cycle set by the thermostat. When the room reaches the required temperature, turn the dial anticlockwise slowly until you hear a click. The appliance will come on and go off automatically to maintain the required temperature.

Economiser


For economy of use, the switches can be used singly:

- button in position «**MIN**» only = minimum power (light


on)

- button in position «**MED**» only = medium power (light on)
- buttons in both positions «**MIN**» and «**MED**» = maximum power (lights on)

Using the thermostat

The thermostat operates on the basis of room temperature and not radiator temperature. Turn the thermostat dial anti-clockwise towards the lower numbers to reduce the temperature; turn it clockwise towards the higher numbers to raise the temperature. To turn the appliance off completely, turn the thermostat to minimum  and unplug from the mains.

Frost protection function

With the thermostat in position  and the switches pressed, the appliance maintains the room at a temperature of about 5°C, preventing freezing with minimum energy consumption.

COMFORTEMP BUTTON

With the “COMFORTEMP” button and both switches pressed, the appliance is automatically set to reach and maintain what is considered to be the comfort temperature.

A green light comes on to indicate activation of “COMFORTEMP”. In this mode the temperature is automatically set only by the “COMFORTEMP”. To deactivate this mode and return to thermostat operation, press the COMFORTEMP button again (the green light goes off).

MAINTENANCE

Before carrying out any operation on the radiator, unplug from the electric mains and wait for it to cool. The oil-filled electric radiator requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrations of dirt using a vacuum cleaner.

TECHNICAL CHARACTERISTICS

Supply voltage	See rating label
Absorbed power	“

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	Be sure it is plugged in and that the electrical outlet is working.	Plug into the power outlet.
	Check for any obstruction.	Remove the obstruction and let the appliance cool down. If the appliance doesn't work please contact Customer Experience.
	The temperature may be set too low.	Set the temperature to a higher position.