

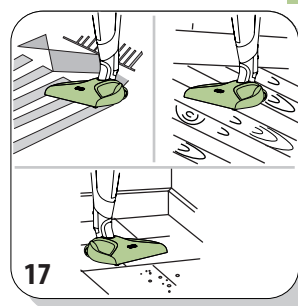


READY





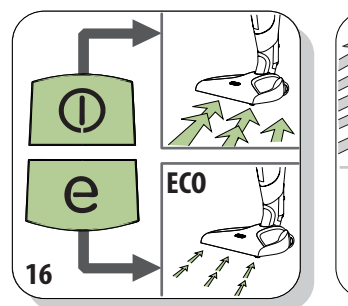


14

Use







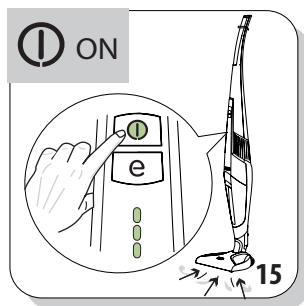


Operating time

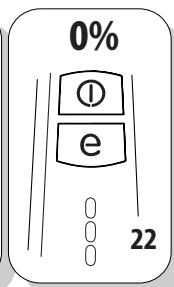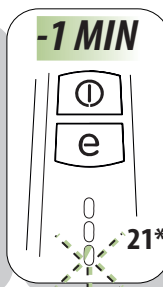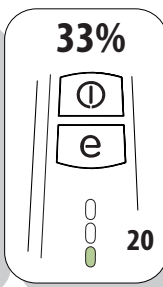
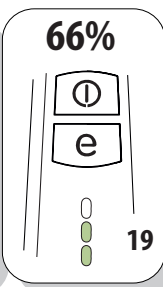
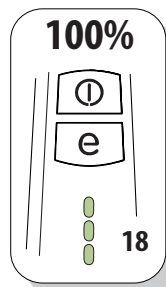


* Some models only




Emptying

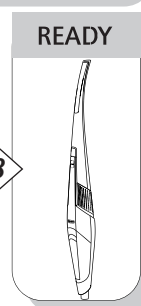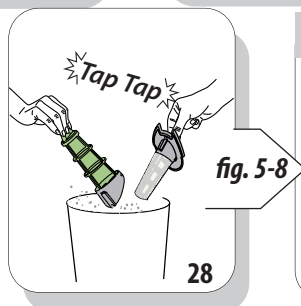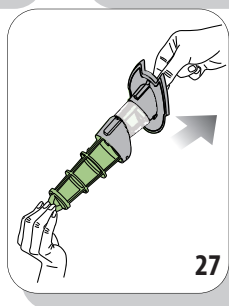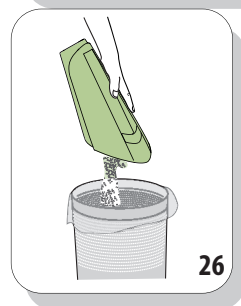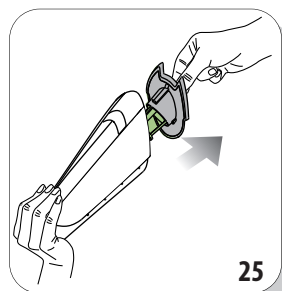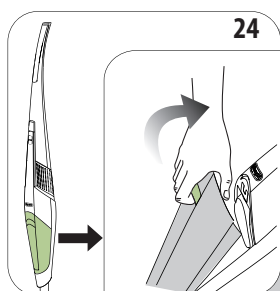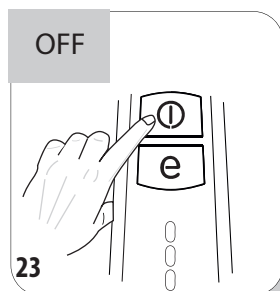

Cleaning

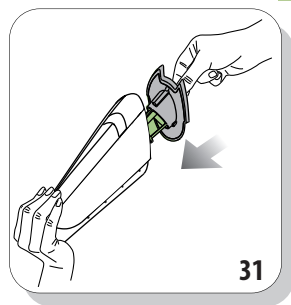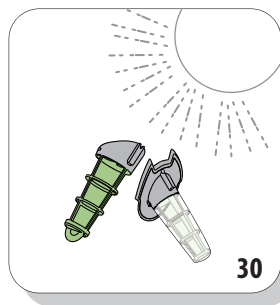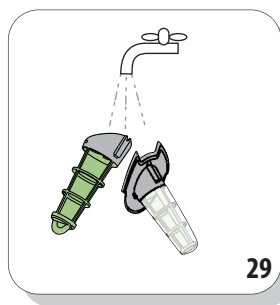

Removing the battery

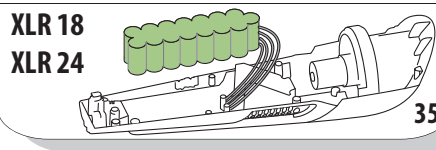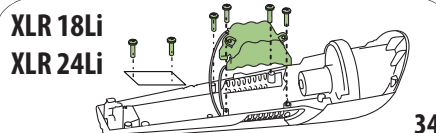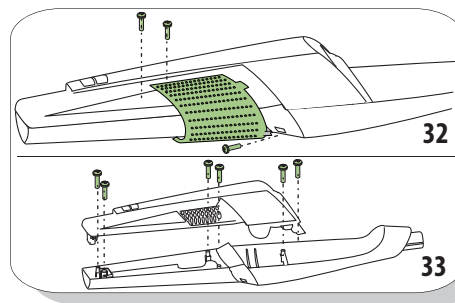

Fundamental safety warnings

- Read the instructions carefully. The appliance should be used for domestic cleaning only following these instructions and only with the tools supplied. The manufacturer declines all liability for damage deriving from improper use of the appliance, for example to vacuum up rubble, ash, etc.



Important!

- Before starting the appliance, make sure the filters are in position.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children

shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Check the filters regularly and if necessary brush or replace them.
- Keep the suction outlet away from eyes, ears, nose etc when the appliance is in operation.
- Never vacuum up matches, or cigarette ends when still lit.
- Never immerse the appliance or battery charger in water or other liquid. Do not splash water on the appliance or battery charger.
- This is a household appliance only.

It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

- The manufacturer reserves the right to modify appliances and tools without warning.

Original spare parts and tools should always be used to maintain the efficiency of your appliance and avoid invalidating the guarantee.

Use



Please note:

To avoid damage to the motor, never operate the appliance without filters.

Charging the batteries

IMPORTANT: Use the original battery charger supplied with the appliance only. Do not charge the appliance in temperatures of less than 0°C or more than 40°.



Please note:

Before using the appliance for the first time, the battery must be charged for the following times depending on the model:

- **XLR 18** and **XLR 24**: 12 hours
- **XLR 18Li** and **XLR 24Li**: 2.30 hours

While being charged, the appliance cannot be used.

At the end of the charging cycle, all three LEDs are lit. When the battery is completely flat, the three LEDs flash and the appliance does not start up.

It is good practice to charge the appliance after each cleaning session to ensure it is always ready for use with the battery fully charged. The appliance can be left constantly in charge in complete safety. In the event of long absences (holidays...) it is best to unplug it. After each complete charge, the appliance operates for the following times, depending on the model:

Use

Model	Turbo	Eco
XLR18 / XLR 18 Li*	20 min	30 min
XLR 24	30 min	50 min
XLR 24Li *	22 min	35 min

* **This model has a quick charge function allowing it to operate for five minutes with 30 minutes charging.**

Replacing the batteries

When the batteries are exhausted, have them replaced by your local customer services. Do not use other types of batteries.

Disposing of the appliance



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

If you dispose of the appliance, you must remove the battery.

Never dispose of the battery with household waste. Take it to a special collection point for recycling.

Removing the batteries (see fig. 32 -35)

To remove the batteries, contact your local customer services or proceed as follows:

- Make sure the batteries are completely flat before removing.
- Remove the handle (A) by unscrewing the lock screw (C).
- Remove the dust container (J).
- Remove the grille (see fig. 32) and casing (see fig. 33).
- Model XLR 18Li - Model XLR 24Li:** unscrew the fixing screws (see fig. 34) and disconnect the battery.
- Model XLR 18 - XLR 24:** disconnect the battery and remove it (see fig. 35).



Important!

Make sure the appliance is not connected to the battery charger before removing the batteries.