

Warranty

We grant a **three-year warranty** from the date of purchase.

This product was manufactured using the latest production techniques and has undergone thorough quality control inspection. We guarantee that the product is in perfect condition.

We will remedy all defects in workmanship or materials within the warranty period. In order for the warranty to be granted, all warranty claims must be accompanied by proof of purchase from Tchibo or from an authorised Tchibo distribution partner.

If, contrary to our expectations, a defect is found, please contact our customer care service at the following e-mail address:

service@tchibo.de

Our customer consultants will be pleased to advise you on further procedure.

Damage due to improper use, as well as worn parts and consumables, are not covered by the warranty.


Please have the product number at hand in case of any queries.

This warranty does not restrict statutory warranty rights.

Product number: 363 625



Window Vacuum Cleaner

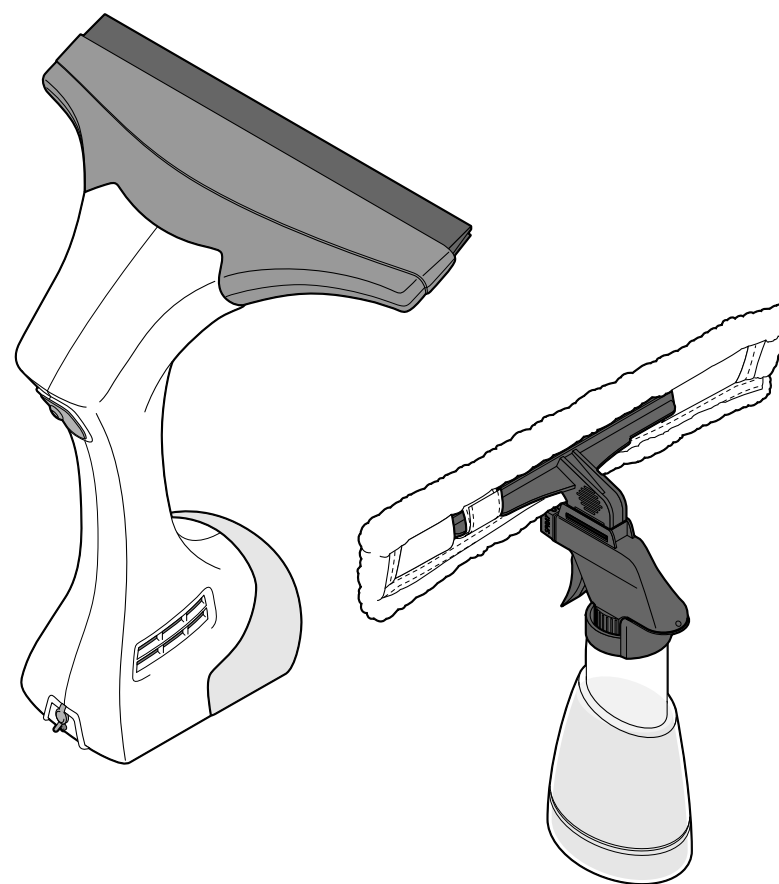

Dear Customer

Clean windows in the blink of an eye - without any streaks or droplets!

Clean the window with the spray bottle and its microfibre pad, and then simply pull the electric window vacuum cleaner over the window. The wide wiper edge ensures streak-free cleaning while the dirty water is vacuumed up into the tank, leaving no droplets.

We hope you will be fully satisfied with your purchase.

Your Tchibo Team



www.tchibo.de/instructions

(Please enter the product number in the box labelled "Bedienungsanleitungssuche" and click on "Suchen".)

Disposal

The product, its packaging and the built-in rechargeable battery have been manufactured from valuable materials that can be recycled.

Recycling reduces the amount of refuse and helps to preserve the environment.

Dispose of the **packaging** at a recycling point that sorts materials by type. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging.



Devices marked with this symbol must not be disposed of along with normal household refuse!

You are legally bound to dispose of old devices separately from household waste. Information about collection points where old devices can be disposed of free of charge is available from your local authorities.



Standard batteries and rechargeable batteries must not be disposed of along with household refuse!

You are legally bound to dispose of flat batteries and rechargeable batteries at a local authority collection point or to return them to a battery retailer.

Warning! This device contains a battery that for safety reasons is firmly built into the device and cannot be removed without destroying the casing. Improper disassembly leads to safety hazards. Therefore, bring the device intact to a collection point where the device and battery will be disposed of properly.

Technical specifications

Model: 363 625


Window vacuum cleaner

Water tank volume: approx. 150 ml


Width of the suction nozzle: approx. 25 cm

Suction power: max. 10 W

Sound level: <78 dBA at a distance of 30 cm

Protection class: III 

Protection type: IPX4

 
Rechargeable battery: lithium-ion battery / 3.7 V , 2200 mAh (non-replaceable)


Charging time: approx. 3-4 hours when fully discharged

Operating time: max. 40 minutes

Mains adapter model DK5-050-0600-EU

Input: 100-240 V ~ 50/60 Hz, 0.2 A

Output: 5 V  0.6 A

Protection class: II 

Protection type: IP20

Spray bottle

Filling volume: approx. 200 ml

Made exclusively for: Tchibo GmbH, Überseering 18,
22297 Hamburg, Germany

In the course of product improvement, we reserve the right to make technical and optical modifications to the product.



Contents

4 About these instructions

4 Safety warnings

7 At a glance (delivery contents)

8 Prior to first use

8 Charging the window vacuum cleaner's battery

9 Assembling the window vacuum cleaner

9 Filling and assembling the spray bottle

10 Use

10 Applying the cleaning solution

10 Vacuuming up dirty water

11 Emptying the water tank

12 Cleaning and storage

12 Cleaning the spray bottle

12 Cleaning the microfibre pad

12 Cleaning the window vacuum cleaner

13 Storing the vacuum cleaner

13 Problems / solutions

14 Technical specifications

15 Disposal

16 Warranty

About these instructions

This product is equipped with safety features. Nevertheless, read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage.

Keep these instructions for future reference. If you pass this product on to another person, remember to give them these instructions.

Symbols in these instructions:



This symbol warns you of the danger of injury.



This symbol warns you of the danger of injury caused by electricity.

The term **DANGER** warns of potential severe injury and danger to life.

The term **WARNING** warns of injury and severe material damage.

The term **CAUTION** warns of minor injury or damage.



This indicates additional information.

Safety warnings



Intended use

- The window vacuum cleaner is suitable for cleaning wet, smooth glass or mirror surfaces or tiles only. It is designed to vacuum a liquid quantity of up to 150 ml.
- Only use the window vacuum cleaner in combination with standard glass/window cleaning products. Never vacuum up methylated spirits, highly-concentrated alcohol solutions, foam cleaners, or any caustic or flammable chemicals, etc.

- The window vacuum cleaner is **not suitable** for vacuuming up dust or small objects!
- The product is suitable for private use and is not suitable for commercial purposes.

WARNING - hazards resulting from misuse

- Never vacuum up the following:
 - dry dust;
 - glowing ash, cigarette butts, matchsticks, etc.: fire hazard!
 - flammable or combustible materials;

4. Wipe off the handheld unit with a slightly dampened cloth. No moisture should get into the ventilation slots or the connection socket.
5. Leave all parts to dry completely before reassembling the window vacuum cleaner.

Storing the vacuum cleaner

- ▷ If necessary, charge the battery up before storing the appliance.
- ▷ Store the appliance in such a way that the rubber edge on the suction nozzle is not lying on a surface. This could damage the rubber edge and cause it to deform.


Problems / solutions

Not working. The window vacuum cleaner switches itself off.	• Is the battery flat? Is the red indicator light flashing on the appliance? Charge the battery.
The suction power is weak.	• Is the water tank full? Empty the dirty water once the MAX mark has been reached. • Is the suction nozzle blocked or dirty? Remove the blockage if necessary. • Is the battery sufficiently charged?
The surface has streaks after cleaning it.	• Is the wiper edge on the suction nozzle damaged or dirty?
Dirty water is leaking.	• Is the water tank full? Empty the dirty water once the MAX mark has been reached. • Have you moved the window vacuum cleaner horizontally or in a circular motion over the surface? Always hold the appliance upright and work from top to bottom.

Cleaning and storage

Cleaning the spray bottle

1. Open the Velcro® fastener and remove the microfibre pad from the holder.

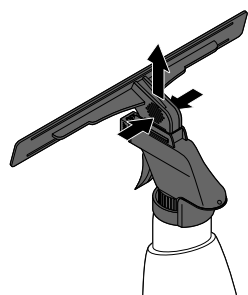

2. Press the ribbed areas on the sides and pull off the holder for the microfibre pad.

3. Unscrew the spray head from the bottle and rinse the bottle and all parts with clear water to remove any leftover cleaning solution.
4. Leave the parts to dry before putting the spray bottle back together and storing it away.

Cleaning the microfibre pad

- ▷ The microfibre pads can be washed in the washing machine at max. 40°C.
Take note of the care symbols on the sewn-in label.


Cleaning the window vacuum cleaner



DANGER - risk of fatal electric shock

- Do not immerse the handheld unit of the vacuum cleaner in water or other liquids. No moisture should get into the ventilation slots.
- Disconnect the appliance from the mains power if necessary and close the connection socket with its cover before cleaning the appliance.

The appliance must be switched off and disconnected from the mains power.

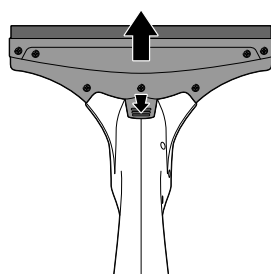

1. Remove the suction nozzle by pressing the ribbed area and pulling the suction nozzle smoothly off the handheld unit at the same time.

2. Rinse the suction nozzle off under running water. Then leave the nozzle to dry completely.
3. Empty and clean the water tank as described in the section "Emptying the water tank" in the chapter "Use".

- toner: fire or explosion hazard!
- caustic or toxic substances (e.g. acid, asbestos or asbestos dust, etc.): danger to health!
- sharp, hard objects such as shards of glass.

DANGER to children and people with restricted capabilities of operating appliances

- This appliance may be used by children aged 8 and over and by people with reduced physical, sensory or mental capacities or a lack of sufficient experience and/or knowledge, provided that they are supervised or have been trained in the safe use of the appliance and understand the potential dangers. Cleaning and maintenance must not be carried out by children without supervision. Children must not be allowed to play with the appliance.
- Keep the packaging material away from children. There is a risk of suffocation!

DANGER due to electricity

- While the window vacuum cleaner is suitable for vacuuming liquid, do not immerse it completely in water or any other liquids as there is otherwise a risk of electric shock.
- Only use the mains adapter provided to charge the product.

- Do not charge the product outdoors or in rooms with high humidity.
- Never touch the mains adapter with damp hands when plugging it in or unplugging it.
- The connecting cord of the mains adapter must not be kinked or squeezed. Keep the connecting cord away from hot surfaces and sharp edges.
- Keep sufficient distance to sources of heat such as hobs or ovens while the appliance is charging.
- Only connect the mains adapter to a properly installed wall socket with a voltage that complies with the technical specifications of the mains adapter.
- Ensure that the wall socket is easily accessible, so that the mains adapter can be disconnected quickly if need be. Route the connecting cord in such a way that no one can trip over it.
- Remove the mains adapter from the socket...
 - ... if disturbances occur while charging,
 - ... once the appliance is fully charged,
 - ... during thunderstorms and
 - ... before using or cleaning the appliance.Always pull on the mains adapter, not on the connecting cord.

- After charging, always close the connection socket with its cover.
- Disconnect the window vacuum cleaner from the mains power before using or cleaning the appliance.
- Do not use the window vacuum cleaner if the appliance itself or the mains adapter show any sign of damage or if the appliance has been dropped.
- Only use the window vacuum cleaner when it is fully assembled. The suction nozzle and water tank must be correctly inserted and locked in place.
- Do not make any modifications to the product. The rechargeable battery is firmly built into the window vacuum cleaner and cannot be replaced. Only have repairs to the appliance or the mains adapter carried out by a specialist workshop, or contact the customer service.
- Do not clean any electronic devices with the spray bottle. Do not aim it at people or animals.


WARNING – fire hazard

- The window vacuum cleaner contains a built-in lithium-ion rechargeable battery. The rechargeable battery must not be removed, taken apart, thrown into fire or short-circuited.


- Do not cover the ventilation slots on the side of the window vacuum cleaner while it is in use. Risk of overheating!
- Do not use the appliance in the vicinity of highly flammable materials. Do not vacuum up sharp-edged objects or highly flammable substances such as matches or ashes. Do not use the appliance to vacuum up small objects.

CAUTION – material damage

- The water tank is designed to hold approx. 150 ml. If the **MAX** mark is exceeded, dirty water may leak out. Therefore, check and empty the tank regularly while using the appliance.
- Protect the appliance from impacts, falls, dust, extreme temperatures and other weather conditions (rain, strong sunlight, etc.).
- Do not use the window vacuum cleaner on rough surfaces. Doing so could damage the rubber edges.
- Do not insert any objects into the openings on the appliance.
- Do not store the appliance outside or in rooms with high humidity, e.g. in the cellar or garage.
- Do not use abrasive or caustic products, or hard brushes, etc. for cleaning the appliance.
- Only use the original attachments.





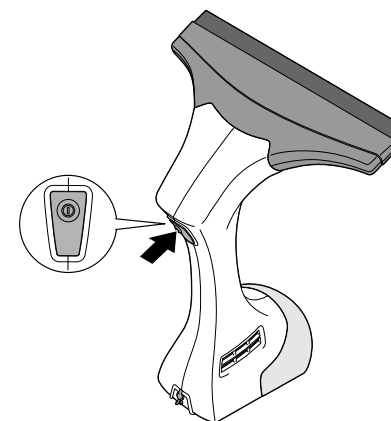


1. Place the window vacuum cleaner onto the damp surface with the handheld unit upright and press the on/off switch ① to switch the appliance on. The indicator light lights up red.
2. With a little pressure, pull the suction nozzle over the surface **from top to bottom** to wipe away the dirty water and vacuum it up at the same time. **Do not do any circular or horizontal motions** as otherwise the dirty water already collected in the water tank may leak out!
3. To switch the appliance off after use, press the on/off switch ①.

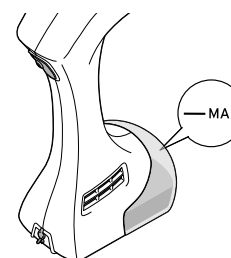


- ▷ Check regularly if the dirty water has reached the **MAX** mark on the water tank. If so, the water tank must be emptied.

Emptying the water tank

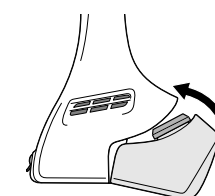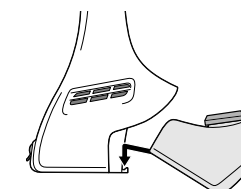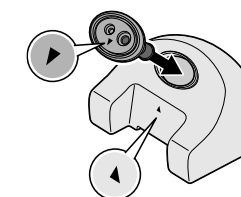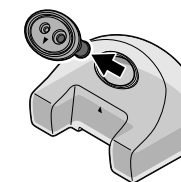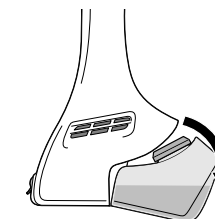

1. Tilt the water tank downwards at a slight angle to release it from the handheld unit.
2. Remove the cover and pour the dirty water away. Then briefly rinse the tank out with clear water.
3. Press the cover back onto the opening of the empty tank as far as it will go. The arrows must be facing each other.
4. Place the water tank onto the bottom of the handheld unit at a slight downward angle...
5. ... and press it upwards firmly onto the unit. You should hear and feel it click into place.

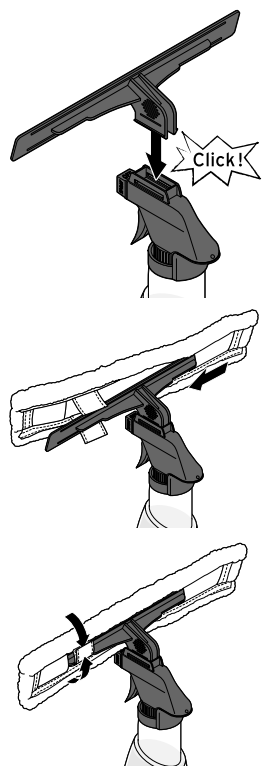


2. Fasten the holder for the micro-fibre pad onto the top of the spray head.

3. Slide both sides of the holder into the pockets of the micro-fibre pad...

... and close the Velcro® fastener.

Removing the holder

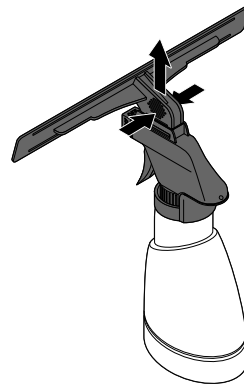

▷ Press the ribbed areas on the sides and pull the holder up and off.

Use

Applying the cleaning solution

1. With the spray bottle, spray the cleaning solution onto the surface you want to clean.

You can choose between a simple stream of water (**STREAM**) or a fine spray mist (**SPRAY**). Turn the nozzle on the spray head to the position you want to use.

In the **OFF** position the nozzle is closed.

2. In circular motions, wipe the micro-fibre pad over the whole surface to remove any dirt.


Vacuuming up dirty water



DANGER - risk of fatal electric shock

- Disconnect the appliance from the mains power if necessary and close the connection socket with its cover before switching on the appliance.

At a glance (delivery contents)

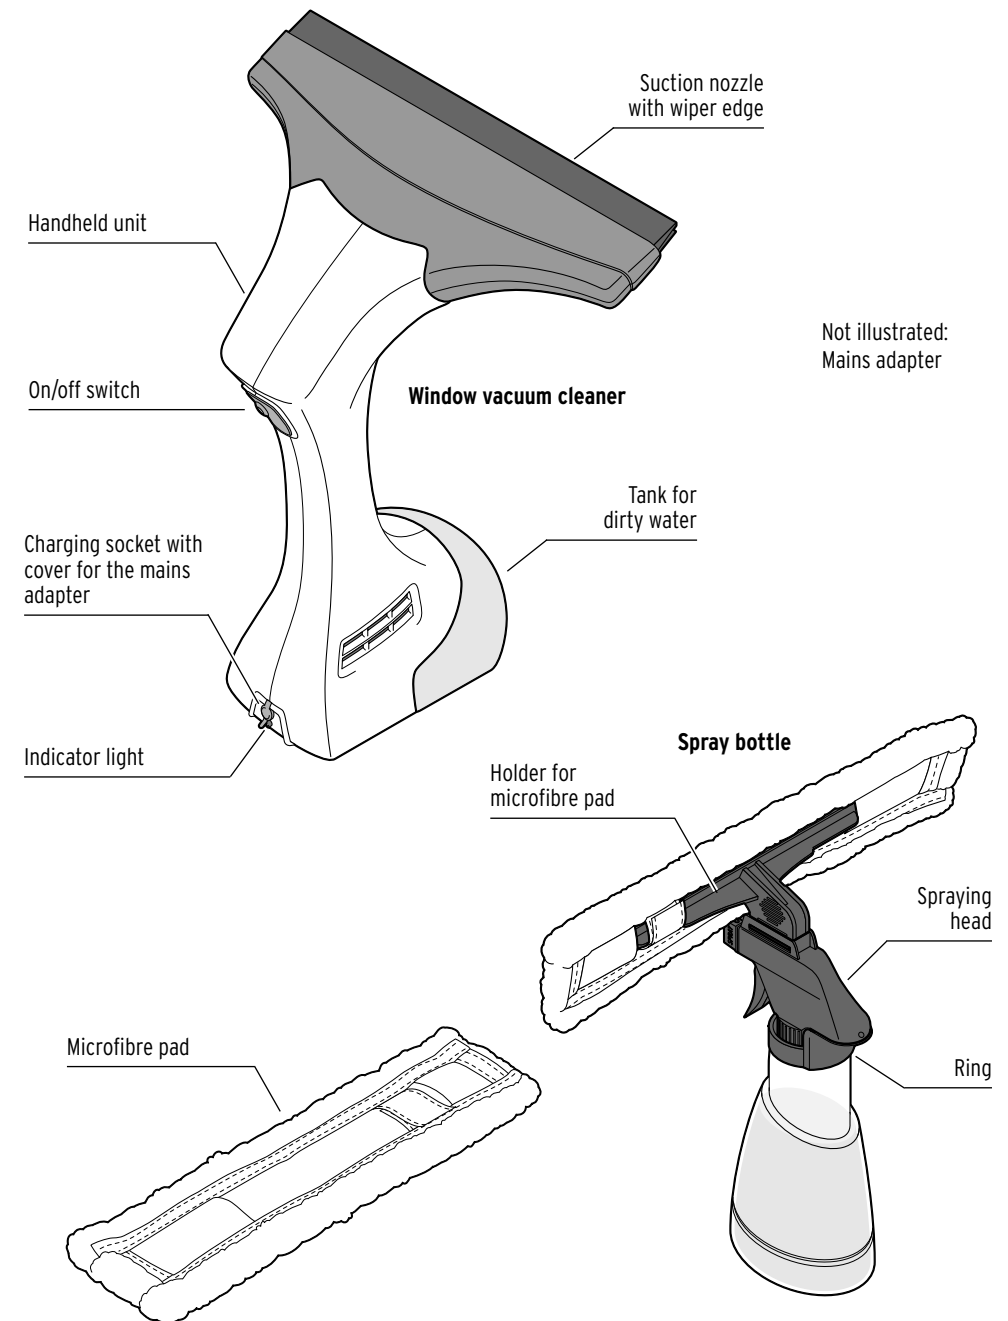


Prior to first use

Charging the window vacuum cleaner's battery

The built-in rechargeable battery is not fully charged upon delivery. To reach the battery's maximal charging capacity, charge the appliance up fully before using it for the first time. The first charge will take approx. 24 hours.

i The vacuum cleaner must be switched off for charging.

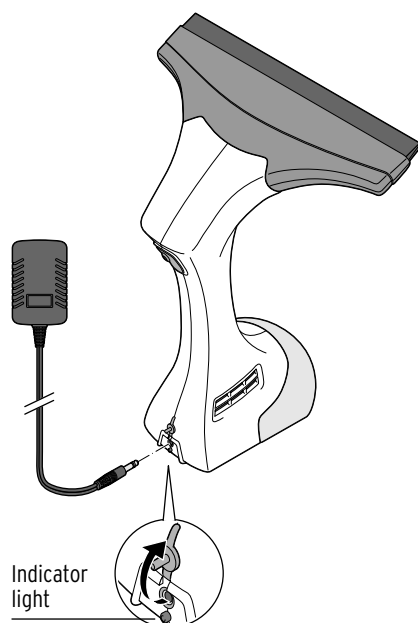

1. Insert the small plug on the charging cable into the socket at the bottom of the appliance.
2. Insert the mains adapter into a wall socket.

The indicator light flashes red while it is charging.
Once the indicator light goes out, the battery is fully charged.

3. Disconnect the mains adapter from the wall socket.
4. Remove the charging cable from the appliance and close the connection socket again with its cover.


The operating time of the window vacuum cleaner with a fully charged battery is approx. 40 minutes.

The battery must be charged again when the indicator light starts to flash slowly during use. If the rechargeable battery is not charged, the appliance will automatically switch itself off after a certain time.


- i**
- The window vacuum cleaner becomes warm while charging. This is normal and not a fault.
 - To keep the full charging capacity of the battery, only charge the window vacuum cleaner when the battery is flat and the appliance has switched itself off automatically.
 - Charge the battery in an environment between +10 and +40°C.

Assembling the window vacuum cleaner

The appliance must be switched off and disconnected from the mains power.

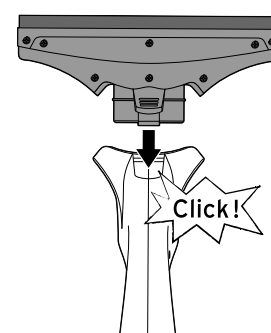


- ▷ Place the suction nozzle onto the handheld unit. You should hear and feel the nozzle click into place.

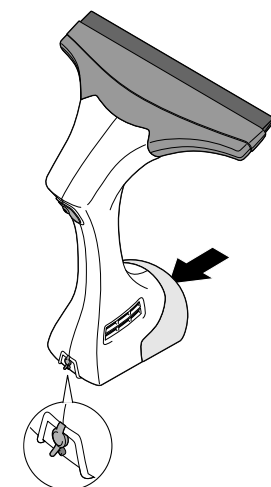

- ▷ Check that the water tank is securely attached to the handheld unit.
- ▷ Check that the charging socket is securely closed with its cover.

Removing the suction nozzle

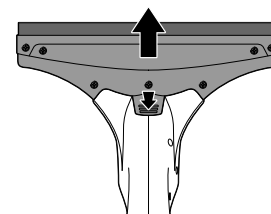

- ▷ Press the ribbed area and pull the suction nozzle smoothly off the handheld unit at the same time.

Filling and assembling the spray bottle



WARNING - risk of burns


- Do not pour any boiling cleaning solutions into the spray bottle.

CAUTION - material damage

- Do not pour any methylated spirits, foam cleaners, or other chemicals into the spray bottle. These substances must not be vacuumed up by the window vacuum cleaner!

Use a standard glass/window cleaning product.

We recommend: Pour in 50 ml glass cleaner and then slowly fill the bottle up with clear water.

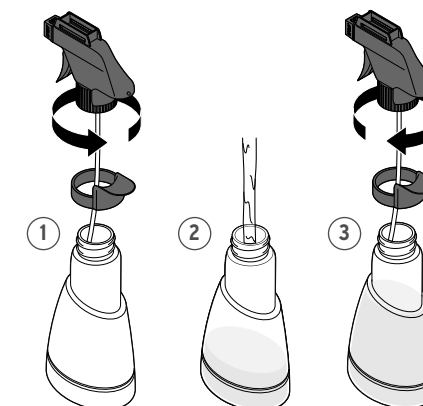

1. Fill the cleaning solution into the bottle and screw the spray head onto the bottle again. The ring ensures that the spray head will not accidentally come loose during use.