 


# KENWOOD

TYPE HBM01

instructions

Cod: 6265104300 Rev. 0 - 30/11/2020

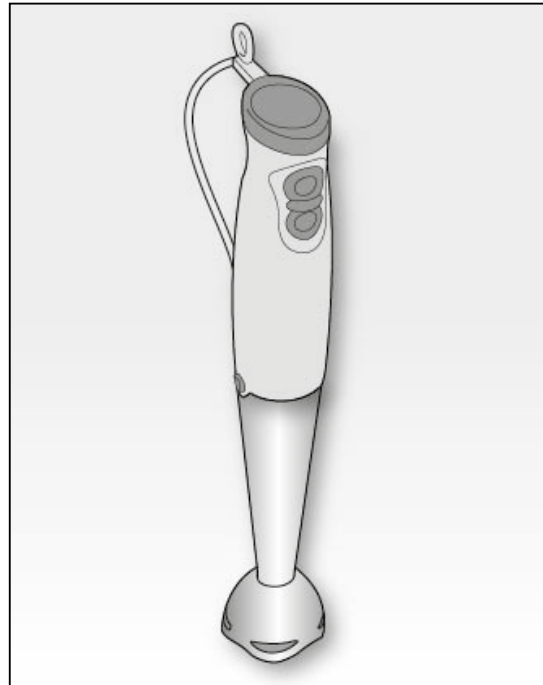

**Kenwood Ltd**

New Lane  
Havant  
Hampshire  
PO9 2NH  
[kenwoodworld.com](http://kenwoodworld.com)



© Copyright 2020.Kenwood Limited. All rights reserved



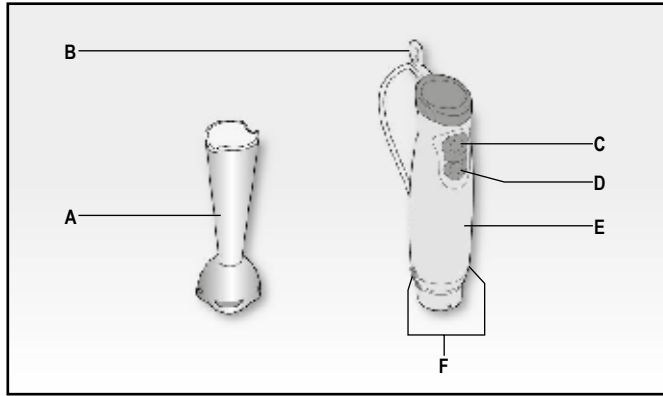 


Fig. 1

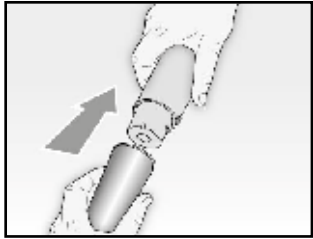 


Fig. 2



Fig. 3

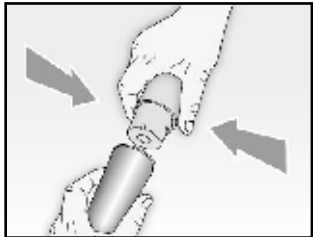 


Fig. 4

### safety

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.
- Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity.
- Never leave the appliance unattended when connected to the power supply; unplug it after every use.
- Never place the appliance on or close to sources of heat.
- Never leave the appliance exposed to the elements (rain, sun, etc....).
- Make sure that the power cord does not come into contact with hot surfaces.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Children shall not play with the appliance.
- NEVER PLACE THE APPLIANCE BODY, PLUG OR POWER CORD IN WATER OR OTHER LIQUIDS; ALWAYS WIPE CLEAN WITH A DAMP CLOTH.

- ALWAYS UNPLUG THE POWER CORD FROM THE ELECTRICITY MAINS BEFORE FITTING OR REMOVING SINGLE ATTACHMENTS OR BEFORE CLEANING THE APPLIANCE.
- Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
- Before starting the appliance, make sure that it is perfectly assembled.
- Never operate the appliance without submerging the blade set.
- NEVER TOUCH MOVING PARTS.
- Never place hands or insert metal implements such as forks, knives, etc. ... into the blade set while it is operating.
- Blades must be handled with care; there is a risk of injury.
- Do not use the appliance if the blade set is damaged.
- Do not use the appliance to chop excessively hard foods (e.g., ice cubes or meat on the bone).
- To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
- Never use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; in this case, take it to your nearest Authorised Assistance Centre.
- To prevent any risks, if the power cord is damaged, it must be replaced by the manufacturer, its Technical Assistance Service or a similarly qualified person.

- This appliance is designed for HOME USE ONLY and may not be used for commercial or industrial purposes.
- This appliance conforms to the directives 2014/35/EU and EMC 2014/30/EU, and to the regulations (EC) No. 1935/2004 of 27/10/2004 regarding material in contact with foods.
- Any changes to this product that have not been expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.
- In the event that you decide to dispose of the appliance, we advise you to make it in-operative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
- Packaging must never be left within the reach of children since it is potentially dangerous.

## key

- A Rod
- B Cable gland with eyelet
- C Speed I button
- D Speed II button
- E Power unit
- F Rod removal button

## instructions for use

### **WARNING:**

ALWAYS UNPLUG THE POWER CORD FROM THE ELECTRICITY MAINS BEFORE FITTING OR REMOVING SINGLE ATTACHMENTS OR BEFORE CLEANING THE APPLIANCE.

- Fit the rod (A) to the power unit (E): fit the two parts together by slotting in the rod (A) and gently pressing on the power unit (E) until the rod clicks firmly into place (Fig. 2).

### **WARNING:**

Make sure that the rod is correctly fitted before using the appliance.

- This blender can be used to prepare sauces, soups, mayonnaise, baby food, cocktails and shakes.
- It can be used in a container or directly submerged in the pan containing the mix to be blended, which must not be standing on a heat source, to prevent the appliance from overheating. Start and stop the appliance while the blade set is submerged in the container with the food to avoid possible splashing. We also recommend using the appliance in short bursts since this is the way to achieve the best possible result and the only way to prevent the appliance motor from overheating.

### **WARNING:**

Only use the appliance for 30 seconds at a time when preparing recipes, after which, leave it to cool to room temperature.

- Place the food for blending in a container and plug the appliance into the power mains.
- The blender has two speeds according to the type of food to be blended; press gently on the button (C) for the lower speed, or on the button (D) for a higher speed (Fig. 3).
- After use, wait for the blade set to stop moving completely and then unplug the appliance from the power mains.
- To remove the rod (A) it is necessary to press the two buttons (F) together (Fig. 4).

## cleaning and maintenance

### **WARNING:**

NEVER PLACE THE APPLIANCE BODY, PLUG OR POWER CORD IN WATER OR OTHER LIQUIDS; ALWAYS WIPE CLEAN WITH A DAMP CLOTH.

### **WARNING:**

ALWAYS UNPLUG THE POWER CORD FROM THE ELECTRICITY MAINS BEFORE FITTING OR REMOVING SINGLE ATTACHMENTS OR BEFORE CLEANING THE APPLIANCE.

- Clean the power unit (E) with a soft cloth.
- To clean the rod (A), we recommend using hot water and if necessary, a mild detergent.

### **WARNING:**

After cleaning, make sure that there is no water inside the rod (A) before fitting it to the power unit (E).

## MAYONNAISE RECIPE

- Place 4 eggs and 15 g white wine vinegar into a tall bowl;
- Start the blender at speed “I”;
- Slowly pour the oil into the bowl (150 g oil per egg used) and pass to speed setting “II” when the mix begins to thicken. If the oil remains on the surface, switch off the appliance, mix in by hand and then use the blender for 15 seconds.

## service and customer care

- If you experience any problems with the operation of your appliance, before requesting assistance visit [www.kenwoodworld.com](http://www.kenwoodworld.com).
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit [www.kenwoodworld.com](http://www.kenwoodworld.com) or the website specific to your Country.
- Made in China.



## **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.