

Read this instructions booklet carefully before using this equipment. By doing so, you will obtain the best results and maximum safety in use

SPECIAL INSTRUCTIONS

- Before inserting the plug, check to be certain that the voltage figure on the equipment's identification plate conforms to that of your electrical system.
- Do not touch hot parts. Use the handles.
- Never place this equipment in water. To clean the toaster, all you need is a damp cloth.
- While using this toaster, set it up so that it has plenty of space in order for air to circulate freely around it.
- This appliance is suitable for cooking foods. It must not therefore be used for other purposes or altered or tampered with in any way. Any other use is to be considered improper and thus dangerous. The manufacturer cannot be considered responsible in any manner whatsoever for eventual damage resulting from improper, mistaken and unreasonable use of this equipment or from repairs made by unqualified individuals.

If the equipment is connected to the electrical network, keep in mind the following basic rules of safety:

- do not touch the toaster when your hands are wet or damp;
- do not use this equipment if you are barefoot or if your feet are wet;
- do not pull the cable or the toaster itself when detaching the plug from the electrical outlet;
- do not leave the appliance within the reach of children or leave unattended whilst in operation;
- do not leave the toaster plugged in when not in use, because it could become a potential source of danger;
- this equipment's power cable must never be replaced by the user; if the cable is damaged, contact only a service centre duly authorised by the manufacturer.
- in the event that you decide not to make any further use of this toaster, we recommend that you cut the cable in such a way as to make it unusable.

Keep these instructions in a safe place.

The materials and objects intended for contact with foodstuffs are in compliance with EEC directive 89/109.

INSTALLATION

- Before using, check that the appliance has not been damaged during transport.
- Install the appliance on a horizontal surface, and out of the reach of children, as some parts of the appliance reach very high temperatures during operation.
- Before inserting the plug in the power point, check that:
 - your mains voltage corresponds to the value on the rating plate underneath the appliance.
 - the power point has a minimum rating of 10A.
 - the power point is suitable for the plug, otherwise replace it.
 - the power point is suitably earthed. The manufacturer declines all liability if this instruction is not respected.
- Operate the appliance for at least 5 minutes and air the room, in order to eliminate the "new smell"
- Clean the plates using a sponge or damp cloth and then dry carefully.
- Before using, carefully wash the non-stick grill.

USE

Close the toaster and insert the plug.

The red power indicator will turn on.

After preheating for around 4 minutes, the toaster will be ready and the light will go off.

The toaster is now ready for use. (Always preheat the appliance before use).

The thermostat will keep the correct temperature by turning the toaster on and off intermittently. Always use this toaster in its closed position.

To enhance the taste and appearance of the toasted sandwich, spread the OUTSIDE of the bread with butter or a spread suitable for cooking. Place the first slice of bread, buttered side down, on the toaster's bottom plate. Then place or spread the filling on that piece of bread. Be careful not to use too much filling or spread the filling to the edges of the bread as this may cause the filling to overflow. At the same time, ensure there is sufficient filling for your sandwich.

Finally, place the second slice of bread on the filling and then close the cover by gently pressing the two handles together. Fasten using the hook (1) on the top cover.

Toast the sandwiches to the degree of toasting desired.

Open the cover and remove the sandwiches using a plastic or wooden utensil, so as not to ruin the toaster's non-stick surface.

Warning: Wait several minutes before eating the sandwich to prevent burning your mouth and tongue.

Remove the plug after use.

CLEANING

Warning: Pull the plug out of the socket and let the toaster cool off before cleaning it. Never place any part of this equipment in water or other liquids.

After each use, clean the plates with a sponge or a warm, damp cloth and then dry them carefully. To remove possible crusty matter, use a plastic scouring pad or whatever the case only products made specifically for stick-proof surfaces.

ELECTRICAL CONNECTION (UK ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the

circuit must be protected by a 15 Amp fuse.

If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.


WARNING - THIS APPLIANCE MUST BE EARTHED IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and yellow:	Earth
Blue:	Neutral
Brown:	Live

 
 
 


As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.



107 IDL/01.02

