 


**ELECTRIC OVEN
FOUR ÉLECTRIQUE
FORNO ELETTRICO**

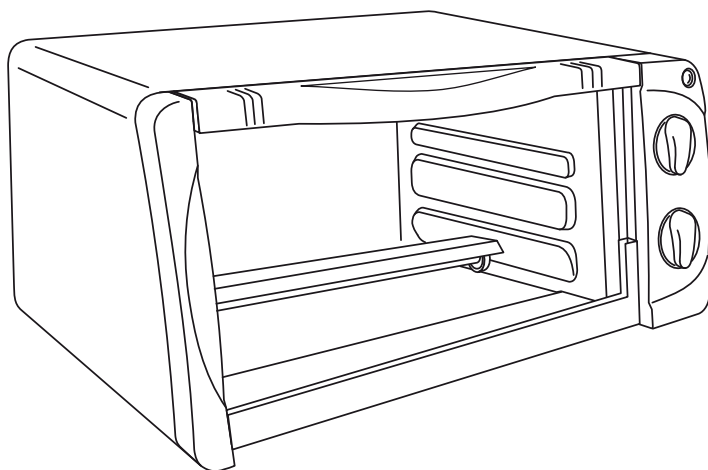 


De'Longhi

De'Longhi Appliances
via Seitz, 47
31100 Treviso Italia

**Instructions for use
Mode d'emploi
Istruzioni per l'uso**

DESCRIPTION OF OVEN AND ACCESSORIES

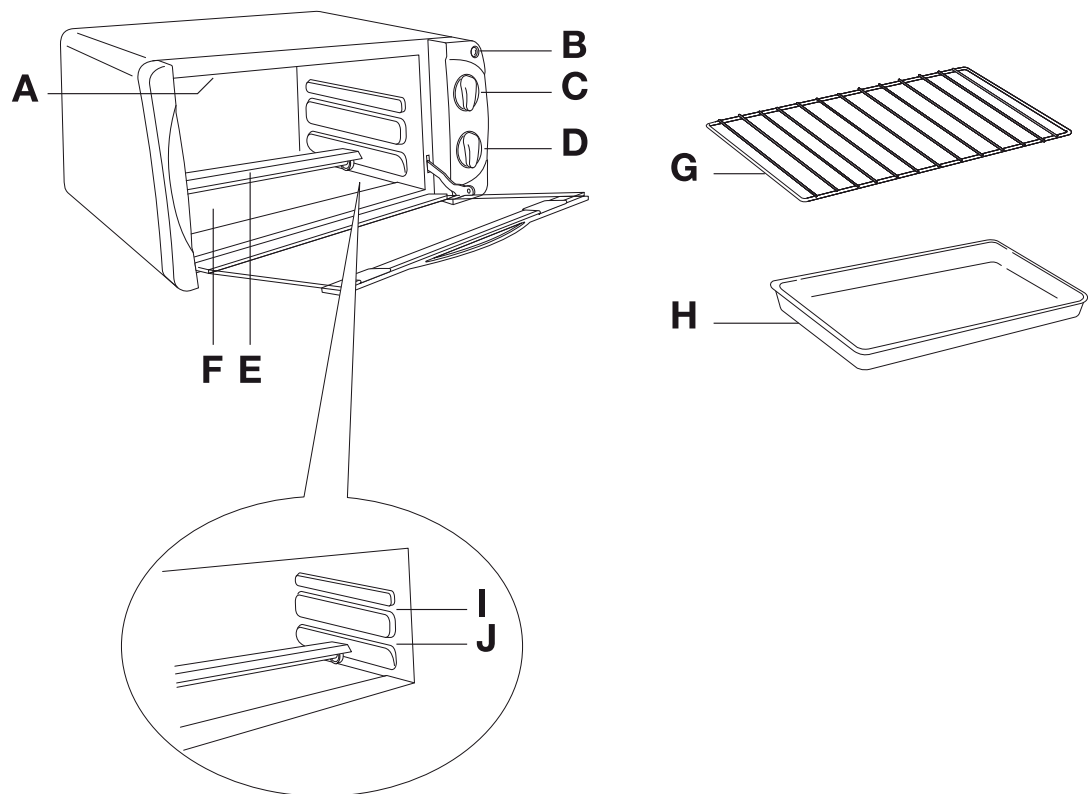

- A** Top element
- B** Indicator light
- C** Mode selector
- D** ON/OFF and timer knob
- E** Bottom element
- F** Bottom element reflector
- G** Wire rack
- H** Pan
- I** Top guide
- J** Bottom guide

SUMMARY TABLE

Programme	Mode selector knob	ON/OFF and timer knob	Indicator light	Wire rack and pan position
Off				-
Oven cooking/toasting	PR			
Grilling	PR			

Light **(B)** indicates that the oven is heating up. When it goes off, the oven has reached the set temperature.

In "Oven cooking" and "Toasting" modes, the pan (or other container) must never be placed directly on top of the bottom element.



 
IMPORTANT WARNINGS

- **Read all the instructions carefully before using the appliance.**
 - This oven has been designed to cook food. It must never be used for other purposes, modified or tampered with in any way.
 - Place the appliance on a horizontal surface at a height of at least 85 cm and out of reach of children.
 - Wash all accessories before use.
 - **Before plugging into the mains, make sure that:**
 - The mains voltage corresponds to the voltage indicated on the rating plate.
 - The mains socket has a minimum rating of 16A and an earth wire.
- The manufacturer declines all liability in the event that this important accident-prevention rule is not respected.**
- Before using the oven for the first time, remove any paper and other material inside the oven such as protective cardboard, booklets, plastic bags, etc.
 - Before using for the first time, operate the oven empty with the thermostat at maximum for at least 15 minutes to eliminate the "new" smell and any smoke caused by the presence of protective substances applied to the elements before transport. During this operation, ventilate the room.

IMPORTANT: When you have unpacked the appliance, make sure the door is undamaged and working correctly. The door is made from glass and is therefore fragile. If it is visibly chipped, scored or scratched, it should be replaced.

While using, cleaning or moving the appliance, avoid slamming or knocking the door violently. Do not pour cold liquid onto the glass while the appliance is hot.

- **When in operation, the door and accessible external surfaces could become very hot. Always use the knobs, handles and buttons. Never touch metal parts or the glass. Use oven gloves if necessary.**
- **This electrical appliance operates at high temperatures which could cause burns.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not move the appliance while in use.
- Do not use the appliance if:
 - the power cable is faulty
 - the appliance has been dropped, is visibly damaged or malfunctions.Should this occur, to avoid all risk take the appliance to your nearest authorised service centre.
- Do not let the power cable dangle and avoid touching hot parts of the oven. Never unplug the appliance by pulling on the power cable.
- If you intend to use an extension, make sure it is in good condition, that the plug is earthed and that the cross section of the wires is at least equal to that of the power cable provided with the appliance.
- To avoid all risk of electric shock, never immerse the power cable, plug or appliance itself in water.
- Never position the appliance near heat sources.
- Do not leave inflammable products near the oven or under the work surface where it is located.
- **Bread may burn. Never leave the oven unattended during toasting or grilling.**
Never operate the appliance under a wall cupboard or shelf or near inflammable materials such as curtains, blinds, etc.
- Do not use the appliance as a heat source.
- Never place paper, cardboard or plastic inside the oven and never rest anything on top of the appliance (utensils, wire racks, other objects).
- Never insert anything into the ventilation openings. Make sure they are unobstructed.
- **If food or other parts of the oven catch fire, never try and put out the flames with water.**
Close the door, unplug from the mains and smother the flames with a damp cloth.
- This oven is not designed for built-in installation.
- When the door is open, remember:
 - never exert excessive pressure with overly heavy objects or pull the handle downwards;
 - never rest heavy containers or boiling saucepans just out of the oven on the open door.
- Given differences in legislation, if the appliance is used in a country other than that where it was bought, have it checked by Customer Services.
- For your personal safety, never take the appliance to pieces on your own. Always contact Customer Services.
- This appliance is designed for domestic use only.
Professional or inappropriate use, or failure to observe the instructions absolves the manufacturer from all responsibility and invalidates the guarantee.

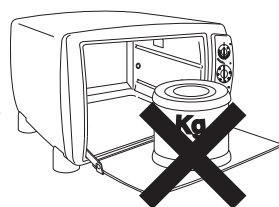

- When not in use and before cleaning, always unplug the appliance.
- Adjustments, repairs and replacement of the power cable must be carried out only by authorised personnel or the manufacturer's Customer Services.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.
- Never use abrasive cleaning products or a metal scraper to clean the glass door as this could damage the surface and cause breakage.
- Appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The appliance must be placed and operated with the back next to the wall.

Keep these instructions

Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As

a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

TECHNICAL CHARACTERISTICS

Operating voltage	see rating plate
Maximum absorbed power	see rating plate

This appliance conforms to EC directive 2004/108 on Electromagnetic Compatibility and EC regulation 1935/2004 of 27/10/2004 on materials intended for contact with food.

COOKING PROGRAMMES

General tips

- When oven cooking or grilling, for best results always preheat the oven to the set temperature.
- Cooking times depend on the quality of the products, the temperature of the food and personal taste. The times in the table are purely indicative and subject to variation. **They do not include the time required to preheat the oven.**
- To cook frozen foods, as well as the table, refer to the recommended times on the product packaging.
- Light (B) indicates that the oven is operating. When it goes off, the oven has reached the set temperature.

Important: For cooking times longer than 15 minutes, you are recommended to always reset the timer when the cooking time is reached.

ON/OFF and timer knob (D)

- **To turn the oven on and programme cooking time:**
Turn the knob clockwise to the required time (max. 15 minutes). Once the set time has been reached, the appliance emits a beep and the oven goes off automatically.
- **To turn the oven off:** Turn the knob to the "0" position.
To set times of less than 3 minutes, turn the knob past 5, then position it on the required time.

Oven cooking

- Place the wire rack (G) with the food in the bottom guide as shown on page 3.
- Turn the mode selector (C) to the .
- Turn the ON/OFF and timer knob (D) to the time required.

Recommended cooking times

Important: the times and temperatures in the table are indicative only.

They may change according to the recipes, type of ingredients, quantities and recipient used. You should always make sure the food is thoroughly cooked before serving.

Recipes	Quantity	Mode selector	Cooking times	Comments and tips
Pizza	2 x 100g		20-25 minutes	Grease the pan (H) thoroughly: Cooking times may vary according to the ingredients
Chicken pieces	750g		85-95 minutes	Turn over halfway through the cooking time. Cover with tinfoil during the first hour of cooking.
Roast pork	1000g		145-155 minutes	Turn halfway through the cooking time
Sponge cake	400g		20-25 minutes	
Buns	700g		30-40 minutes	

Turn halfway through the cooking time


Cooking frozen food in the oven

Recipes	Quantity	Mode selector	Cooking times	Comments and tips
Lasagne	500g		45-55 minutes	Place oven-safe packs directly on the wire rack. Otherwise (in the case of plastic containers), place the contents of the pack on the pan (H).
Cannelloni	500g		45-55 minutes	
Baked aubergines with parmesan cheese	450g		45-55 minutes	
Frozen bread	150g		12-22 minutes	Place the bread directly on the wire rack. Cooking times may vary according to the size and type of roll.

Toasting

This mode is recommended for:

 - single slices of bread
- toasted sandwiches (with ham and cheese for example)
- toasted rolls
- Place the wire rack (G) in the bottom guide as shown on page 3.
- Depending on the quantities, position the slices of bread or rolls in the centre of the wire rack as shown in the figures alongside and close the door.
- Turn the mode selector (C) to the  position.
- Turn the ON/OFF and timer knob (D) to the time required.
- Condensation may form on the internal glass of the door. This is completely normal. The condensation will evaporate when the oven heats up.
- **When using the oven for the first time, choose an intermediate position and toast a few slices to check the toasting level.**
Adjust the knob according to personal tastes.
- When toasting in rapid succession, bear in mind that to obtain the same level of toasting, you must set the ON/OFF and timer knob (D) in an ever lower position.
- At the end of the time set, the appliance emits a beep indicating that the selected time has expired. Toasting is now complete and the elements go off automatically.

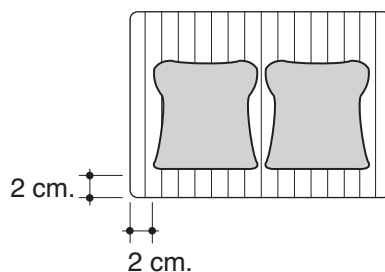

Grilling

- Place the wire rack (G) in the top guide as shown on page 3.
- Pouring two glasses of water into the pan avoids smoke and unpleasant odours due to burnt fat and facilitates cleaning.
- Turn the mode selector (C) to the  position.
Preheat the oven for 5 minutes.
- Place the food on the wire rack and close the door.
Grilling times are shown in the following table.
Attenzione: inserire ed estrarre la leccarda con molta cura, facendo attenzione a non rovesciare il contenuto.

Recipes	Quantity	Mode selector	Cooking times	Comments and tips
Pork chops	2		19-29 minutes	Turn after 11 minutes.
Frankfurters	3		10-20 minutes.	Turn after 6 minutes.
Fresh hamburgers	2		13-23 minutes	Turn after 7 minutes
Sausages	4		20-30 minutes.	Turn after 11 minutes
Kebabs	500g		26-36 minutes	Turn after 8, 15 and 21 minutes

CLEANING

- Frequent cleaning prevents the formation of smoke and bad odours during cooking.
- Always unplug from the mains socket before cleaning.
- Never immerse the appliance in water, never wash under running water.
- The wire rack and pan are not dishwasher safe!
- To clean the outside surface always use a damp sponge.
Avoid using abrasive products that may damage the paintwork.
- To clean the inside surfaces of the oven, never use products that corrode aluminium (detergents in spray cans) and never scrape the walls with sharp objects.
- Do not use steam cleaners to clean the inside of the oven.