

IMPORTANT

- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only.
- Dispose of the plastic bag with care as it represents a hazard for children.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by qualified personnel only who should ensure that the cross-section of the wires leading to the socket is suitable for the power absorbed by the appliance.
- Bear the following fundamental safety rules in mind:
 - Never touch the appliance with damp hands.
 - Never use the appliance with bare or wet feet.
 - Never unplug the appliance by pulling the power cable or the appliance itself.
 - The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - Never leave the appliance plugged in as it could be a safety hazard.
 - Never place the iron under the tap to top up with water. Always use the measure provided.
 - If the power cable is damaged, have it replaced immediately by a qualified electrician.

- The safety of this appliance is guaranteed only if correctly connected to a proper and effective earth connection as specified by current electrical safety standards and regulations. This fundamental safety requisite should be verified. If in doubt, ask a qualified electrician to check the mains system thoroughly. Failure to earth the appliance absolves the manufacturer of all liability for damage.
- When the appliance is to be discarded, after unplugging from the mains, the lead should be cut as close as possible to the iron to make the appliance unusable.
- Before cleaning or servicing, disconnect the appliance by removing the plug from the socket.
- In the event of malfunction and/or faulty operation, switch off the appliance and take it to a service centre.
- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.
- In the event of malfunction, take the iron to an authorised service centre.
- Never overfill the tank and never add stain removers or similar products.
- Save these instructions for future reference.
- The iron must be used and rested on a stable surface
- If the appliance is dropped causing visible damage, do not use. Take to a professional service centre.

- When placing the iron on the iron rest, make sure the iron rest is located on a stable surface. The iron should be placed on a flat surface extremely resistant to high temperatures.

This appliance complies with directive 89/336/EEC on radio interference suppression.

MAIN COMPONENTS

- A Plate
- B Spray
- C Tank fill hole with door
- D Spray button
- E Steam regulator
- F Super steam button
- G Indicator light
- H Thermostat dial
- I "Self clean" button

***Read this manual thoroughly before using the appliance.
This will ensure optimum results and maximum safety.***

Important: Before plugging the appliance in, check that the mains voltage corresponds to the voltage (V) indicated on the rating plate of the iron. The socket must be efficiently earthed.

STEAM IRONING

This iron works with normal tap water.

- a) Before filling the tank, make sure the steam regulator E is in the  position ("dry") (fig. 1). Make sure the power cable is unplugged from the mains socket.
- b) Fill the measure up to the level mark, open the door, then pour the water into the iron (fig. 2). It is important that the iron is always unplugged from the mains every time you fill or top up the water in the tank.
- c) Plug the iron into the mains socket.
- d) A special segment  on the thermostat dial H identifies the steam range. The steam will be wet if the thermostat pointer H is at the beginning of the segment and dryer if it is towards the end.

Make sure the fabric to be ironed is suitable for steam ironing. When using the iron for the first time, you are recommended to pass it several times over a piece of cloth first.

- e) After these checks, select the required temperature by rotating the thermostat dial H.
- f) The indicator light G will come on to show the iron is on. After about a minute in the case of maximum temperature, the indicator light will go off showing that the iron is ready for use.
- g) Continuous steam delivery is obtained by placing the steam regulator slide E in one of the three positions (1=low steam; 3=high steam). Steam delivery ceases whenever the iron is placed in a vertical position on the rear rest (position recommended during pauses in ironing) or with the iron horizontal when the steam regu-

lator E is in the dry  position.

Note: On the back of the iron there is a useful guide giving information on the temperature to set according to the garment being ironed:

●
SINTETICI
SYNTHETICS
SYNTHETIQUE
SYNTHETISCH

● ●
SETA
SILK
SOIE
SEIDE

● ● ●
COTONE/COTTON
COTON/BAUMWOLLE
LINO/LINEN
LIN/LEINEN

Remember that the steam function can only be used with the thermostat positioned on the  segment.

DRY IRONING

- Plug in the iron and select the temperature, if there is water in the tank, place the steam regulator E in the dry  position (fig. 1).
- Wait until the indicator light **G** goes off showing that the required temperature has been reached.
- If the fabric to be ironed is slightly damp or you iron fast, you can use a higher temperature. If, on the other hand, the garments are dry or you iron slowly, use a lower temperature.

SUPER STEAM (FIG. 3)

- Place the thermostat dial (H) on maximum. When the indicator (G) goes off, press the super steam button  (F). For correct operation of the super steam function, you must wait a few seconds between one burst of steam and the next.

VERTICAL IRONING (FIG. 4)

Enables delicate garments to be steamed without resting them on the ironing board: **pay attention to the temperature used to steam hanging fabrics.**

Place the steam regulator (E) in the dry position . Rotate the thermostat dial H clockwise as far as it will go (maximum steam position). When the indicator light (G) goes off, place the iron in a vertical position and move it near the garment. Press the super steam button  (F) until the indicator (G) comes on again. Wait until the light goes off before continuing vertical ironing.

Never direct the "vertical" steam jet at a garment hanging in a wardrobe or worn by a person. Vertical ironing should always be carried out with the garment hanging on a clothes stand and always away from other garments, elements, people and animals.

SPRAY

If during ironing, you note particularly resistant creases or if your garment requires a higher level of dampness, you can use the spray. Make sure the tank contains water.

Press the spray button  (D) repeatedly, directing the spray jet towards the parts of the garment to be dampened.

Never use the spray when ironing silk as the drops of water could mark the fabric.

AFTER IRONING

To extend the working life of the iron, whenever you finish ironing, you are recommended to empty the tank as follows:

- Unplug from the mains socket.
- Empty the iron, holding it point downwards and shaking it gently over a basin or sink.
- To dry the remaining moisture, turn the iron on again with the thermostat on the maximum position for about two minutes.
- Unplug from the mains socket and allow to cool.
- Clean the plate with a dry cloth as traces of moisture could mark it.
- Wind the power cable around the cable winder.
- Store the iron in a vertical position.

MAINTENANCE AND CLEANING

After use, always wait until the iron is cold before putting away. Allow to cool in a vertical position.

Keep the surface of the plate clean. Do not rest or use the iron on zips, hooks, rings etc to avoid scratching the plate. Clean the plate with a damp cloth only, never use abrasives or solvents.

If the amount of steam drops during use, this could be caused by excessive build-up of limescale.

To remove, proceed as follows:

- fill the tank to the "MAX" level;
- plug the appliance into the mains and place the thermostat in the MAX position. When the iron has reached the required temperature (light off), unplug the appliance and keep in a horizontal position;
- place over a sink;

- press the "SELF CLEAN" button and shake the appliance gently to drain the water in the tank through the plate, taking the impurities with it;
- plug the appliance into the mains and leave in operation for at least two minutes to dry the plate.
- after this time, unplug the appliance from the mains. Leave the iron to cool and clean the outside with a soft cloth.

NO-DRIP SYSTEM

This iron has a no-drip system which automatically shuts off steam production when the temperature is set too low. During operation, the device may emit creaking noises as the iron heats up and cools down. This is perfectly normal and part of correct operation.

AUTO SHUT-OFF (CERTAIN MODELS ONLY)

If the iron is not used or is left in a vertical or horizontal position for more than 30 seconds, the "AUTO SHUT-OFF" device trips and the iron goes off.

If the iron is left vertically, the automatic shut-off device trips after eight minutes.

When you resume ironing, if the temperature has dropped, wait until the indicator light (G) comes on before using the steam.

Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

ELECTRICAL CONNECTION (UK ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse.

WARNING - THIS APPLIANCE MUST BE EARTHED IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and yellow:	Earth
Blue:	Neutral
Brown:	Live



As the colours of the wires in the mains lead may not correspond with the colour-

red markings identifying the terminals in your plug, proceed as follows:
The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

The blue wire must be connected to the terminal marked with the letter N or coloured black.
The brown wire must be connected to the terminal marked with the letter L or coloured red.