

**GB** CAREFULLY READ THESE INSTRUCTIONS BEFORE USING THE APPLIANCE

## GENERAL WARNINGS

- After having removed the packaging, make sure that the product is complete. If in doubt, do not use the appliance and only contact qualified personnel.
  - The plastic bag in which the appliance is packaged should be kept out of the reach of children, as it is a potential source of danger.
  - If the plug fitted to the appliance does not match the power outlet, have the outlet replaced with one that is suitable by qualified personnel. It is not recommended to use adapters, multiple jacks, and/or extension cords. If such accessories are required, only use single or multiple adapters and extension cords that conform to the safety standards in force. Do not exceed the power limits marked on the adapter and/or extension cord.
  - The models fitted with earth must be connected to an effective earth system, in compliance with the electrical safety standards in force.
  - The appliance does not work, contact an authorised service centre only.
  - The appliance must be used exclusively for the purposes it has been expressly designed for. All other use is considered incorrect and thus dangerous. The manufacturer cannot be held responsible for any damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unqualified personnel.
  - Make sure that hands, hair, clothes and kitchen utensils are not inside the work bowl before operating the appliance. **The blades can cut: handle with care.**
- Special attention must be paid to the following fundamental safety standards:**
- Do not touch the appliance with wet or damp hands.
  - Do not use the appliance with bare or wet feet.
  - Do not unplug the appliance from the outlet by pulling on the cord.
  - Do not leave the appliance exposed to the elements, (rain, direct sunlight, frost, etc.).
  - Never allow the appliance to be used by children or incapable persons without supervision.
  - Never allow children to play with the appliance.
  - Unplug the appliance from the power outlet when not in use.
  - Never leave the appliance on unnecessarily, as it is a potential source of danger.
  - Do not immerse the appliance in water.
- In the event of damage to the power cord, have it replaced immediately by qualified personnel.
  - Always unplug the appliance from the mains power outlet before performing any cleaning or maintenance operations.
  - In the event of faults and/or malfunctions, switch the appliance off. Do not tamper with it in any way. For any repairs, only contact qualified service centres and insist on the use of original spare parts and accessories.
  - In the event of damage to the power cord or the appliance itself, immediately unplug the appliance from the power outlet.
- To prevent the risk of danger, damaged power cords must only be replaced by the manufacturer or an authorised agent.
- Do not try under any circumstances to open and/or repair the appliance alone.
- Contact our service centre or an authorised agent.
- To dispose of the appliance definitively, after having unplugged it from the power outlet, it should be rendered unusable by cutting the power cord.
  - Avoid all contact with moving parts.
  - Only use the pushers supplied to push the food being processed through the opening; do not use your fingers or other objects!
  - Only use the appliance to process foods in normal quantities for household use.
- NEVER** use hot food!
- Do not place the appliance near or on sources of heat.
  - Always use the appliance with the rubber mat supplied.
  - Before removing the divider plate (5), wait for the appliance to come to a complete halt.
  - Handle accessories carefully as they could be dangerous.
  - Disconnect the appliance after each use.
- The materials and objects that come into contact with foodstuffs comply with the provisions of the EEC directive 89/109.

## DESCRIPTION

1. Motor unit
2. Speed control + motor unit lock/release device
3. "PULSE" button
4. Locking fin
5. Divider plate
6. Opening for introducing food
7. Pusher
8. Steel/plastic bowl (depending on model)
9. Accessory pin
10. Rubber mat
11. Accessory shaft/support
12. Blade
13. Spatula
14. Whisk accessory
15. Blade disc
16. Slicing disc
17. Fine chopping disc
18. Coarse chopping disc
19. Glass cover (some models only)
20. Reference mark △

## BEFORE USE

Before use, read these instructions carefully. Keep for future consultation.

Before using for the first time, wash all accessories, bowl, cover, pusher etc in hot water with washing-up liquid.

- Never immerse the motor unit in water or other liquids.
- Important! The slicing and chopping discs are very sharp (danger of cuts).

## HOW TO USE

- Place the appliance on a flat surface.

DO NOT PLUG THE APPLIANCE INTO A MAINS SOCKET UNTIL THE ACCESSORIES ARE CORRECTLY MOUNTED.

Turn the appliance off before changing accessories or approaching parts in movement during operation.

- The appliance operates only if correctly assembled.

Proceed as follows:

1. Place the accessory support (11) on the pin (9)

located on the bottom of the bowl (8), then fit the most suitable accessory for your requirements.

2. Make sure there are no obstacles in the bowl (8) to hinder movement of the pin and accessories.
3. Add the ingredients, respecting the maximum quantities given in the tables below.
4. Place the divider plate (5) in the bowl (8), making sure to position it correctly. The recesses in the divider plate must match the handles of the bowl.
5. Fit the motor unit (1) to the bowl (8).
6. Rotate the speed control (2) clockwise to the "pulse" position until the **two fins of the motor unit (4) hook to the handles of the bowl.**
7. To operate the appliance, rotate the speed control (4) anticlockwise to one of the positions (min/max) in such a way that the chosen position matches the reference mark (20).
8. The appliance can be used in pulsed mode by positioning the speed control in the "PULSE" position and pressing the PULSE button (3).
9. The appliance can be used in pulsed mode by positioning the speed control in the "PULSE" position and pressing the **PULSE** button (3). Remove the motor unit (1) and the divider plate (5). Before removing the divider plate (5), make sure the moving parts are stationary.

**Note:** do not exceed the maximum quantity of 250 ml of liquid. Greater quantities could overflow.

**IMPORTANT:** Do not operate the appliance for more than 20 consecutive seconds, then turn off for 1 minute. Do not use the appliance empty.

**Maximum quantity of food and recommended speed for the various accessories.*****For chopping***

<b>Ingredients</b>	<b>Maximum Quantities</b>	<b>Speed</b>	<b>Necessary Tool</b>
Onions/ Garlic (cut in 8)	600 gr.	max / pulse	chopping blade
Soap	700 ml.	max / pulse	chopping blade
Parsley	100 gr.	max / pulse	chopping blade
Raw meat (fat free)	500 gr.	max / pulse	chopping blade
Nuts	350 gr.	max / pulse	chopping blade
Fruits	800 gr.	max / pulse	chopping blade
Baby foods	400 gr.	max / pulse	chopping blade
Carrots	500 gr.	max / pulse	chopping blade

***For whisking***

<b>Ingredients</b>	<b>Maximum Quantities</b>	<b>Speed</b>	<b>Necessary Tool</b>
Egg	4 pcs.	max/ pulse	whisking access.
Mayonnaise	2 pcs. Eggs	max	whisking access.
Cake dough	800 gr. ( 200 gr. flour+ 3 eggs +200gr. liquid oil + 200 gr yoghurt + 200gr. Sugar )	max	whisking access.
Cream	250 gr.	max	whisking access.

***For shredding***

<b>Ingredients</b>	<b>Maximum Quantities</b>	<b>Speed</b>	<b>Necessary Tool</b>
Carrots	500 gr.	6- max	shredding disc.
Radish	500 gr.	6- max	shredding disc
Potato	500 gr.	6- max	slicing disc.
Squash	1000 gr.	6- max.	slicing disc.
Cucumber	1000 gr.	1- max	slicing disc.

**CLEANING AND MAINTENANCE**

Turn off the appliance and unplug from the mains socket.

Never immerse the motor unit in water or other liquids!

Clean the motor unit with a damp cloth.

To clean the accessories, use hot water and normal washing-up liquid only.