

GB CAREFULLY READ THESE INSTRUCTIONS BEFORE USING THE APPLIANCE

GENERAL WARNINGS

- After having removed the packaging, make sure that the product is complete. If in doubt, do not use the appliance and only contact qualified personnel.
 - The plastic bag in which the appliance is packaged should be kept out of the reach of children, as it is a potential source of danger.
 - If the plug fitted to the appliance does not match the power outlet, have the outlet replaced with one that is suitable by qualified personnel. It is not recommended to use adapters, multiple jacks, and/or extension cords. If such accessories are required, only use single or multiple adapters and extension cords that conform to the safety standards in force. Do not exceed the power limits marked on the adapter and/or extension cord.
 - The models fitted with earth must be connected to an effective earth system, in compliance with the electrical safety standards in force.
 - The appliance does not work, contact an authorised service centre only.
 - The appliance must be used exclusively for the purposes it has been expressly designed for. All other use is considered incorrect and thus dangerous. The manufacturer cannot be held responsible for any damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unqualified personnel.
 - Make sure that hands, hair, clothes and kitchen utensils are not inside the work bowl before operating the appliance. **The blades can cut: handle with care.**
- Special attention must be paid to the following fundamental safety standards:**
- Do not touch the appliance with wet or damp hands.
 - Do not use the appliance with bare or wet feet.
 - Do not unplug the appliance from the outlet by pulling on the cord.
 - Do not leave the appliance exposed to the elements, (rain, direct sunlight, frost, etc.).
 - Never allow the appliance to be used by children or incapable persons without supervision.
 - Never allow children to play with the appliance.
 - Unplug the appliance from the power outlet when not in use.
 - Never leave the appliance on unnecessarily, as it is a potential source of danger.
 - Do not immerse the appliance in water.

- In the event of damage to the power cord, have it replaced immediately by qualified personnel.
 - Always unplug the appliance from the mains power outlet before performing any cleaning or maintenance operations.
 - In the event of faults and/or malfunctions, switch the appliance off. Do not tamper with it in any way. For any repairs, only contact qualified service centres and insist on the use of original spare parts and accessories.
 - In the event of damage to the power cord or the appliance itself, immediately unplug the appliance from the power outlet.
- To prevent the risk of danger, damaged power cords must only be replaced by the manufacturer or an authorised agent.
- Do not try under any circumstances to open and/or repair the appliance alone.
- Contact our service centre or an authorised agent.
- To dispose of the appliance definitively, after having unplugged it from the power outlet, it should be rendered unusable by cutting the power cord.
 - Avoid all contact with moving parts.
 - Only use the pushers supplied to push the food being processed through the opening; do not use your fingers or other objects!
 - Only use the appliance to process foods in normal quantities for household use.

NEVER use hot food!

- Do not place the appliance near or on sources of heat.
- Always use the appliance with the rubber mat supplied.
- Before removing the divider plate (3), wait for the appliance to come to a complete halt.
- Handle accessories carefully as they could be dangerous.
- Disconnect the appliance after each use.

The materials and objects that come into contact with foodstuffs comply with the provisions of the EEC directive 89/109.

DESCRIPTION

1. Button
2. Motor unit
3. Divider plate
4. Top blade
5. Bottom blade
6. Graduated container
7. Pin

Note: Before removing the divider plate (3), make sure the moving parts are stationary.

IMPORTANT: Do not operate the appliance for more than 20 consecutive seconds, then turn off for 1 minute. Do not use the appliance empty.

BEFORE USE

Before use, read these instructions carefully. Keep for future consultation

Before using for the first time, wash the blades etc in hot water with washing-up liquid

- Never immerse the motor unit in water or other liquids.
- Important! The blades are very sharp (danger of cuts).

HOW TO USE

- Place the appliance on a flat surface.

DO NOT PLUG THE APPLIANCE INTO A MAINS SOCKET UNTIL THE ACCESSORIES ARE CORRECTLY MOUNTED.

Turn the appliance off before changing accessories or approaching parts in movement during operation.

- The appliance operates only if correctly assembled.

Proceed as follows:

1. Position the bottom blade (5) on the pin (7) located on the bottom of the container (6).
2. Make sure there are no obstacles on the bottom of the container (6) to hinder free movement of the blades.
3. Add the ingredients, respecting the maximum quantities given in the table below.
4. Place the divider plate (3) in the container (6), making sure to position it correctly in the guides.
5. Fit the motor unit (2) to the container (6), positioning it correctly in the guides.
6. To operate the appliance, press the button (1).
7. For best results when chopping food, use the appliance in pulse mode by releasing the button (1).
8. After use, remove the motor unit (2) and the divider plate (3).

Tips for chopping and mixing**Chopping with the blade**

Ingredients	Maximum quantity	Maximum time
Parsley	70 gr.	10-15 sec/ pulses
Carrots	400 gr.	10-15 sec/ pulses
Tomato	650 gr.	10 sec
Fruit	500 gr.	10-15 sec/ pulses
Dry plumps	350 gr	10 sec
Cubed beef	300 gr.	10 sec
Diced cheese	300 gr.	10 sec
Onions	200 gr.	10-15 sec/ pulses
Peanuts	300 gr.	10 sec

Blending with the blade

Ingredients	Maximum quantity	Maximum time
Soup	700 gr	10-15 sec
Baby food	500 gr	10 sec
Milk and banana	500 gr milk + 2 bananas	10-15 sec

IMPORTANT: Do not operate the appliance for more than prescribed time, than turn off for 1 minute. If operate with dry plumps, use appliance max for 10 sec. and after cool down the appliance.

CLEANING AND MAINTENANCE

Turn off the appliance and unplug from the mains socket.

Never immerse the motor unit in water or other liquids!

Clean the motor unit with a damp cloth.

To clean the accessories, use hot water and normal washing-up liquid only.