

## READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE

GB

**GENERAL WARNINGS**

- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact professional personnel only.
- In the event of incompatibility between the socket and the plug on the appliance, have the plug replaced by a qualified electrician only. The use of adaptors, multiple sockets and/or extensions is not recommended. If they are unavoidable, use only simple or multiple adaptors and extensions conforming with current safety regulations. Make sure you do not exceed the power limit marked on the adaptor and/or extension.
- Models with an earth must be connected to an efficient earth installation as specified in current electrical safety regulations.
- In the event of break down, contact an authorized service centre only.
- The appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous. The manufacturer may not be considered liable for damage deriving from improper, incorrect or unreasonable use of the appliance and/or repairs carried out by unqualified persons.
- Make sure the hands, hair, clothing and kitchen utensils are clear of the container before starting the appliance. The blades may cut: handle with care.  
In particular, observe the following fundamental safety rules:
  - Never touch the appliance with damp or wet hands.
  - Never use the appliance with bare or wet feet.
  - Never unplug the appliance by pulling the power cable.
  - Protect the appliance from atmospheric agents (rain, frost, sun, etc).
- Never allow the appliance to be used by children or unfit persons without surveillance.
- Never allow children to play with the appliance.
- Unplug the appliance from the mains socket when not in use.
- Never leave the appliance on for longer than necessary as it represents a potential source of danger.
- Never immerse the appliance in water.
- If the cable is damaged, have it replaced immediately by a qualified electrician.
- Before cleaning or maintenance, unplug the appliance from the mains socket.
- If the appliance breaks down or malfunctions, turn it off. If it requires repair, contact a qualified service centre only and ask for only original spare parts and accessories to be used.
- If the appliance is to be disposed of definitively, after unplugging from the mains socket, you are recommended to remove the power cable.
- Keep these instructions carefully for future consultation.

Materials and components coming into contact with food products conform to the specifications of directive EEC89/109.

### Before use


Your appliance is designed to chop small quantities of food and may not be used for other purposes.

Before using it for the first time, clean the motor assembly with a damp cloth. Wash and dry all parts coming into contact with the food products carefully.

### Using the appliance

This appliance is designed to prepare sauces, purées, mayonnaise, liquidised meat products, fruit frappé etc. practically and rapidly.

1. Insert the blade and stem assembly (3) into the motor assembly and rotate until it hooks into place (see fig. 1)
2. Plug into the mains socket.
3. Place the food to be processed into one of the containers or the beaker provided.
4. Immerse the stem (3) in the food and turn the appliance on using the ON/OFF button (2).

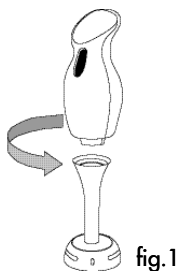

### Using the whisks

1. After making sure the appliance is unplugged from the mains socket, insert the whisks into the special accessory (5) (fig. 2), then insert this into the motor assembly by rotating until it hooks into place (Fig. 3).

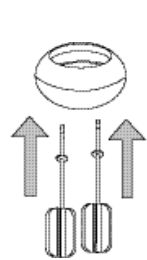


fig.2

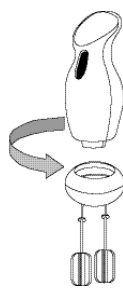


fig.3

2. Put the ingredients to be prepared into the graduated beaker provided.
3. Immerse the stem (3) in the food and turn the appliance on using the ON/OFF button (2).

**Important: Never use the appliance for more than 10 seconds consecutively then leave to cool.**

### Using the chopper accessory

Designed to chop nuts, spices, hard-boiled eggs, etc (if the appliance is used to chop fruit with a stone, remember to remove the stone first)

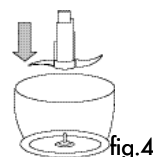


fig.4

1. Insert the chopper blade (6) into the bowl (8) (fig.4).
2. Place the ingredients to be chopped in the bowl.
3. Apply the chopper blade accessory (4) to the bowl (7) (fig.5) then fit the motor assembly (1) to the chopper blade accessory (4) by rotating until it hooks into place. (fig.6)
4. Press the ON/OFF button (2).

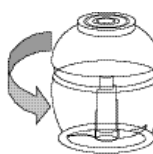


fig.5



fig.6

**Note:** Before removing the food from the bowl, remember to remove the chopper blade (6).

### Cleaning and maintenance

- Unplug from the mains socket;  
**Important:** never immerse the motor assembly (1) in water: to clean, use a damp cloth only.
- Accessories may be washed in warm water with normal washing up liquid.
- To facilitate cleaning and remove possible residues, operate the mixer in a recipient containing a little warm soapy water.

### Wall mount (certain models only)

The appliance comes with a wall mount providing a convenient means of housing the mixer so it is always at hand. To fix the mount (9) to the wall, use the screws and anchors supplied.