

READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE **GB**

IMPORTANT WARNINGS

- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and only contact qualified personnel.
- The plastic bag in which the appliance is packaged should be kept out of the reach of children, as it is a potential source of danger.
- If the plug fitting to the appliance does not match the power outlet, have the outlet replaced with one that is suitable by qualified personnel. It is not recommended to use adapters, multiple jacks, and/or extension cords. If such accessories are required, only use single or multiple adapters and extension cords that conform to the safety standards in force.
- Models with an earth must be connected to an efficient earth installation as specified in current electrical safety regulations.
- In the event of break down, contact an authorized service centre only.
- The appliance must be used exclusively for the purpose for which it was expressly conceived. All other use is considered incorrect and thus dangerous.
The manufacturer cannot be held responsible for any damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unqualified personnel.
- Make sure the hands, hair, clothing and kitchen utensils are clear of the container before starting the appliance.

The blades may cut: handle them with care.

Special attention must be paid to the following fundamental safety standards:

- Never touch the appliance with damp or wet hands.
- Never use the appliance with bare or wet feet.
- Never unplug the appliance by pulling the power cable.
- Protect the appliance from atmospheric agents (rain, frost, sun, etc).
- Never allow the appliance to be used by children or unfit persons without surveillance.
- Never allow children to play with the appliance.
- Unplug the appliance from the mains socket when not in use.
- Never leave the appliance on for longer than necessary as it represents a potential source of danger.
- Never immerse the appliance in water.
- If the cable is damaged, have it replaced immediately by a qualified electrician.
- Before cleaning or maintenance, unplug the appliance from the mains socket.
- If the appliance breaks down or malfunctions, turn it off.

- If it requires repair, contact a qualified service centre only and ask for only original spare parts and accessories to be used.
- In the event of damage to the power cable or the appliance itself, immediately unplug the appliance from the power outlet.
- To prevent the risk of danger, damaged power cables must only be replaced by the manufacturer or an authorised agent.

Do not try under any circumstances to open and/or repair the appliance alone.

Contact our service centre or an authorised agent.

- If the appliance is to be disposed of definitively, after unplugging from the mains socket, you are recommended to remove the power cable.
- The appliance is fitted with a safety device preventing it from being turned on unless the bowl and cover are correctly positioned and hooked into place.
The universal cutter "D1" is extremely sharp.
Always hold it by the handgrip side.
To store the cutter safely when not in the appliance, use the special guard "D2". Remove the guard before using the cutters.

- Avoid all contact with moving parts.
- Open the bowl and/or blender only when the motor is stationary.
- To push the food to be processed through the hole in the cover, use the feeders provided only. Never use the fingers or other objects!
- Use the appliance to process food in quantities for normal domestic use only.
- Never exceed the times and quantities indicated in the instructions.
NEVER use hot food!

Keep these instructions carefully for future consultation.
The materials and objects that come into contact with food-stuffs comply with the provisions of the EEC directive 89/109.

DESCRIPTION OF THE APPLIANCE

A. Motor assembly

- A1 Safety cover
- A2 Safety cover release button
- A3 Motor unit
- A4 Motor shaft
- A5 ON/OFF knob + speed regulator
- A6 Pulse operation button

B. Mixer bowl components

- B1 Feeder for bowl
- B2 Cover for bowl
- B3 Bowl

C. Blender components

- C1 Blender cover cap
- C2 Blender cover
- C3 Blender

D. Accessories for bowl

- D1 Universal cutter
- D2 Universal cutter guard
- D3 Mixer accessory
- D4 Whisk accessory

E. Cutters for slicing/grating

- E1 Cutter holder disk
- E2 Thin slicer
- E3 Thick slicer
- E4 Grater
- E5 Fine shredder
- E6 Coarse shredder
- E7 Cutter for French fries
- E8 Cutter holder accessory
- E9 Cutter holder cover

F. Separator components (if provided)

- F1 Separator feeder cover
- F2 Separator cover
- F3 Separator filter
- F4 Separator

G. Juicer components (if provided)

- G1 Juicer
- G2 Cone for juicer

H. Spatula

BEFORE USE

Before using the appliance for the first time, wash all accessories including the bowl "B3", the blender "C3", the cover and feeder in hot water and washing up liquid.

- Never immerse the motor unit in water or other liquids.
- Important! The universal cutter, slicer and shredder blades are very sharp. Handle with care.

During the first few minutes of use, there may be a slight smell. This disappears rapidly and does not represent a health hazard.

NOTE

- **To use the bowl "B3", the safety cover "A1" must always be closed.** To open the safety cover "A1", press the cover release button "A2" (Fig. 1).
- To use the blender, the bowl and cover "B2" must be correctly positioned.
- Before using the blender, remove all accessories from the bowl "B3".
- **Never use the blender "C3" and the bowl "B3" at the same time.**
- Avoid damaging the cover safety device "C1" and the bowl cover closure device "B2".

CONTROLS

Turning on: turn the ON/OFF + speed regulator knob "A5" to one of the positions available as required. The speed can also be varied during operation.

Turning off: turn the ON/OFF knob + speed regulator "A5" to the OFF position.

Pulse operation press button "A6". The appliance operates until the button is released.

USING THE BOWL "B"

- Place the appliance on a dry flat surface.
DO NOT PLUG THE APPLIANCE INTO THE MAINS UNTIL ALL ACCESSORIES HAVE BEEN CORRECTLY FITTED.
- Turn the appliance off before changing accessories. Avoid contact with moving parts while the appliance is plugged in.
Important! The blades are sharp!
- Position the bowl "B3" in the motor assembly housing "A3".
- Insert one of the following cutters onto the motor shaft "A4" according to your requirements (fig. 2).
 - D1** Universal cutter (to chop meat, vegetables, etc)
 - D3** Mixer accessory for mixing
 - D4** Whisk accessory (for whisking cream, egg white, etc)
- Before turning the appliance on, make sure the cutters are positioned correctly.
- Put the ingredients to be prepared into the bowl "B3".
- Place the cover "B2" on the bowl and rotate anti-clockwise until it locks into place (fig. 2).
- Start the appliance by turning the ON/OFF + speed regulator knob "A5" to one of the positions available.

Important: handle the cutters with extreme care. Always hold the cutters by the handgrip.

After processing, the cutters, mixer accessory or whisk must be removed from the bowl "B3" before the ingredients.

At the end of processing, always place the guard "D2" on the universal cutter "D1".

Avoid all contact with moving parts.

Open the bowl and/or blender assembly only when the motor is stationary.

To push the food to be processed through the hole in the cover, use the feeder provided only. Never use the fingers or other objects!

When the appliance is in operation, you are recommended to position the feeders on the feed hole. Never leave the appliance unattended while in operation.

The whisk must not be used for mixing.

TABLE FOR USING THE BOWL WITH THE
UNIVERSAL CUTTER

| INGREDIENTS | Max. quantity | Speed | Period of operation |
|-----------------|-----------------|--------|---------------------|
| Meat | 700 g | Max | 10 - 20 sec. |
| Onions | 700 g | 10-15 | 10 - 20 sec. |
| Hazelnuts | 600 g | 20-Max | 10 - 20 sec. |
| Fish | 700 g | 1-20 | 10 - 20 sec. |
| Cheese | 700 g | 1-20 | 10 - 20 sec. |
| Liquids (soups) | 700 g | 1-20 | 20 sec. |
| Carrots | 700 g | 15-20 | 20 sec. |
| Bread | 4 pieces | 15-20 | 10 - 20 sec. |
| Apples | 700 g | 20-Max | 10 - 20 sec. |
| Parsley | Max. 4 bunches | Max | 10 sec. |
| Mayonnaise | Max. 4 cups/1 l | 20-Max | 20 sec. |

CUTTERS FOR SLICING/GRATING "E"

These cutters can be used to slice, chop and grate various types of vegetables, potatoes and fruit. Important! The blades are sharp!

- Before removing or fitting any accessory, always make sure the appliance is unplugged from the mains and that the ON/OFF knob "A5" is in the OFF position.
- Make sure the safety cover "A1" is closed.
- Position the bowl "B3" in its housing.
- After choosing one of the slicer or grater cutters "E", fit it on the cutter holder disk "E1" (fig. 3).
- Fit the cutter holder disk "E1" onto the motor shaft "A4" (fig. 3).
- Place the cover "B2" on the container and rotate anticlockwise until it locks into place (fig. 3).
- Add the food to be grated, chopped etc. through the opening in the cover.
Always use the feeder "B1" to push the food down. Never use the hands!
- Never use the fingers or other objects to push the ingredients into the bowl!**
- Never overfill the bowl. Never exceed 1.5 kg of food.

After completing preparation or reaching the maximum level in the bowl, turn the appliance off by turning the speed selector knob to the **OFF** position. The cutters cannot be removed until the motor is completely stationary.

Take care when removing the cutter holder disk "E1".

USING THE SEPARATOR "F" (IF PROVIDED)

- Make sure the appliance is unplugged from the mains and that the ON/OFF knob "A5" is in the OFF position.
- Make sure the safety cover "A1" is closed.
- Position the bowl "B3" in the housing.
- Place the separator "F4" and separator filter "F3" on the bowl "B3" (fig. 4).
- Place the cover "B2" on the container and rotate anticlockwise until it locks into place (fig. 4).
- Add the food through the opening and press down using the feeder "F1".
- You are recommended to use maximum speed.
- Do not open the cover "B2" until the appliance is completely stationary.
- During operation, turn the appliance off momentarily and with the help of the spatula "H" remove any pulp deposited on the filter.
- **Never use the fingers or other objects to push the ingredients into the bowl! Always use the feeder!**

USING THE JUICER "G" (IF PROVIDED)

- Make sure the appliance is unplugged from the mains and that the ON/OFF knob "A5" is in the OFF position.
- Make sure the safety cover "A1" is closed.
- Position the bowl "B3" in the housing.
- Position the juicer "G1" on the bowl and rotate until the protruding part 1 in fig. 5 locks into place on the motor assembly.
- Fit the cone "G2" onto the motor shaft "A4".
- Rotate the ON/OFF knob "A5" to the minimum position. Never operate the appliance at a faster speed.

USING THE BLENDER "C"

The blender "C3" enables a wide range of milk shakes, frappés and potages to be prepared rapidly.

To use the blender, fit the bowl "B3" and cover "B2".

- Before removing or fitting any accessory, make sure the appliance is unplugged from the mains and that the ON/OFF knob "A5" is in the OFF position.
- Open the safety cover "A1" by pressing the button "A2" (the safety cover "A1" can be opened

only after the cover "B2" has been removed).

- Fit the blender to the motor assembly.
Important: handle the cutters with extreme care.
- Position the bowl "B3" without accessories, together with cover "B2", in the housing.

Important: The blender will not operate if the cover "B2" is not correctly fitted. The bowl "B3" must be empty and without accessories, even when the blender is in operation.

- Place the ingredients to be processed into the blender "C3" and close the cover.
- Position the ON/OFF knob "A5" on the required position. When processing soft ingredients such as fruit (bananas), start at a low speed then gradually increase it as necessary. When processing hard ingredients such as carrots, you are recommended to use maximum speed. Never insert more than 300 g of hard vegetables into the blender at a time. Never use the appliance continuously for more than 20 seconds. You can chop about 300 g of ice in 15-20 seconds.

Important: to avoid the food overflowing, do not process more than 1000 ml (1 litre) of liquid at a time.

- Never use the appliance without the cover.
- When processing hot food, remove the blender cover cap "C1".
- Never touch hot parts.
- To avoid damage to persons, never introduce the hands or other objects into the blender when in operation. The spatula provided may be used only when the appliance is completely stationary.
- To remove the blender, first remove the cover of the bowl "B2".

CLEANING AND MAINTENANCE




Turn the appliance off and unplug from the mains. Never immerse the appliance in water or other liquids!

Clean the motor unit with a damp cloth only.

To clean accessories, use hot water only with normal washing up liquid.

To clean the blender "C3", fill with soapy water, place the cover in position and operate at maximum speed for 30 seconds.

Rinse and repeat if necessary.

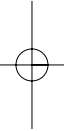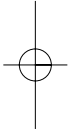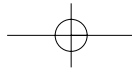

ELECTRICAL CONNECTION (U.K. ONLY)

- A) If your appliance come fitte with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitte, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitte when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer.

The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitte with a plug, please follow the instructions provided below:

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral
Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

