

READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE

GB

GENERAL WARNINGS

- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact professional personnel only.
- In the event of incompatibility between the socket and the plug on the appliance, have the plug replaced by a qualified electrician only. The use of adaptors, multiple sockets and/or extensions is not recommended. If they are unavoidable, use only simple or multiple adaptors and extensions conforming with current safety regulations. Make sure you do not exceed the power limit marked on the adaptor and/or extension.
- Models with an earth must be connected to an efficient earth installation as specified in current electrical safety regulations.
- In the event of break down, contact an authorized service centre only.
- The appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous. The manufacturer may not be considered liable for damage deriving from improper, incorrect or unreasonable use of the appliance and/or repairs carried out by unqualified persons.
- Make sure the hands, hair, clothing and kitchen utensils are clear of the container before starting the appliance. The blades may cut: handle with care.
In particular, observe the following fundamental safety rules:
 - Never touch the appliance with damp or wet hands.
 - Never use the appliance with bare or wet feet.
 - Never unplug the appliance by pulling the power cable.
 - Protect the appliance from atmospheric agents (rain, frost, sun, etc).
- Never allow the appliance to be used by children or unfit persons without surveillance.
- Never allow children to play with the appliance.
- Unplug the appliance from the mains socket when not in use.
- Never leave the appliance on for longer than necessary as it represents a potential source of danger.
- Never immerse the appliance in water.
- If the cable is damaged, have it replaced immediately by a qualified electrician.
- Before cleaning or maintenance, unplug the appliance from the mains socket.
- If the appliance breaks down or malfunctions, turn it off. If it requires repair, contact a qualified service centre only and ask for only original spare parts and accessories to be used.
- If the appliance is to be disposed of definitively, after unplugging from the mains socket, you are recommended to remove the power cable.
- Keep these instructions carefully for future consultation.

Materials and components coming into contact with food products conform to the specifications of directive EEC89/109.

Before use

Your appliance is designed to chop small quantities of food and may not be used for other purposes.

Before using it for the first time, clean the motor assembly with a damp cloth. Wash and dry all parts coming into contact with the food products carefully.

Before use

This appliance is designed to prepare sauces, purées, mayonnaise, liquidised meat products, fruit frappé etc. practically and rapidly.

1. Insert the blade and stem assembly (4) into the motor assembly and rotate until it hooks into place (see fig. 1)
2. Plug into the mains socket.
3. Place the food to be processed into the required container or the beaker provided with certain models.
4. When mixing liquids or fruit or vegetable purée, never more than half fill the beaker.
4. Immerse the stem (4) in the food and turn the appliance on using the ON/OFF button (2).
6. Mix the contents with a light movement from the top downwards. Then turn off the appliance and remove the mixer. For safety reasons, the appliance functions until the on-off button is pressed.

IMPORTANT: Never use the appliance for more than 1 minute consecutively, then turn off and allow to cool. Never operate the appliance empty.

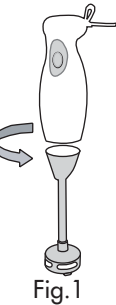 


Fig. 1

Speed regulator (certain models only)

Variable speed control enables the speed to be regulated according to your needs: low/medium/high. The table below gives a number of tips for correct use of the appliance.

Speed	Type of food
Low	Sauces, cream soups, béchamel
Medium	Sauces for pasta, mayonnaise, sour cream sauce
High	Baby food, frappé, beaten egg, purée

Wall mount (certain models only)

The appliance comes with a wall mount providing a convenient means of housing the mixer so it is always at hand. To fix the mount (6) to the wall, use the screws and anchors supplied.

Cleaning and maintenance

- Unplug from the mains socket;
- Important: never immerse the motor assembly (1) in water: to clean, use a damp cloth only.
- Accessories may be washed in warm water with normal washing up liquid.
- To facilitate cleaning and remove possible residues, operate the mixer in a recipient containing a little warm soapy water.

Tips

- When using the mixer, check the food regularly to avoid over-mixing.
- Before processing the food, always remove it from the oven and allow to cool.
- For a satisfactory result, first cut into pieces.
- For optimum results, heat the liquid to be added to soups or purées.
- Never work hard ingredients such as coffee, ice cubes or pieces of chocolate as they could damage the blades.

- During operation, place the bowl and beaker containing the food to be processed on a sponge to make the bowl more stable.
- If you use the appliance to prepare fruit-based dishes, always remember to stone the fruit before use.