



TOASTER

CTL660 - CTL680


Please retain these instructions for future reference



Living innovation

Description of Appliance

The following terms are used throughout the instruction manual

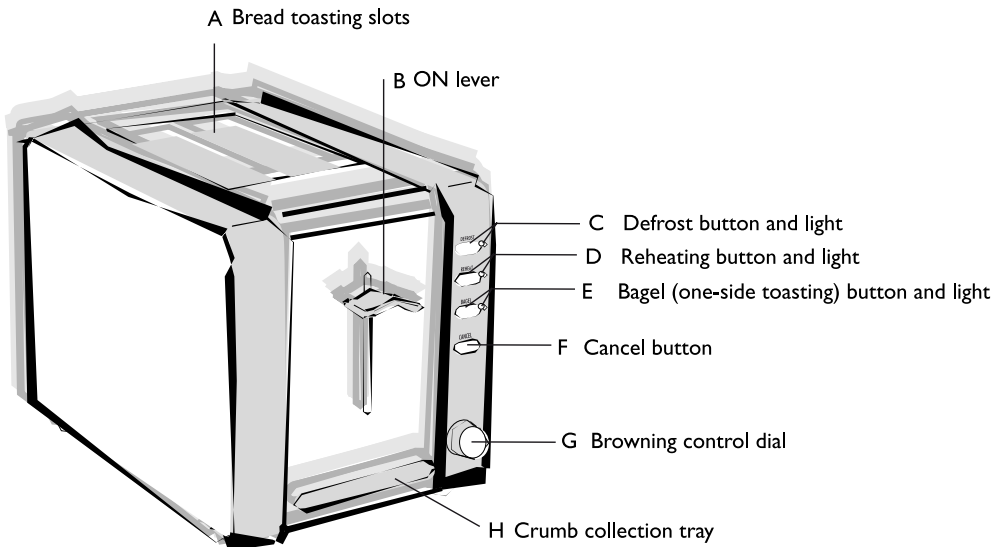

Thank you for choosing this De'Longhi Toaster. To get the best results from your new appliance please read these instructions carefully before using the appliance. This is the only way to ensure optimum results and maximum safety.

Safety Warnings

- The appliance is exclusively for the use for which it has been manufactured. Any other use is to be considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unauthorised personnel.
- This is an household appliance only. It is not intended to be used in:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- After removing the appliance from the packaging, make sure that the product is complete and in perfect condition. Ensure all labels and packaging have been removed from the toaster.
- The plastic bag in which the appliance was packaged should be kept out of reach of children as it poses a suffocation hazard.
- Remove any dust that may have accumulated on the appliance during transit by dusting it off with a soft dry cloth.
- Before inserting the plug into the electrical socket, make certain:
 - The voltage of the socket corresponds to the value indicated on the information label, attached to the appliance.
 - The electrical socket is earthed, the manufacturer declines any responsibility for the lack of observation of this norm.
- In the case of incompatibility between the socket and the plug of the appliance, have it replaced by a qualified technician. The use of adapters, multiple socket units and/or extension cables is not recommended. Whenever it may be necessary to use such equipment, it is advisable to use only single or multiple adapters or extension cables which comply with the current safety standards, and make sure not to exceed the wattage limit of the adapter or extension cable.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- To avoid electric shocks, never let the toaster, cord or plug get

wet, and NEVER put your hand or anything metal, e.g. a knife or foil, into the toaster.

- Do not touch the appliance with wet or damp hands.
- Do not use the appliance with bare or wet feet.
- The areas surrounding the bread slots become very hot during use: operating the toaster should be carried out touching only the plastic controls.
- **Bread is a foodstuff which may catch fire.**
Do not use this appliance under or next to curtains or other combustible material.
- Do not cover the appliance while it is in use, it could overheat and catch fire.
- We recommend that you do not use your toaster directly under wall cupboards
- Burnt food can catch fire, so never leave your toaster on unattended, and set the browning control lower for thin or dry bread which can burn more easily.
- Never warm food with a topping or filling (e.g. pizza): if it drips into the toaster it could catch fire.
- Clean the crumb tray regularly: crumbs can smoke or burn.
- Always unplug the toaster when not in use, before cleaning or attempting to clear jammed bread.
- Do not unplug the appliance from the outlet by pulling on the cord.
- Do not leave the appliance exposed to the elements, (rain, direct sunlight, frost, etc.).
- Do not immerse the appliance, the plug, or the electrical cable in water.
- For necessary repairs or replacement of the electrical cable, consult the technical service centre authorised by the manufacturer. Please refer to enclosed guarantee leaflet for details.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.
- Appliance is not intended to be operated by means of an external timer or separate remote-control system.

This appliance conforms to the EMC Directive 2004/108/EC and subsequent amendments relative to electromagnetic compatibility. Materials and accessories coming into contact with food conform to EC regulation 1935/2004.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Electrical Requirements (UK only)

Before using this appliance ensure that the voltage indicated on the product corresponds with the main voltage in your home, if you are in any doubt about your supply contact your local electricity company.

The flexible mains lead is supplied connected to a B.S. 1363 fused plug having a fuse of 13 amp capacity. Should this plug not fit the socket outlets in your home, it should be cut off and replaced with a suitable plug, following the procedure outlined below.

Note: Such a plug cannot be used for any other appliance and should therefore be properly disposed of, (having removed the fuse) and not left where children might find it and plug it into a supply socket - with the obvious consequent danger.


N.B. We recommend the use of good quality plugs and wall sockets that can be switched off when the machine is not in use.

Important: the wires in the mains lead fitted to this appliance are coloured in accordance with the following code:

GREEN AND YELLOW
BLUE
BROWN

EARTH
NEUTRAL
LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter **E** or by the earth symbol  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter **N** or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter **L** or coloured red.


When wiring the plug, ensure that all strands of wire are securely retained in each terminal. Do not forget to tighten the mains lead clamp on the plug. If your electricity supply point has only two pin socket outlets, or if you are in doubt, consult a qualified electrician.

Should the mains lead ever require replacement, it is essential that this operation be carried out by a qualified electrician and should only be replaced with a flexible cord of the same size.

If the plug is a moulded-on type the fuse cover must be refitted. If the fuse cover is lost, the plug must not be used until a replacement cover is obtained. The colour of the correct replacement fuse cover is that of the coloured insert in the base of the fuse recess or elsewhere on the plug. Always state this colour when ordering a replacement fuse cover. Only 13amp replacement fuses which are asta approved to B.S. 1362 should be fitted.

This appliance conforms to the Norms EN 55014 regarding the suppression of radio interference.

Warning
this appliance must be earthed

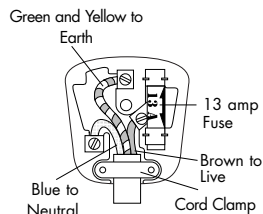

USE OF THE COMMANDS

Toast function

- Make sure that the ON lever (**B**) is raised and the dial (**G**) is set for a medium toasting level.
- Connect the appliance to the electrical outlet.
In order to eliminate the “new” smell at the first use, operate the appliance without any food inside for at least 5 minutes. Ventilate the room during this operation.
- Place the slices of bread in the toasting slots (**A**), then lower the lever (**B**) as far as it will go. Note: if the appliance is not plugged into an electrical outlet, the lever (**B**) will not remain down.
- When toasting is complete, the toaster will emit three short beeps and the lever will rise slowly up, together with the slices of bread.
- If the bread is not sufficiently toasted, select a darker degree of toasting by turning the dial (**G**). If on the other hand it is too dark, select a lighter degree of toasting.
- The toasting can be interrupted at any moment simply by pressing the cancel button (**F**).

Caution: The Bread toasting slots becomes very hot during operation.

To remove the slices of toast, push the ON lever (**B**) upwards. The bread carriage rises a further 2 cm, enabling you to take hold of the bread without burning yourself.

Defrost function

Frozen slices of bread may be toasted by pressing the defrost button (**C**) immediately after lowering the ON lever (**B**); the toasting cycle will be lengthened in order to achieve the desired browning. The warning light will remain lit while the defrost function is in use.

Reheat function

Press down the ON lever (**B**) and press the reheating button (**D**). The reheat light will remain on while the reheat function is in use. Please note that this is a fixed reheat time which cannot be adjusted by the browning control

Bagel function

The bagel function allows for the toasting of bread or the browning of muffins, etc. on one side only.

Muffins must first be sliced in half. Press down the ON lever (**B**) and press the bagel button (**E**). The outer elements of the toaster will operate at full power and the inner elements at low power.

The warning light will remain lit while the bagel function is in use.

NOTE: When using the bagel function, you should reduce the normal degree of toasting.

SUGGESTIONS

- Never use the appliance when it is empty (when there is no bread inside).
- Do not use very thin or broken slices of bread.

- Do not insert other foods that may drip during the cooking process. In addition to making the cleaning procedure more difficult, these may cause fires.
It is also very important to clean the crumb collection tray of any drippings before each use.
- Do not insert foods that are too big for the slots.
- Do not insert forks or other utensils into the toaster in order to remove bread, in so far as it may damage the elements of the appliance.
Remove the plug from the outlet and turn the appliance over, gently shaking it to remove the lodged item.

CLEANING AND MAINTENANCE

- Any cleaning and/or maintenance operation must be done after having removed the plug from the electrical outlet.
- Let the appliance cool down before proceeding with its cleaning.
- The external part of the appliance must be cleaned with a soft cloth. Do not use abrasive detergents that can ruin the surface.
- **DO NOT IMMERSE IN WATER.**
- After each use, remove the plug from the electrical outlet and empty the crumb collection tray that is under the appliance by pushing on the front. About 2 cm of the tray will emerge slowly, allowing you to remove it easily from its housing.
- Should some toast remain blocked in the toaster, remove the plug from the mains, turn the toaster over and shake it gently.
- **DO NOT TOUCH ANY PART OF THE TOASTER WITH SHARP UTENSILS, ESPECIALLY INSIDE THE BREAD TOASTING SLOTS.**

CARE AND CLEANING

- Before cleaning, unplug your toaster and let it cool down.
- The external part of the appliance must be cleaned with a soft cloth. Do not use abrasive detergents that can ruin the surface.
- **DO NOT IMMERSE IN WATER.**
- After each use, remove the plug from the electrical outlet and empty the crumb collection tray that is under the appliance.

SERVICE AND CUSTOMER CARE

- If the cord is damaged it must, for safety reasons, be repaired by De'Longhi or an authorised De'Longhi repairer in order to avoid any risk.
- Please refer to the guarantee leaflet enclosed for service and assistance details.



De' Longhi Appliances

via L. Seitz, 47
31100 - Treviso - Italia