

WARNINGS

- Read this manual carefully and keep for future reference.
- Use the appliance for domestic use only as described in the instructions.



 
Danger of electric shock!

- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate.
- Connect the appliance to sockets with a minimum current rating of 10 A only.
- When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised service centre to avoid all risk.
- Never vacuum up liquids.







Important!

- Do not allow the appliance to be used by persons (including children) with psychological, physical or sensory impairments or with inadequate experience or knowledge, unless closely supervised and instructed by someone responsible for their safety. Children must be supervised to ensure they do not play with the appliance.
- Never clean the appliance with triethylene or other solvents.
- If the appliance appears defective, do not use.
- Do not pull the power cable out beyond the point indicated by the red mark. The yellow mark before the red mark indicates that the cable is about to run out.
- For repairs or to buy accessories, contact an authorised technical service centre only.
- The manufacturer cannot be held responsible for any damage caused by tampering or improper or incorrect use of the product.
- Never unplug the appliance by pulling the power

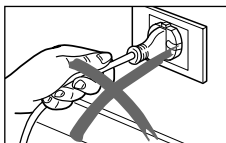

cable or the appliance itself.

    - Do not run the appliance over the power cable.
- Never vacuum up matches, ash or cigarette ends when still lit.
- Never use the appliance on wet surfaces.
- Avoid obstructing the air intake or air vent grill.
- Never vacuum up needles, staples or pieces of string.
- The manufacturer reserves the right to modify appliances and tools without warning.

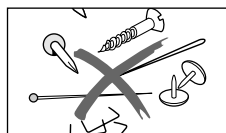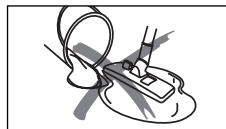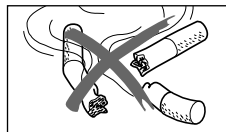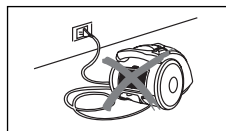

Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

DESCRIPTION

- A** Dust bag full indicator
- B** Power regulator
- C** Cable wind pedal
- D** ON/OFF button
- E** Parking position
- F** Air outlet filter
- G** Air discharge grill
- H** Dust bag compartment opening lever
- I** Dust bag holder
- L** Parking position clip
- M** Hose
- N** Two position carpet/floor brush
- O** Crevice tool
- P** Telescopic tube

ASSEMBLY INSTRUCTIONS

Assembling the appliance

Insert the hose in the coupling on the appliance and press as far as it will go (Fig.1).

Telescopic tube

Connect the telescopic tube to the end of the hose handgrip.

The telescopic extension enables the hose to be extended to the required length (fig. 2).


NB: All vacuuming tools can be connected either directly to the hose handgrip or to the telescopic extension.

USING THE CLEANING TOOLS

- **Two position carpet/floor brush**
Pos. 1: to clean hard floors, bristles out (fig.3).
Pos. 2: to clean carpets and rugs, bristles in (Fig. 4).
- **Crevice tool (fig. 5)**
Ideal for removing dust from fabric, furniture books, curtains, frames and clothing.

INSTRUCTIONS

Before using the appliance, extract the power cable completely and plug into the mains.

To rewind the cable, unplug and press the cable wind button  (fig. 6) .

Operation

To turn the vacuum cleaner on, lightly press the ON/OFF button  (fig. 7).

Suction power regulation (Fig. 8)

Move the power regulator to electronically regulate suction power according to the type of surface to be cleaned.

The maximum power of the appliance can therefore be exploited to vacuum dust from carpets or hard floors (marble, ceramics, cotto, etc) and a lower suction power to clean curtains or other light fabrics.

The hose handgrip also incorporates a mechanical suction level regulator. This enables suction power to be varied rapidly and practically by simply moving the slide.

CLEANING

Dust bag full indicator (Fig. 8)

The dust bag full indicator warns when the dust bag needs changing or the vacuum hose is blocked.

Replacing the dust bag

To change the paper dust bag, pull the bag compartment opening lever and lift the cover. Remove the dust bag holder (fig. 10) and throw away the old bag. Insert the new bag in place of the old one (fig. 11) and put the dust bag holder back in the compartment. Close the cover with slight pressure.

You should change the dust bag frequently when vacuuming up very fine dirt such as flour, talcum powder, etc.

To avoid the appliance giving off unpleasant smells, you should replace the dust bag at least twice a year.



NB: The appliance has a safety device which prevents the dust bag compartment cover being closed when there is no dust bag in place.

Motor protection filter

To extend the working life of the appliance and protect the motor, it is vital to keep the motor protection filter clean.

To access the filter, open the dust bag compartment, extract the dust bag and remove the filter holder (fig. 12).

If the filter is not excessively dirty, simply remove the dust.

If the filter is very dirty, wash by hand in cold or warm water.

Make sure the filter is dry before putting it back in the appliance.

When replacing the filter, make sure it is positioned correctly.



Important: Never wash the filter in the washing machine or dry with a hairdryer.

Air outlet filter

Your appliance is fitted with a microfilter or high efficiency filter*. This is housed under the air outlet slits.

Remove the rear grill (E), take out the filter and when visibly dirty, replace.

You should replace the filter at least every four dust bag changes.

** The high efficiency filter removes impurities down to a size of 0.3 microns, filtering all types of particle and even bacteria.*

After replacing the filter, reposition the grill correctly.



 
Important: Never use the appliance without the filter.

"PARKING" POSITION


The appliance is provided with a clip at the bottom to enable it to be put away safely and tidily in the parking position (fig. 13)

If you have to interrupt cleaning for a brief period, the appliance has a convenient hose "parking" system. Insert the bracket on the brush joint into the housing on the bottom of the appliance. Insert the bracket on the brush joint into the housing in the clip at the rear of the appliance (fig. 14).

13

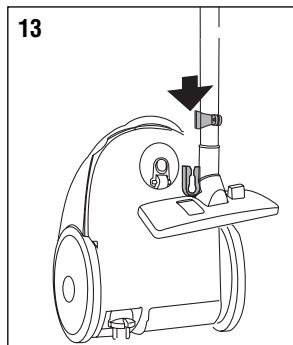

14

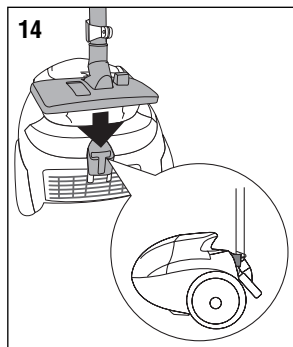 

Important: Malfunction of the appliance (low power, unusual noise or complete breakdown) could be caused by obstructed nozzles or hoses or faulty electrical components. Check the nozzles, dust bag and motor protection filter.

If this does not resolve the problem, take the appliance to an authorised service centre.

ELECTRICAL CONNECTION (U.K. ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer.

The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue:	Neutral
Brown:	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.