

## ENGLISH

**Please read this instruction booklet carefully before installing and operating the appliance. This is the only way to ensure the best results and maximum safety for the user.**

### DESCRIPTION OF THE APPLIANCE

The following terminology is used repeatedly on the following pages.

- 1 Measuring spoon
- 2 Permanent filter (if fitted)
- 3 Filter holder for drip coffee
- 4 Coffee flavour selector
- 5 Filter holder
- 6 Jug for drip coffee
- 7 Adjustable control panel
- 8 ON/OFF pilot light
- 9 ON/OFF switch
- 10 Warming plate
- 11 Power cable
- 12 Water tank cap
- 13 Removable water tank
- 14 Chlorine filter (if fitted)
- 15 Chlorine filter holder (if fitted)
- 16 Drip coffee flavour selector

### SAFETY WARNINGS

- This machine is designed to "make coffee" and to "heat drinks": be careful to avoid scalding from the water and steam jets or by using the machine incorrectly.
- Do not touch hot parts (outlet area in contact with the filter holder and the warming plate).
- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only.
- This appliance must be used for exclusively domestic purposes. All other uses are considered improper and thus dangerous.
- The manufacturer may not be considered liable for damage deriving from improper, incorrect or unreasonable use of the appliance.
- Never touch the appliance with wet or damp hands or feet.
- Never allow the appliance to be used by children or unfit persons without surveillance.
- Children must be supervised at all times to ensure that they do not play with the appliance.
- If the appliance breaks down or malfunctions, turn it off. Do not attempt to repair it. For repairs, contact an authorized Service Centre only and request original spare parts. Failure to observe the above points may affect the safety of the appliance.
- The power cable of this appliance must never be replaced by the user as it requires the use of special tools. If the power cable is damaged or needs replacing, contact an authorized Service Centre.
- Remove the plug from the mains socket and turn off the main switch when the appliance is not in use. Do not leave the appliance switched on unnecessarily.
- Never immerse the appliance in water.

## INSTALLATION

- Place the appliance on a work surface far away from water taps and basins.
- Before use, make sure the mains voltage corresponds to the voltage indicated on the rating plate on the appliance. Connect the appliance to a correctly-earthed power socket (minimum rating 10A) only. The manufacturer declines all liability for any accidents due to the incorrect earthing of the appliance.
- Never install the machine in environments where the temperature may reach 0°C or lower (the appliance may be damaged if the water freezes).
- The control panel can be rotated to ensure easy access to the controls at all times.

## CHLORINE FILTER (IF FITTED)

The filter eliminates the taste of chlorine from the water. To install the filter, proceed as follows :

- Remove the chlorine filter from the plastic bag and rinse in tap water.
- Lift the water tank cap and remove the filter holder from its housing by pulling upwards (fig. 1).
- Open the holder by pressing in the area marked "PUSH" and place the filter carefully in the holder as indicated in fig. 2.
- Close the holder and replace in its housing by pressing downwards as far as it will go.
- After 80 cycles or six months of operation, the chlorine filter must be replaced.

## HOW TO PREPARE THE DRIP COFFEE

- Lift the cap and remove the water tank (Fig. 3).
- Fill the tank with fresh, clean water up to the level corresponding to the number of cups of coffee required (Fig. 4).
- Place the tank back in the coffee maker, pressing it lightly. The tank may also be filled without being removed, using the jug marked with the level indicators (Fig. 5).
- Open the filter holder by rotating towards the right (fig. 6).
- Position the permanent filter (if fitted) in the filter holder (fig. 7). In other versions, use the #4 paper filter.
- Place the ground coffee in the filter, using the

measuring spoon supplied, and level evenly (Fig. 8). As a general rule, use a level measuring spoon of ground coffee (around 7 grams) for each cup (for example, 8 spoons to make 8 cups). If you prepare 11-12 cups, reduce the quantity of coffee and never exceed a maximum of 11 level spoons. The quantity of ground coffee used may, however, be varied according to personal taste. Use good quality, medium ground coffee, packaged for drip coffee makers.

- Close the filter holder and place the jug on the warming plate with the lid on. Make sure it is central.
- Choose the desired flavour as indicated in the paragraph "How to choose the flavour".
- Press the "ON/OFF" switch (Fig. 9). The ON pilot light above the switch indicates that the coffee maker is in operation.
- The coffee will start to come out after a few seconds. **It is completely normal for the appliance to release a little steam while the coffee is percolating.**
- If the "ON/OFF" switch is left in the ON position after percolation, the warming plate will keep the coffee at the ideal temperature.

**Important: removing the jug before all the coffee requested is made does not interrupt production of the coffee, but merely blocks flow into the jug. If you want to pour out a little coffee immediately, you are recommended to do so as rapidly as possible in order to avoid the coffee overflowing.**

## HOW TO CHOOSE THE FLAVOUR OF THE DRIP COFFEE

With the flavour selector, the flavour of the drip coffee can be selected according to personal taste. By turning the flavour selector knob (Fig. 11), the coffee maker can be set for coffee with a strong (STRONG position) or light aftertaste (LIGHT position).

The flavour selector changes the strength of the aftertaste of the coffee, while the actual taste remains the same.

**WARNING: the first time coffee is prepared, all the accessories and internal circuits of the machine must be washed as follows:**

Make at least two jugs of coffee without using ground coffee (following the instructions in the paragraph How to prepare the drip coffee).

## CLEANING AND MAINTENANCE

Before performing any cleaning or maintenance operations, turn the machine off, unplug it from the power socket and allow it to cool down.

1. When cleaning the coffee maker, do not use solvents or abrasive detergents. A soft, damp cloth is sufficient.
2. Never immerse the coffee maker in water: it is an electrical appliance.

## CLEANING THE FLAVOUR SELECTOR

To clean the flavour selector more efficiently, it can be removed from the filter holder cone by sliding it upwards (Fig. 11). To replace, simply slide in from above.

## DESCALING

If the water in your local area is hard, lime scale will form over time. These deposits may affect the correct operation of the appliance.

The coffee maker must be descaled every 40 cycles. The descaling process may be performed using special commercially-available scale removers for drip coffee makers. Alternatively, white wine vinegar can be used as follows:

1. Remove the chlorine filter.
2. Pour 2 cups of white wine vinegar and 3 cups of water into the tank. Place the tank in the coffee maker;
3. Place the jug on the warming plate, do not put any ground coffee in the filter holder;
4. Press the drip coffee ON/OFF switch, percolate the equivalent of one cup and then switch off the appliance;
5. Leave the vinegar to act for one hour;
6. Switch the coffee maker back on and percolate the rest of the solution;
7. To rinse the machine, operate it with water and without ground coffee at least 3 times (3 complete tanks of water).

## TROUBLESHOOTING

Problem	Probable cause	Solution
The drip coffee takes longer to percolate	The drip coffee maker needs to be descaled	Perform the descaling procedure as described in the paragraph "Descaling"
The coffee has a vinegary taste	The coffee maker has not been rinsed sufficiently	Rinse the appliance as described in the chapter "Descaling"