

IMPORTANT

- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only.
- Dispose of the plastic bag with care as it represents a hazard for children.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by qualified personnel only who should ensure that the cross-section of the wires leading to the socket is suitable for the power absorbed by the appliance.
- Bear the following fundamental safety rules in mind:
 - Never touch the appliance with damp hands.
 - Never use the appliance with bare or wet feet.
 - Never unplug the appliance by pulling the power cable or the appliance itself.
 - Never allow the appliance to be used by children or unfit persons without supervision.
 - Never leave the appliance plugged in as it could be a safety hazard.
 - Never place the iron under the tap to top up with water. Always use the measure provided.
 - If the power cable is damaged, have it replaced immediately by a qualified electrician.
 - The safety of this appliance is guaranteed only if correctly connected to a proper and effective earth connection as specified by current electrical safety standards and regulations. This fundamental safety requisite should be verified. If in doubt, ask a qualified electrician to check the mains system thoroughly. Failure to earth the appliance absolves the manufacturer of all liability for damage.
- When the appliance is to be discarded, after unplugging from the mains, the lead should be cut as close as possible to the iron to make the appliance unusable.
- Before cleaning or servicing, disconnect the appliance by removing the plug from the socket.
- In the event of malfunction and/or faulty operation, switch off the appliance and take it to a service centre.

- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.
- In the event of malfunction, take the iron to an authorised service centre.
- Never overfill the tank and never add stain removers or similar products.

Save these instructions for future reference. This appliance conforms to safety standards and is constructed to avoid generating radio interference in accordance with EC Directive 87/308.

MAIN COMPONENTS


A Plate	E Steam regulator +
B Transparent tank	appliance cleaning
C Spray	F Spray button
D Opening for filling tank with cover	G Super steam button
	H Indicator light
	I Thermostat knob

Read this manual thoroughly before using the appliance. This will ensure optimum results and maximum safety.



 
Important: Before plugging the appliance in, check that the mains voltage corresponds to the voltage (V) indicated on the rating plate of the iron. The socket must be efficiently earthed.

STEAM IRONING

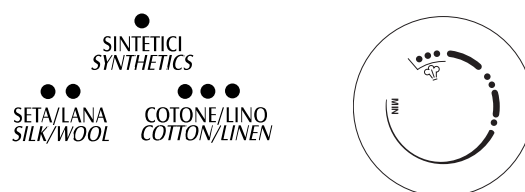
This iron works with normal tap water.


- a) Before filling the tank, make sure the steam regulator E is in the  position ("dry" position) (fig. 1). Make sure the power cable is unplugged from the mains socket.
- b) Open the cover of the opening D and pour the water into the iron (fig. 2) keeping the iron in a horizontal position.

It is important that the iron is always unplugged from the mains every time you fill or top up the water in the tank.


- c) Plug the iron into the mains socket.
- d) A special segment  on the thermostat knob I identifies the steam range. The steam will be wet if the thermostat pointer I is at the beginning of the segment and dryer if it is towards the end. Make sure the fabric to be ironed is suitable for steam ironing. When using the iron for the first time, you are recommended to pass it several times over a piece of cloth first.
- e) After these checks, select the required temperature by rotating the thermostat knob I.
- f) The indicator light H will come on to show the iron is on. After about a minute in the case of maximum temperature, the indicator light will go off showing that the iron is ready for use.
- g) Continuous steam delivery is obtained by positioning the steam regulator E in the segment between  and  (to obtain more steam). Steam delivery ceases whenever the iron is placed in a vertical position on the rear rest (position recommended during pauses in ironing) or with the iron horizontal when the steam regulator E is in the dry position.

Note: On the back of the iron there is a useful guide giving information on the temperature to set according to the garment being ironed:




Remember that the steam function can only be used when the thermostat knob I is in the  segment.

DRY IRONING

 
- Plug in the iron and select the temperature, if there is water in the tank, position the steam regulator (E) on the dry position  (fig. 1).
- Wait until the indicator light H goes off showing that the required temperature has been reached.
- If the fabric to be ironed is slightly damp or you iron fast, you can use a higher temperature. If, on the other hand, the garments are dry or you iron slowly, use a lower temperature.

SUPER STEAM (FIG. 3)

- Position the steam regulator on the dry position (fig. 1).
- Place the thermostat knob I on maximum. When the indicator light (H) goes off, press the super steam button  (G). For correct operation of the super steam function, you must wait a few seconds between one burst of steam and the next.


VERTICAL IRONING (FIG. 4)

Enables delicate garments to be steamed without resting them on the ironing board: **pay attention to the temperature used to steam hanging fabrics.**

Position the steam regulator (E) on the dry position. Rotate the thermostat knob I clockwise as far as it will go (maximum steam position). When the indicator light (H) goes off, place the iron in a vertical position and move it near the garment. Press the super steam button  (G) until the indicator light (H) comes on again. Wait until the light goes off before continuing vertical ironing.

Never direct the "vertical" steam jet at a garment hanging in a wardrobe or worn by a person. Vertical ironing should always be carried out with the garment hanging on a clothes stand and always away from other garments, elements, people and animals.

SPRAY (FIG. 5)


If during ironing, you note particularly resistant creases or if your garment requires a higher level of dampness, you can use the spray. Make sure the tank contains water. Press the spray button  (F) repeatedly, directing the spray jet towards the parts of the garment to be dampened.

Never use the spray when ironing silk as the drops of water could mark the fabric.

AFTER IRONING

To extend the working life of the iron, whenever you finish ironing, you are recommended to empty the tank as follows:

- Unplug from the mains socket.
- Open the cover D and empty the iron, holding it point downwards and shaking it gently over a basin or sink.
- To dry the remaining moisture, turn the iron on again with the thermostat I on the maximum position for about

two minutes with the steam regulator (E) on the  position.

- Unplug from the mains socket and allow to cool.
- Clean the plate with a dry cloth as traces of moisture could mark it.
- Wind the power cable around the cable winder.
- Store the iron in a vertical position.



MAINTENANCE AND CLEANING

After use, always wait until the iron is cold before putting away. Allow to cool in a vertical position. Keep the surface of the plate clean. Do not rest or use the iron on zips, hooks, rings etc to avoid scratching the plate.

Clean the plate with a damp cloth only, never use abrasives or solvents.

If the amount of steam drops during use, this could be caused by excessive build-up of scale.

To remove, proceed as follows:

- place the thermostat I on the "MIN" position (bottom position);
- position the steam regulator E on the dry position ().
- fill the tank to "MAX" level
- plug the appliance into the mains and rotate the thermostat knob I clockwise as far as it will go (maximum steam position). Leave the iron to heat up for about two minutes.
- rotate the steam regulator E anticlockwise to the  position.
- place a napkin on the work surface.
- hold the iron in a horizontal position a few centimetres above the napkin and discharge the steam until the tank is empty. During this operation you can press the super steam button G a number of times, remembering to

pause for at least five seconds between one burst of steam and the next.

- at the end, turn the thermostat I to the "MIN" position and unplug the appliance from the mains socket. Leave the iron to cool and clean the outside with a soft cloth