

**GB**

**IMPORTANT**

- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only.
- Dispose of the plastic bag with care as it represents a hazard for children.
- If the socket and mains lead plug are incompatible, have the socket changed by a qualified electrician only, who should also verify that the cross-section of the socket wires is suitable for the power absorbed by the appliance.
- Bear the following fundamental safety rules in mind:
  - Never touch the appliance with damp hands.
  - Never use the appliance with bare or wet feet.
  - Never unplug the appliance by pulling the power cable or the appliance itself.
  - Never allow the appliance to be used by children or unfit persons without supervision.
  - Never leave the appliance plugged in as it could be a safety hazard.
  - Never place the iron under the tap to top up with water. Always use the measure provided.
  - If the mains lead is damaged, have it replaced immediately by a qualified electrician.
  - The safety of this appliance is guaranteed only if correctly connected to a proper and effective earth system as specified by current electrical safety standards and regulations. This fundamental safety requisite should be verified. If in doubt, ask a qualified electrician to check the mains system thoroughly. Failure to earth the appliance absolves the manufacturer of all liability for damage.
- When the appliance is to be discarded, after unplugging from the mains, the lead should be cut as close as possible to the iron to make the appliance unusable.
- Before cleaning or servicing, disconnect the appliance by removing the plug from the socket.
- In the event of malfunction and/or faulty operation, switch off the appliance and take it to a service centre.
- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered

- inappropriate and consequently dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.
  - In the event of malfunction, take the iron to an authorised service centre.
  - Never overfill the tank and never add stain removers or similar products.
  - Save these instructions for future reference.

This appliance conforms to safety standards and is constructed to avoid generating radio interference in accordance with EC Directive 87/308.

#### MAIN COMPONENTS

---

<b>A</b> Plate	<b>E</b> Super steam button
<b>B</b> Spray	<b>F</b> Indicator light
<b>C</b> Opening for filling tank with cover	<b>G</b> Thermostat knob
<b>D</b> Spray button	<b>H</b> Steam regulator + automatic cleaning function





***Read this manual thoroughly before installing and using the appliance. This will ensure optimum results and maximum safety.***

**Important:** Before plugging the appliance in, check that the mains voltage corresponds to the voltage (V) indicated on the rating plate of the iron. The socket must be efficiently earthed.

## STEAM IRONING


---

This iron works with normal tap water.


- a) Before filling the tank, make sure the steam regulator (**H**) is in the  position ("dry" position) (fig. 1). Make sure the mains lead is unplugged from the mains socket.
- b) Open the tank opening cover (**C**) and, with the iron in a vertical position, fill the tank with water (fig. 2).  
The iron must always be unplugged from the mains whenever the tank is filled or topped-up with water.
- c) Plug the iron into the mains.
- d) A special segment,  on the thermostat knob (**G**) identifies the steam range. The steam will be wet if the thermostat pointer is at the beginning of the segment and dryer if it is towards the end. Make sure the fabric to be ironed is suitable for steam ironing. When using the iron for the first time, you are recommended to pass it several times over a piece of cloth.
- e) After these checks, select the required temperature by rotating the thermostat knob (**G**).
- f) The indicator light will come on to show the iron is on. After about a minute in the case of maximum temperature, the indicator light will go off showing that the iron is ready for use.
- g) Continuous steam delivery is obtained by positioning the steam regulator (**H**) in the segment between the  and the  position (to obtain more steam). Steam delivery stops whenever the iron is placed in a vertical position on the rear rest (position recommended while pausing during ironing) or when the iron is horizontal with the steam regulator (**H**) in the dry position.

Note: On the back of the iron there is a useful guide giving information on the temperature to set according to the garment being ironed:




*Remember that the steam function can only be used when the thermostat knob G is in the  sector.*

#### **DRY IRONING**

- Plug in the iron and select the temperature. If there is water in the tank, position the steam regulator (**H**) in the dry position  (fig. 1).
- Wait until the indicator light (**F**) goes off showing that the required temperature has been reached.
- If the fabric to be ironed is slightly damp or you iron fast, you can use a higher temperature. If, on the other hand, the garments are dry or you iron slowly, use a lower temperature.


#### **SUPER STEAM (FIG. 3)**

- Position the steam regulator (**H**) in the dry position (fig. 1).
- Place the thermostat knob (**G**) on maximum. When the indicator light (**F**) goes off, press the super steam button  (**E**). For correct operation of the super steam function, you must wait a few seconds between one burst of steam and the next.

#### **VERTICAL IRONING (FIG. 4)**


Enables delicate garments to be steamed without resting them on the ironing board: pay attention to the temperature used to steam curtains.

Position the steam regulator (H) in the dry position.

Rotate the thermostat knob (G) clockwise as far as it will go (maximum steam position). When the indicator light (F) goes off, place the iron in a vertical position and move it near the garment. Press the super steam button  (E) until the indicator light comes on again (F). Wait until the light goes off before continuing vertical ironing.

**Never direct the "vertical" steam jet at a garment hanging in a wardrobe or worn by a person. Vertical ironing should always be carried out with the garment hanging on a clothes stand and always away from other garments, elements, people and animals.**


#### **SPRAY (FIG. 5)**

If while ironing you note particularly resistant creases or your garment requires a higher level of dampness, you can use the spray. Make sure the tank contains water. Press the spray button  (D) repeatedly, directing the spray jet towards the parts of the garment to be dampened.

**Never use the spray when ironing silk as the drops of water could mark the fabric.**

#### **AFTER IRONING**

To extend the working life of the iron, whenever you finish ironing, you are recommended to empty the tank as follows:

- Unplug from the mains socket.
- Open the cover (C) and empty the iron, holding it point downwards and shaking it gently over a basin or sink.
- To dry the remaining moisture, turn the iron on again with the thermostat (G) on maximum for about two minutes and with the steam slide (H) on the  position.

- Unplug from the mains socket and allow to cool.
- Clean the plate with a dry cloth as traces of moisture could mark it.
- Wind the mains lead around the cable winder.
- Store the iron in a vertical position.

#### **MAINTENANCE AND CLEANING**

After use, always wait until the iron is cold before putting away. Allow to cool in a vertical position. Keep the surface of the plate clean. Do not rest or use the iron on zips, hooks, rings etc to avoid scratching the plate.



Clean the plate with a damp cloth only, never use abrasives or solvents.

#### **DESCALING SYSTEM**

This iron has a permanent resin scale filter installed in the tank enabling normal tap water to be used. The resins reduce the hardness of the water and therefore prolong the working life of the iron.

#### **AUTOMATIC CLEANING FUNCTION**

At regular intervals, the iron should be cleaned in depth. Proceed as follows:

- place the thermostat G on the "MIN" position (bottom position);
- position the steam regulator (H) in the "dry" position (  ).
- fill the tank to "MAX" level
- plug the appliance into the mains and place the thermostat (G) on maximum. Leave the iron to heat up for about two minutes.
- rotate the steam regulator to the  position and leave for a few seconds.
- place a napkin on the work surface.

- hold the iron in a horizontal position a few centimetres above the napkin and discharge the steam until the tank is empty. During this operation you can press the super steam button a number of times, remembering to pause for at least five seconds between one burst of steam and the next.
- at the end, turn the thermostat (**G**) to the "MIN" position and unplug the appliance from the mains socket. Leave the iron to cool and clean the outside with a soft cloth

#### **ANTI-DRIP SYSTEM**

This iron has an anti-drip system which automatically shuts off steam production when too low a temperature is set. During operation, this device may produce a squeaking sound while the iron is heating up and cooling down. This is perfectly normal and indicates that the device is functioning correctly