

ELECTRICAL CONNECTION

- Before plugging the appliance into the power point, carefully check that the voltage of the your household mains supply corresponds to the value in V indicated on the appliance, and that the power point and the power line are suitably rated for the load required.
- THIS APPLIANCE IS COMPLIANT WITH THE EEC DIRECTIVE 89/336 ON THE SUPPRESSION OF ELECTROMAGNETIC DISTURBANCE.
- The packaging elements (plastic bags, polystyrene foam, nails, etc.) must not be left within the reach of children, as they are potential sources of danger.

INSTALLATION

The appliance can be used on horizontal surfaces, with the exception of carpet, rugs or other soft surfaces.

Do not overload the electrical circuit, avoiding the use of the same power point for other appliances.

To fit the base, see figure 2.


OPERATION AND USE


The appliance is fitted with three heating elements.

- press the **I** button for operation at minimum power
- press the **I** and **II** buttons for operation at medium power
- press the **I** , **II** and **III** buttons for operation at maximum power.

Switching off: return the buttons to the initial position and unplug the power cord.

MODELS WITH MOTORISED ROTATING BASE

To distribute the radiation of heat over a larger area, press the  switch. The body of the appliance will turn to the right and the left over a 90° angle.

To stop the movement of the appliance in the desired position, simply press the  switch again.

MAINTENANCE

- Before performing any cleaning operations, always unplug the power cord.
- **Regularly clean the grille during the operating season of the appliance, with the help of a vacuum cleaner.**
- Never use abrasive powders or solvents.

WARNINGS

- Do not use this heating appliance in the immediate vicinity of bathtubs, showers or pools.
- Always use the appliance in the vertical position only.
- Do not use the appliance to dry garments.
- No furniture or other objects must be located within a distance of 150 cm in front of the appliance.
- Do not operate the appliance against walls, furniture, curtains etc.
- The power cord must be only be replaced by personnel authorised by the manufacturer.
- Do not use this appliance in a room with a floor area of less than 4 m².
- The appliance must not be located immediately underneath a fixed power point.
- Do not connect the appliance to a temperature control device, programmer, timer or

other similar devices that automatically switch on the heating elements, as covering or moving the appliance may create a fire hazard.

- The appliance is fitted with an anti-rollover device that cuts off the power supply if the appliance tips over; to resume operation, simply place the appliance in the vertical position.
- A safety device stops the operation of the heater in the event of accidental overheating (e.g. if the appliance is covered).
- To resume operation, contact the technical service department.



Important: never cover the appliance during operation, as this will lead to a dangerous increase in the temperature of the appliance.