

GB READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE**GENERAL WARNINGS**

- After removing the packaging, make sure the product is complete and undamaged. If in doubt, do not use the appliance and contact a qualified person only.
- The plastic bag containing the product must not be left within reach of children as it represents a potential hazard.
- If the plug fitted to the appliance does not match the power socket, have the socket replaced with a suitable type by qualified personnel. The use of adapters, multiple sockets and/or extensions is not recommended. If their use is unavoidable, only adapters, multiple sockets and extensions complying with current safety standards and regulations should be used, taking care not to exceed the power limit indicated on the adapter and/or extension.
- Earthed models must be connected to an efficient earth connection as specified by current electrical safety standards and regulations.
- In the event of malfunction, contact an authorised service centre only.
- The appliance must be used only for those purposes for which it was specifically designed. Any other use is considered improper and thus dangerous. The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use of the appliance and/or repairs carried out by unqualified personnel.
- Make sure that hands, hair, clothing and kitchen utensils are clear of the container before starting the appliance.

The blades can cut. Handle with care.

Special attention must be paid to the following fundamental safety rules:

- Never touch the appliance with wet or damp hands.
- Never use the appliance with bare or damp feet.
- Never unplug the appliance by pulling the power cable.
- Protect the appliance from atmospheric agents (rain, sun, frost, etc).
- Never allow children or unfit persons to use the appliance without supervision.
- Never allow children to play with the appliance.
- Unplug the appliance from the mains socket when not in use.
- Never leave the appliance on unnecessarily as it is a potential source of danger.
- Never immerse the appliance in water.
- If the cable is damaged, have it replaced immediately by a qualified electrician.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
- If the appliance breaks down or malfunctions, turn it off. Do not tamper. For any repairs, contact an authorised ser-

vice centre only and insist on the use of original spare parts and accessories.

- In the event of damage to the power cable or the appliance itself, unplug the appliance from the power socket immediately.
To prevent risk, damaged power cables must be replaced by the manufacturer or an authorised repairer only.
Under no circumstances should you attempt to open and/or repair the appliance yourself.
Contact an authorised service centre or repairer.
- When the appliance is to be discarded, after unplugging from the mains, cut the cable to make the appliance unusable.
- The appliance is fitted with a safety device preventing it from being turned on unless the bowl and cover are correctly positioned and hooked into place.
- Avoid all contact with moving parts!
- Open the bowl and/or blender when the motor is stationary only.
- To push the food to be processed through the hole in the cover, use the feeder provided only. Never use the fingers or other objects!
- Use the appliance to process food in quantities for normal domestic use only.
- Never exceed the times and quantities indicated in the instructions.

NEVER process hot food!

- Save these instructions carefully for future reference.
Materials and accessories coming into contact with food conform to EEC directive 89/109.

DESCRIPTION

A. Motor unit

- A1 Safety cover
- A2 ON/OFF knob + speed regulator + pulse operation
- A3 Motor base
- A4 Motor shaft

B. Work bowl components

- B1 Feeder with measure
- B2 Work bowl feeder
- B3 Work bowl cover
- B4 Work bowl
- B5 Reference mark

C. Blender components

- C1 Blender cover cap
- C2 Blender cover
- C3 Blender

D. Slicer and grater cutters

- D1 Cutter holder disk
- D2 Thin slicer
- D3 Thick slicer
- D4 Grater
- D5 Fine shredder
- D6 Coarse shredder
- D7 Cutter for French fries
- D8 Cutter storage compartment
- D9 Removable spacer

E. Spatula

F. Work bowl accessories

- F1 Mixer accessory
- F2 Whisk accessory

BEFORE USE

Before using the appliance for the first time, wash all accessories including the bowl "B4", blender "C3", cover and feeder in hot water and washing up liquid.

- Never immerse the motor base in water or other liquids.
- Important! The mixer accessory, slicer and shredder blades are very sharp. Handle with care.

During the first few minutes of use, there may be a slight smell. This disappears rapidly and does not represent a health hazard.

IMPORTANT:

- To use the bowl B4, the safety cover A1 must always be in position.
- To use the blender, the bowl and cover "B3" must be correctly positioned.
- Before using the blender, remove all accessories (if present) from the bowl "B4".
- **Never use the blender "C3" and the bowl "B4" at the same time.**
- Avoid damaging the blender safety device "C3" and the bowl cover closure device "B3".

CONTROLS

Turning on: turn the **ON/OFF** + speed regulator knob "A2" to one of the positions available as required. The speed can also be varied during operation.

Turning off: turn the **ON/OFF** knob "A2" to the "0" position.

Pulse operation: turn the knob "A2" to the "P" position. The appliance continues to operate while the knob is in the "P" position.

USING THE BOWL B

- Place the appliance on a dry flat surface.
DO NOT PLUG THE APPLIANCE INTO THE MAINS UNTIL ALL ACCESSORIES HAVE BEEN CORRECTLY FITTED.
- Turn the appliance off before changing accessories. Avoid contact with moving parts while the appliance is turned on.

Important! The blades are sharp!

- Position the bowl "B4" in the housing on the motor base "A3" and rotate clockwise until it hooks into place. (Note: the arrow on the bottom of the bowl "B4" must line up with the arrow on the bottom of the motor base "A3").
- Insert one of the accessories onto the motor shaft A4 according to your requirements (fig. 1):
F1 Mixer accessory (for mixing)
F2 Whisk accessory (for whisking cream, egg white, etc)
- Before turning the appliance on, make sure the accessories are positioned correctly.
- Put the ingredients to be prepared into the bowl "B4".
- Place the cover "B3" on the bowl and rotate clockwise until it locks into place (fig. 1). The symbol ▼ on the cover must coincide with the symbol ▲ on the top of the bowl "B4".
- After plugging into the mains, switch the appliance on by turning the ON/OFF + speed regulator knob "A2" to one of the positions available.

Important: handle the accessories with extreme care. Always hold the cutters by the handgrip. After processing, the mixer accessory or whisk must be removed from the bowl "B4" before the ingredients. Avoid all contact with moving parts. Open the bowl when the motor is stationary only.

To push the food to be processed through the hole in the cover, use the feeder provided only. Never use the fingers or other objects!

When the appliance is in operation, you are recommended to position the feeders on the feed hole.

Never leave the appliance unattended while in operation.

The whisk must not be used for mixing and vice versa.

Note: when making bread, use a maximum of 700 g of flour with 420 g of water and operate the appliance for 1 min ON (pos. 3) then one minute OFF (0) for a maximum of two cycles, then leave the appliance to cool down.

TABLE: USING THE BOWL WITH THE MIXER ACCESSORY

INGREDIENTS	Quantity	Velocità	Length of operation
Meat	500 g	3	10-20 sec
Onions	700 g	1	10-20 sec
Hazelnuts	400 g	3	10-20 sec
Fish	700 g	1-3	10-20 sec
Cheese	700 g	1-3	10-20 sec
Liquids (soups)	700 g	1-3	10-20 sec
Carrots	700 g	3	20 sec
Apples	700 g	3	10-20 sec
Parsley	Max. 4 bunches	3	10 sec
Mayonnaise	Max. 4 bunches / 1l	3	20 sec

SLICERS AND GRATERS "D"

These cutters can be used to slice, shred and grate various types of vegetables, potatoes and fruit.

Important! The blades are sharp!

- Before removing or fitting any accessory, make sure the appliance is unplugged from the mains and that the **ON/OFF** knob **A2** is in the **OFF** position.
- Make sure the safety cover "A1" is closed.
- Place the bowl "B4" in position.
- After choosing one of the slicers or graters "D", fit it on the cutter holder disk "D1" (fig. 2).
- Fit the cutter holder disk "D1" onto the motor shaft "A4" (fig. 2).
- Insert the removable spacer "D9" into the hole in the cutter holder disk "D1".
- Place the cover "B3" on the bowl and rotate clockwise until it locks into place (fig. 3).
- Add the food to be grated, shredded, etc through the opening in the cover.
 Always use the feeder **B2** to push the food down. Never use the hands!
- **Never use the fingers or other objects to push the ingredients into the bowl!**
- Never overfill the bowl. Never exceed 1.5 kg of food. After completing preparation or reaching the maximum level in the bowl, turn the appliance off by turning the speed selector knob to the "0" position. The cutters or accessories cannot be removed until the motor is completely stationary. Take care when removing the cutter holder disk "D1".

USING THE BLENDER C

The blender "C3" enables a wide range of milk shakes, frappés and potages to be prepared rapidly.

To use the blender, fit the bowl "B4" and cover "B3".

- Before removing or fitting any accessory, make sure the appliance is unplugged from the mains and that the ON/OFF knob A2 is in the "0" position.
- Remove the safety cover "A1" by rotating it anti-clockwise as far as it will go.
- Fit the blender to the motor base by positioning the blender with the arrow ▼ on the bottom of the blender in line with the arrow ▲ on the bottom of the appliance, then turn the blender clockwise until it hooks into place with the symbol ● (fig. 3).
Important: handle the cutters with extreme care.
- Position the bowl "B4" without accessories, together with cover "B3", in the housing.

Important: The blender will not operate if the bowl cover B3 is not correctly fitted. The bowl "B4" must be empty and without accessories, even when the blender is in operation.

- Place the ingredients to be processed into the blender C3 and close the cover by rotating it anti-clockwise as far as it will go.
- Turn the ON/OFF knob "A2" to the required position. When processing soft ingredients such as fruit (bananas), start at a low speed then gradually increase it as necessary. When processing hard ingredients such as carrots, you are recommended to cut them into small pieces and use maximum speed. Never use the appliance continuously for more than 20 seconds. You can chop about 300 g of ice in 15-20 seconds.

Important: to avoid the food overflowing, do not process more than 1500 ml (1 litre) of liquid at a time.

- Never use the appliance without the cover.
- When processing hot food, remove the blender cover cap C1.
- Never touch hot parts.
- To avoid damage to persons, never introduce the hands or other objects into the blender when in operation. The spatula provided may be used only when the appliance is completely stationary.
- To remove the blender, first remove the cover of the bowl "B3".

Note: process a maximum of 600 g of carrots with 900 g of water and operate the appliance for 3 min **ON** (pos. 2) then one minute **OFF** (pos. 0) for a maximum of ten cycles, then leave the appliance to cool down.

ACCESSORY STORAGE COMPARTMENT

A handy cutter storage compartment "D8" enables you to store cutters when not in use (fig. 4). To access it, remove the blade holder by pulling.

CLEANING AND MAINTENANCE

Turn the appliance off and unplug from the mains. Never immerse the appliance in water or other liquids! Clean the motor base with a damp cloth only. To clean accessories, use hot water only with normal washing up liquid.

To clean the blender "C3", fill with soapy water, place the cover in position and operate at maximum speed for 30 seconds. Rinse and repeat if necessary.