

GB**IMPORTANT SAFEGUARDS**

- Please read through the instruction before using this appliance and **keep this instruction manual in a safe place.**
- This appliance is intended for household use only. **Do not use outdoors.**
- Ensure that the connected voltage supply is as the same marked on the rating label.
- To prevent from electric shock, fire, personal injury and any other hazard. **Do not immerse the appliance including power cord and plug into water or other liquid nor place it under running water.**
- Do not use the appliance if it damaged or malfunctioned in any manner. Return to the Customer Service for examination and repair.
- If the main lead is damaged. It must only be replaced by qualified person in order to avoid a hazard. Do not operate the appliance with a severed or damaged cord or plug.
- No responsibility is accepted if damage results from improper use, or if these instructions are not complied with.
- Do not pull the main lead to unplug the appliance. To disconnect, grip plug and pull from the wall socket.
- Keep the appliance out of reach of the children or infirm persons. The appliance does not intend for use by children or infirm persons without supervision. Close attention is necessary when the appliance is used by or near children.
- Never dismantle the appliance yourself.
- **Do not take off the lid before the blade has completely stopped.**
- **Do not use if the blade is deteriorated or the appliance is damaged or it is not working correctly.**
- **Handle the blade with cautions because it is extremely sharp.**
- Use only original spare parts and accessories approved by manufacturer.
- Do not operate the unit with the exceed quantities indicated in these instructions.
- Do not pull the main lead across sharp edge or use the main lead to carry the appliance.
- Keep the main lead away from hot parts of the appliance.
- Unplug the appliance under the following situations:
 - After use
 - In the event of malfunction
 - Before cleaning
- The appliance is only for its intended uses as described in these instructions.
- Appliance should be used on a firm, flat and level surface.

MAIN ELEMENT OF CHOPPER

1. Top Cover
2. Switch Button
3. Power Unit
4. Lid
5. Whisking Disk
6. Plastic Bowl
7. Blade
8. Spindle

INSTRUCTION FOR USE

Before using for the first time, clean the parts of the appliance.

- 1) The power unit can just be wiped with a damp cloth. Never immerse in water or under running water.
- 2) The other parts can be rinsed or washed under running water.
Place the appliance on a flat and dry surface.
Plug in the appliance into a power point as the same voltage marked on the rating label.

PROCEDURE:

1. Chopping / Blending

- 1) Put the blade onto the spindle of the bowl.
- 2) Add the ingredients into the bowl.
- 3) Fit and lock the lid in position.
- 4) Place the power unit on the bowl and turn it slightly (fit the shaft of the blade into the axis of power unit).
- 5) Plug in the appliance and press down the button to start the operation.
- 6) Release the button, unplug the unit and wait for the blade to stop.
- 7) Remove the power unit, the lid and the blade.
Then, pour out the preparation.
- 8) Do not fill above the 0.4l marking when blending.

2. Whisking

- 1) Follow the instructions as for chopping/blending. But before adding ingredients into the bowl, place and fit the whisking disk onto the axis of the blade.
- 2) After finished, remember to remove the whisking disk for chopping / blending.

Instruction Table

Ingredients	Max. Quantities	Max. Time
Chopping / Blending - Blade		
Onion	200 g	15 sec
Hard Boiled Egg	200 g	10 sec
Garlic	150 g	5 sec
Parsley	25 g	10 sec
Celery	50 g	10 sec
Peanuts	100 g	15 sec
Nuts	100 g	15 sec
Carrots	200 g	15 sec
Cheese	200 g	15 sec
Fish	200 g	15 sec
Ham	200 g	15 sec
Meat	200 g	15 sec
Light Pastry	0.4 l	30 sec
Soup	0.4 l	30 sec
Whisking – Blade + Whisking Disk		
Whipped Cream	0.2 l	30 sec
Egg whites	4 egg whites	30 sec

The bowl graduations take account of a volume calculated with the knife in place, they are just given for reference.

CLEANING AND MAINTENANCE

Before cleaning the appliance, ensure it has been unplugged. Do not immerse the motor unit in water, detergent or put into the dishwasher except the blade, lid, whisking disk and plastic bowl.

Clean the outside surface of the motor unit with a damp cloth only. Never use abrasive cleaner or thinner for the cleaning.