

GB**IMPORTANT WARNINGS**

The following safety measures should be adopted when using electrical appliances:

- 1 Ensure that the electrical voltage of the appliance corresponds with that of your electricity supply.
- 2 Never leave the appliance unattended when it is connected to the electricity supply; unplug after use.
- 3 This appliance is not intended for use by young children or infirm persons without supervision.
- 4 Do not place the appliance over or near a source of heat.
- 5 Do not allow the power cord to touch hot surfaces.
- 6 NEVER IMMERSE THE POWER UNIT, PLUG AND POWER CORD IN WATER OR OTHER LIQUIDS. Use a damp cloth to clean them, then dry thoroughly.
- 7 NEVER TOUCH THE MOVING PARTS.
- 8 Do not operate the appliance when it is empty.
- 9 Never fill the food bowl with liquids.
- 10 The appliance should not be used for food with a hard or tough consistency (e.g.: ice cubes or meat with bones).
- 11 Never use a damaged machine. Get it checked or repaired at your nearest authorised Service Centre.
- 12 If the power cord is damaged it must for safety reasons be replaced by an authorised repairer, in order to prevent any risk.
- 13 This appliance has been designed for DOMESTIC USE ONLY and should not be used for commercial or industrial purposes.
- 14 This appliance complies with European Economic Community Directive 89/336/EEC.
- 15 The blades are sharp, handle with care. Hold at the top away from the cutting edge, both when inserting or removing it from the bowl and when cleaning.
- 16 Wait for the blade to stop completely before removing the cover.
- 17 Young children should be supervised to ensure that they do not play with this appliance.
- 18 Various spices such as cloves, dill and cumin seeds have an adverse effect on the bowl plastic and should not be processed.
- 19 Care is needed when handling cutting blades, especially when removing the blade from the bowl, emptying the bowl and during cleaning.
- 20 Accessories, other than those provided with the appliance, if any, shall include instructions for their safe use with the appliance.
- 21 Warning: Switch off the appliance before changing accessories or approaching parts

PLEASE KEEP THESE INSTRUCTIONS

Compact and convenient, your food chopper will become an irreplaceable help in the kitchen:

1. simple and easy to use thanks to its one-handed operation.
2. ideal for large quantities and instant food preparation.
3. essential for quickly chopping parsley, garlic, onions, meat, vegetables, hard cheese, dried fruit.
4. safe, because it only functions when the cover is properly fitted.
5. easy to put away due to the sucker that holds the wrapped cord in place.
6. easy to clean, simply three pieces.

DESCRIPTION OF THE APPLIANCE

Gruppo motore

- A. power unit
- B. drive shaft
- C. food bowl
- D. knife blade
- E. switch
- F. cover
- G. power cord – plug

INSTRUCTIONS FOR USE

1. Place bowl (C) on power unit (A) and knife blade (D) on drive shaft (B). Ensure that the knife blade clicks into place.
2. Cut the food to be chopped into small pieces (1,5 x 1,5 cm) and place inside the bowl. Do not place more than 200 g. of meat into the bowl, do not run the appliance for more than 20 seconds.
3. Place cover (F) on power unit (A).
4. Plug power cord (G) into the electricity supply.
5. Start the appliance by pressing down on switch (E) with the palm of the hand. The appliance performs best when a start-stop action is employed – intermittently press down on the switch for a very short time (2-3 seconds).
6. If the appliance does not function, make sure that some food has not fallen into the gap between the cover and the edge of the bowl (C).
7. A fine chopped result is obtained by scraping the food on the sides of the bowl to the centre by means of a spatula.
8. Never add liquids to combine the chopped food.
9. When mincing meat, use a maximum of 200 grams of meat cut into small pieces. This speeds up the mincing process. Never use the appliance for more than 10 seconds at a time for three consecutive cycles. Leave to cool for at least two minutes between two consecutive cycles.
10. After three operations as described in point 9, allow the appliance to cool down to room temperature.

AFTER USE

- Unplug the power cord from the electricity supply.
- Remove the cover (F) by lifting it upwards.
- Remove the knife blade (D), remove the bowl (C).
- If the appliance has been used for a long time and no longer chops in a satisfactory manner, the blade must be replaced.

CLEANING

- The bowl (C), cover (F) and knife blade (D) may be washed in the top part of the dishwasher.
- Use a damp cloth to clean the power unit. Dry thoroughly.
- Do not use abrasive cloths and detergents.
- The appliance may be stored with the power cord wrapped around the power unit, with the cord held in place by means of the sucker.