

## ENGLISH

**Read this manual thoroughly before installing and using the appliance. This is the only way to ensure best results and maximum safety for the user.**

### DESCRIPTION

The terminology below is used repeatedly on the following pages.

- A Lid knob
- B Lid
- C Filter basket for coffee
- D Handles
- E Water tube
- F Boiler
- G Power cable
- H Base
- I "Power on" indicator light
- L "At temperature" indicator light
- M Tap
- N Water level indicator (number of cups)

### SAFETY WARNINGS

- This appliance is designed to make coffee. Use with care to avoid burns caused by splashes of water or improper use of the appliance itself.
- Never touch hot parts.
- After removing the packaging, make sure the product is complete and undamaged. If in doubt, do not use the appliance and contact a qualified professional.
- This appliance is for home use only. Any other use is considered improper and thus dangerous.
- The manufacturer cannot be held responsible for any damage caused by inappropriate, incorrect or irresponsible use.
- Never touch the appliance with wet or damp hands or feet.
- Never allow the appliance to be used by children or unfit persons without supervision.
- Children must be supervised at all times to ensure they do not play with the appliance.
- If the appliance breaks down or malfunctions, unplug from the mains and do not tamper. For repairs, contact an authorized Service Centre only and request original spare parts. Failure to respect the above could reduce the safety of the appliance.
- The power cable must not be replaced by the user as this requires the use of special tools. If the power cable is damaged or needs replacing, contact an authorized Service Centre.
- Unplug the appliance when not in use. Do not leave the appliance switched on unnecessarily.
- Never immerse the appliance in water.

## INSTALLATION

- Place the appliance on a work surface far away from water taps and basins.
- Check that the mains supply voltage corresponds to the voltage indicated on the rating plate.

Connect the appliance to an efficiently earthed socket with a minimum current rating of 10 A only. The manufacturer may not be considered liable for possible incidents caused by the failure to adequately earth the mains.

- Never install the appliance in environments where the temperature may reach 0°C or lower (it may be damaged if the water freezes).
- Raise the lid by pressing and turning anti-clockwise (fig. 1). Remove the accessories stored in the appliance (filter basket and water tube).

Wash the accessories in warm water.

**Do not immerse the appliance in water**, simply rinse the inside with water and wipe with a sponge and detergent if necessary. Rinse and dry thoroughly.

## HOW TO PREPARE THE COFFEE

- Place the appliance on the base **without plugging into the mains**.
- Fill the tank with fresh, clean water up to the level corresponding to the number of cups of coffee required (fig. 2). Never fill the appliance above the 60 cups level. Monitor the quantity of water by checking the level indicator. **NEVER FILL ABOVE THE 60 CUPS LEVEL!**
- Damp the filter basket (C) and add the required quantity of coffee. Thread onto the tube (D) (fig. 3).
- Place the tube + filter basket assembly in the appliance, making sure the tube is correctly positioned at the centre of the boiler (fig. 4).
- Close the lid. To lock in place, press and at the same time turn clockwise.
- Plug into the mains. The indicator light (I) comes on (fig. 5). After a few seconds, coffee preparation begins. You can see coffee percolation in progress through the transparent knob on the lid.

- When the coffee is ready, the "READY" indicator light comes on. The coffee can now be served by pressing the tap lever.

At the end of percolation, the appliance automatically switches to the "KEEP WARM" mode and keeps the coffee hot as long as it remains plugged into the mains.

**IMPORTANT: NEVER USE THE APPLIANCE UNLESS THE LID IS CORRECTLY CLOSED.**

**NEVER put the appliance onto the base plugged into the mains unless it contains water.**

## CLEANING AND MAINTENANCE

Before cleaning or maintenance, unplug the appliance from the mains and allow to cool down. Remove the filter basket and water tube, taking care to avoid burns. Any remaining coffee and the coffee grounds could still be hot!

1. Never use solvents or abrasive detergents to clean the outside. A soft damp cloth is sufficient.
2. Rinse the inside of the appliance with warm water and neutral detergent. **Never immerse the base or the body of the coffee urn in water. It is an electrical appliance.**
3. The lid, filter basket and water tube can be washed in a dishwasher. **IMPORTANT:** make sure the bottom of the water tube is clean. If necessary, rinse the tube under running water or use a toothpick to remove coffee residues.
4. Store the appliance with the lid open.

## DESCALING

If the water in your local area is hard, lime scale will form over time. These deposits may affect the correct operation of the appliance.

The coffee maker must be descaled every 50 cycles.

To descale, use one of the special commercially-available scale removers for drip coffee makers and follow the instructions on the pack.

## TIPS

1. Before making coffee, you should operate the coffee urn without ground coffee to remove any dust collected inside the appliance.
2. To warm the coffee, remove the tube and filter basket, close the appliance well and plug into the mains. The coffee will be hot in about 20 or 60 minutes, depending on the quantity of coffee to be heated. You are not recommended to heat less than 20 cups.
3. For best results, use ground coffee specifically for drip coffee machines as it is coarser and does not pass through the filter basket. After making a number of coffees, you will be able to identify the right quantity of coffee to use. As a starting point, see table 1.

TABLE 1

NO. CUPS	NO. STANDARD MEASURES*
60	58-61
50	48-51
40	38-41
30	28-31
20	18-21
10	8-11

\* 1 standard measure is equivalent to two heaped tablespoons.

The quantities given in the table are indicative only and must be adjusted according to personal taste and the quality of the coffee.