

**GB**

*Dear customer,  
Congratulations and thank you for choosing our company.*

*Our products are the result of exhaustive technical tests backed by consolidated experience in the production of home cleaning appliances.*

*We have produced this manual to enable you to get the best from your appliance and appreciate its quality to the full.*

*If you follow our tips, we are sure the appliance will give you complete satisfaction and long and faithful service.*

*This appliance will make your everyday household cleaning easier.*

## DESCRIPTION

 
- |          |  |          |                                     |
|----------|--|----------|-------------------------------------|
| <b>A</b> | Telescopic tube or two extension tubes (depending on model)                                | <b>G</b> | Dust bag full indicator             |
| <b>B</b> | Hose/handgrip  | <b>H</b> | Handle + cable winder               |
| <b>C</b> | ON/OFF + power regulator (on handgrip or on the body of the appliance, depending on model) | <b>I</b> | Air outlet filter                   |
| <b>D</b> | Multipurpose nozzle  | <b>L</b> | Air outlet grill                    |
| <b>E</b> | Brush tool   | <b>M</b> | Dust bag compartment release button |
| <b>F</b> | Crevice tool   | <b>N</b> | Two position carpet/floor brush     |
|          |  | <b>O</b> | Shoulder strap                      |
|          |  | <b>P</b> | Extension                           |

## IMPORTANT SAFEGUARDS


- Read this manual carefully and keep for future reference.
- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate.
- Connect the appliance to sockets with a minimum current rating of 10 A only.
- **When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket.**
- Never wash the appliance with triethylene or other solvents.
- Never vacuum up liquids.
- Never leave the appliance turned on when unattended. Keep away from children and unfit persons.
- Use the appliance for domestic use only as described in the instructions.
- If the appliance appears defective, do not use.
- Do not pull the power cable out beyond the point indicated by the red mark. The yellow mark before the red mark indicates that the cable is about to run out.
- For repairs or to buy accessories, contact an authorised technical service centre only.
- The manufacturer cannot be held responsible for any damage caused by tampering or improper or incorrect use of the product.
- **To replace the power cable, contact an authorised service centre only.**

*The manufacturer reserves the right to modify appliances and tools without warning.*

Never unplug the appliance by pulling the power cable or the appliance itself.

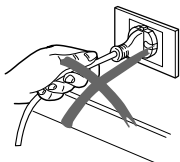

 Do not run the appliance over the power cable.

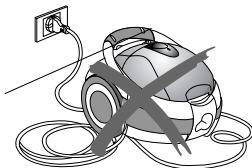


Never vacuum up matches, ash or cigarette ends when still lit.




Never use the appliance on wet surfaces.



 Avoid obstructing the air intake or air vent grill.

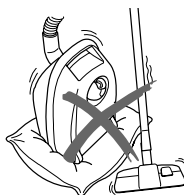

 Never vacuum up needles, staples or pieces of string.

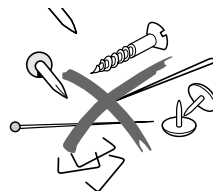

## ASSEMBLY INSTRUCTIONS

***Always unplug from the mains before attaching or removing tools.***

### Assembling the appliance

Insert the hose in the coupling on the appliance and press until it hooks into place (fig.1).

To remove the hose, press the lever at the side and pull the hose out (fig.2).

### Vacuum tubes

Connect the telescopic extension tube to the end of the hose handgrip.

Once the telescopic tube has been attached to the handgrip, press the release button and hold it down while you pull the tube out (Fig.3).

When you have pulled out the required length, release the button.

Now fit the chosen tool to the other end of the tube.

For versions without telescopic tube, join the two tubes (fig.4), connect them to the hose handgrip and attach the required tool to the opposite end.

NB: All vacuuming tools can be connected either directly to the hose handgrip or to the rigid tube.

## USING THE CLEANING TOOLS

### • Shoulder strap (fig.5)

To use the appliance for the widest possible range of cleaning needs, use the easy-to-fit shoulder strap provided.

### • Two position carpet/floor brush

Pos.1: to clean hard floors, bristles out (fig.6).

Pos.2: to clean carpets and rugs, bristles in (fig. 7).

### • Multipurpose nozzle for upholstered furniture (fig. 8)

To clean upholstered furniture, mattresses, garments, car seats etc.

### • Crevice tool (fig. 9)

to clean radiators, corners, edges, drawers, etc.

### • Dusting brush (fig. 10)


Fitted with a joint to facilitate cleaning. Particularly suitable for removing dust from fabric, furniture, books, curtains, frames and clothing.

### • Extension (fig. 11)

To clean high or difficult to reach corners, use the extension fitted with the required tool.

## INSTRUCTIONS

Before using the appliance, extract the power cable completely and plug into the mains.

To rewind the cable, unplug and press the handle + cable winder  (fig. 14) .

### Models with ON/OFF + power regulator on handgrip (fig. 12).

To turn the appliance on, move the slide on the handgrip to one of the positions according to the type of cleaning to be done.

### Models with ON/OFF + power regulator on appliance (fig. 13).

To turn the appliance on, rotate the regulator to one of the positions according to the type of cleaning to be done.

## CLEANING

### Dust bag full indicator (fig. 14)

The dust bag full indicator (G) indicates when the dust bag needs changing or the vacuum hose is blocked.

You should change the bag before the full length of the indicator turns red to guarantee optimum hygiene and the quality of the air emitted into the environment.

### Replacing the dust bag

To replace the bag, press the dust collection compartment release button (M) and raise the cover (Fig.15). Remove the dust bag carefully and throw away in the rubbish.

Thread the new bag into the guides and push as far as it will go (fig. 16).

Close the cover of the appliance by exerting light pressure. The hose coupling automatically enters the hole in the dust bag.

You should change the dust bag frequently when vacuuming up very fine dirt such as flour, talcum powder, etc.

#### NB:

The appliance has a safety device which prevents the dust bag compartment cover being closed when there is no dust bag in place.

### Motor protection filter

To extend the working life of the appliance and protect the motor, it is vital to keep the motor protection filter clean.

To access the filter, open the dust collection container, extract the dust bag and remove the filter holder (fig. 17).

If the filter is not excessively dirty, simply remove the dust.

If particularly clogged, it must be washed and dried.

Make sure the filter is dry before putting it back in the appliance.

When replacing the filter, make sure it is positioned correctly.

### Air outlet microfilter

Remove the rear grill (L), take out the filter and wash with water.

When completely dry, put back in place then reposition the grill correctly (fig. 18).

### Important warning:

Never use the appliance without the filter.

Never wash the filter in the washing machine or dry with a hairdryer.

### "PARKING" POSITION

The appliance is provided with a hose housing system on the bottom to enable it to be put away safely and tidily. (Fig.19)

If you have to interrupt cleaning for a brief period, the appliance has a convenient hose "parking" system. Insert the bracket on the brush joint into the housing on the bottom of the appliance. (Fig.20)

### IMPORTANT WARNING

Malfunction of the appliance (low power, unusual noise or complete breakdown) could be caused by obstructed nozzles or hoses or faulty electrical components.

Check the nozzles, dust bag and motor protection filter.

If this does not resolve the problem, take the appliance to an authorised service centre.