

ELECTRICAL CONNECTION








- Before plugging the appliance into the power outlet, carefully check that the mains voltage in the home corresponds to the rated voltage indicated on the appliance.
- Check that the power outlet has a capacity of 10/16 amperes.
- THIS APPLIANCE IS COMPLIANT WITH EEC DIRECTIVE 89/336 ON ELECTROMAGNETIC COMPATIBILITY.
- Only connect the appliance to outlets that are properly earthed.
- Do not use the appliance if it is damaged.

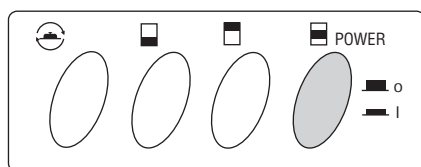
ASSEMBLY

Fit the pedestal to the appliance as follows:



- remove the two screws "A" in the base of the appliance (fig.1).
- Thread the power cable through the hole in the centre of the pedestal. Fit the pedestal to the appliance using the two screws removed previously.
- Remove the plastic cover "B" from the pedestal, carefully place the cable inside then replace the cover.

OPERATION AND USE

- Position the appliance on a flat surface at a distance of 150cm from any wall or other piece of furniture and flammable objects. DO NOT USE the appliance on unstable surfaces, such as covers or rugs.
- Make sure the "  POWER button is in the "0" position, then plug into the mains socket.
- To turn the appliance on, press the "  POWER" button.
This turns the centre heating element on.
- To also turn the top element  and bottom element  on, press the relative buttons.
- Press the  button to activate the swing function.
- To turn the appliance off, press the "  POWER" button ("  0 " position).
- When the appliance is not being used, it should be unplugged from the power outlet.



MAINTENANCE AND CLEANING

- Make sure the "  POWER" button is in the "  0 " position and unplug from the mains socket.
- Wait for the appliance to cool down.
- Only clean the outside surfaces of the appliance, using a dry cloth
- NEVER USE SOLVENTS OR ABRASIVE POWDERS.
- This appliance cannot be dismantled.

WARNINGS

- Read the instructions before using this appliance.
- Always and only operate the appliance in a vertical position.
- Do not use in bathrooms, laundries or similar areas.
- Do not use the appliance to dry the washing, and do not block the protection grille.
- Always place the appliance at least 150cm away from walls, curtains, furniture and other objects.
- The appliance must not be located in the immediate vicinity of a power outlet.
- **Important:** The appliance should never be used with programmers, timers or other devices which automatically turn the heater on as there could be a risk of fire if the appliance is covered or positioned incorrectly.
- **Do not cover the appliance during operation, so as to avoid overheating and the risk of fire.**
- Do not use this appliance in rooms with a floor area of less than 4m².
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.

SAFETY DEVICES

- **Roll-over protection device:**
This appliance is fitted with a roll-over protection device, which cuts off the power supply if the appliance tips over. When the appliance is stood upright, it will start operating again.
- **Thermal overload:**
This appliance is fitted with a thermal protection device (thermal fuse) that cuts off the power supply in the event of overheating.
If this device is activated, take the appliance to an authorised service centre for the replacement of the thermal fuse.



IMPORTANT: Never cover the appliance during operation, as this may cause a dangerous increase in the temperature and consequently activate the thermal protection device.