



**WAFFLE MAKER**  
Instructions for use

**PIASTRA ELETTRICA PER WAFFLE**  
Istruzioni d'uso

**MOULE À GAUFRES ÉLECTRIQUE**  
Mode d'emploi

**ELEKTRISCHES WAFFELEISEN**  
Gebrauchsanweisung

**ELEKTRISCH WAFELIJZER**  
Gebruiksaanwijzingen

**GOFRERA ELÉCTRICA**  
Instrucciones para el uso

**MÁQUINA DE WAFFLES**  
Instruções de utilização

**ΗΛΕΚΤΡΙΚΗ ΣΥΣΚΕΥΗ ΓΙΑ ΒΑΦΛΕΣ**  
Οδηγίες χρήσης

**VAFFELJERN**  
Brugsvejledning

**VAFFELJERN**  
Bruksanvisning

**ELEKTRISKT VÅFFELJÄRN**  
Bruksanvisning

**VOHVELIRAUTA**  
Käyttöohjeet

**ЭЛЕКТРИЧЕСКАЯ ВАФЕЛЬНИЦА**  
Инструкции по эксплуатации

**ELEKTROMOS GOFFRISÜTŐ**  
Kezelési utasítás

**ELEKTRICKÁ PLOTÝNKA NA PŘÍPRAVU OPLATKŮ**  
Návod k použití

**ELEKTRYCZNA GOFROWNICA**  
Instrukcja obsługi

## ELECTRICAL CONNECTION (UK ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

**WARNING:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse.

If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to

**WARNING - THIS APPLIANCE MUST BE EARTHED**

### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:


Green and yellow:	Earth
Blue:	Neutral
Brown:	Live



BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:


As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.


The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.



 
WR45

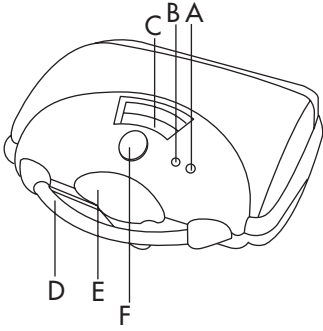

WR25

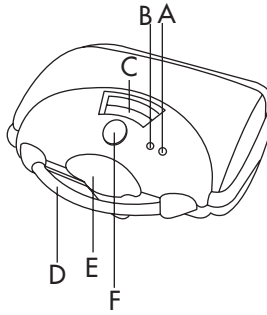 

WR30

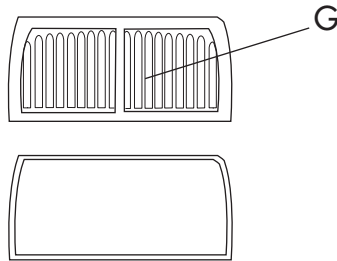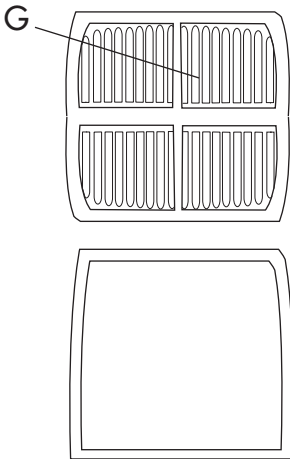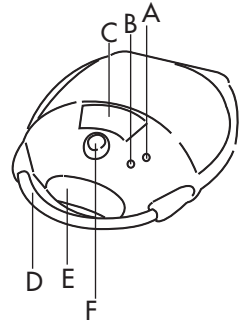   

Thank you for choosing this De'Longhi Waffle maker. To get the best results from your new appliance it is **advisable to read these instructions carefully before using the appliance.** This is the only way to ensure optimum results and maximum safety.

## Description

- A. Ready light
- B. Power light
- C. Temperature range indicator
- D. Handle
- E. Latch
- F. Adjustable thermostat
- G. Belgian and flat plates (2 of each) (models WR25-45 only)

## Using for the first time

- Before using for the first time, the baking surfaces should be cleaned with a moist cloth.
- The first two or three waffles should not be eaten. Before filling with batter, please decide if you want medium or crispy waffles by using the adjustable thermostat knob.

## Using the Waffle Maker

**Note:** make sure the plates are secure and properly in place before plugging in and turning on the waffle maker (models WR25-45 only).

- The power light will illuminate when the appliance is plugged into the outlet. The power light indicates that the unit is on and is preheating.
- The desired degree of browning can be achieved with the adjustable thermostat. Choose your desired temperature by turning the adjustable thermostat knob from low to high (or high to low) setting. When the appliance reaches the set temperature, the green ready light will illuminate and 6 beeps will sound to let you know it is time to pour the waffle (pancake) batter into the bottom of the grid (Belgian plate).

The appliance will maintain the set temperature during the entire baking process. To maximise contact with the top plate, you should cover the bottom plate completely with batter.

**Note:** be sure to close the lid before baking begins.

- The green ready light will turn off when the baking operation begins. It will light up again along with 3 beeps to let you know the waffle is done. Open the plates and check the degree of cooking of the waffle.

If necessary, close the plates again and continue cooking the batter in the appliance until it reaches the required colour.

- We recommend lightly greasing the baking surfaces every time the unit is used.

### **Note:**

- Care must be taken to ensure that fingers do not come into contact with the plates.
- Bake only with the lid closed.
- When baking is finished, open the waffle maker and remove the waffle with a plastic or wooden spatula. Never use metal knife as this may damage the non-stick coating.

**Note: the waffle maker does not turn off automatically after baking is complete. The only way to turn off the waffle maker is to remove the plug from the outlet.**

Be sure to unplug the waffle maker after each use.

**Important:** Contents are hot. Use caution when removing waffle from the plates.

Always unplug the appliance from the outlet after baking is complete. Allow to cool before taking off or putting on any parts, and before cleaning.

**Caution:** Please return the appliance to the nearest service facility for repair, adjustment and replacement when both red and green lights flash.

## Cleaning and Maintenance

- Always pull out the main plug before any cleaning operation and allow the appliance to cool down.
- Never dip the appliance into water or hold it under running water.
- Wipe down the casing with a moist cloth only.
- On models WR25-45 remove the plates for cleaning after they have cooled down.
- The plates are the only detachable parts that can be cleaned separately (on models WR25-45). Use a damp cloth and a non-abrasive cleaning detergent. Rinse and dry thoroughly.
- Never use sharp or pointed objects or any abrasive cleaning agents for cleaning purposes.
- DO NOT IMMERSE IN WATER.

## Basic recipe

**Basic batter for 6/8 persons** (the ingredients and quantities can be varied to suit individual tastes and the number of waffles required).

**Ingredients:** 200g flour, 175g castor sugar, 60g milk, 3 eggs, 175g butter (melted), 1 teaspoon vanilla essence, salt

**Preparation:** blend the butter and sugar together in a bowl, add the flour, vanilla, milk and egg yolks and mix well with an electric whisk.

Whisk the egg whites separately with a pinch of salt until stiff, then fold delicately into the mixture prepared previously.

Pour the batter onto the preheated plates and follow the instructions on page 4.

## Safety Warnings

- The appliance is exclusively for the use for which it has been manufactured. Any other use is to be considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unauthorised personnel.
- After having removed the appliance from the packaging, make sure that the product is complete and in perfect condition.
- The plastic bag in which the appliance was packaged should be kept out of reach of children as it poses a suffocation hazard.
- In order to remove the dust that may have accumulated on the appliance, simply dust it off with a soft cloth.
- Place the appliance on a horizontal surface at a height of at least 85 cm and out of reach of children.
- Before inserting the plug into the electrical outlet, make certain:
  - the voltage of the outlet corresponds to the value indicated on the information label, attached to the appliance.
  - the electrical outlet is adequately earthed.The manufacturer declines any responsibility for the lack of observation of this norm.
- In the case of incompatibility between the outlet and the plug of the appliance, have it replaced by a qualified technician. The use of adapters, multiple socket units and/or extension cords is not recommended. Whenever it may be necessary to use such equipment, it is advisable to use only simple or multiple adapters or extension cords which comply with the current safety standards, and make sure not to exceed the voltage limit of the adapter or extension cord.
- When the appliance is plugged into the electrical outlet, and moreover, while it is turned on, ensure that fingers do not come into contact with the plates.
- Before using for the first time, operate the appliance empty with the thermostat at maximum for at least 15 minutes to eliminate the "new" smell and any smoke caused by the

presence of protective substances applied to the elements before transport.

During this operation, ventilate the room.

- Never allow the appliance to be used by children or used without adult supervision or unfit person. Do not leave unattended.
- Do not touch the appliance with wet or damp hands.
- The metal sides of the appliance become very hot during use: operating the appliance should be carried out touching only the plastic dials and handles.
- Do not use this appliance under or next to curtains or other combustible material.
- Do not cover the appliance while it is in use.
- Do not use the appliance with bare or wet feet.
- Unplug the appliance from the electrical outlet when it is not in use.
- Do not leave the appliance on when not being used as this may be potentially dangerous.
- Do not move the appliance while in use.
- Never position the appliance near heat sources.
- Do not leave inflammable products near the appliance or under the work surface where it is located.
- Do not use the appliance as a heat source.
- Never place paper, cardboard or plastic inside the waffle maker and never rest anything on top of the appliance (utensils, wire racks, other objects).
- If food or other parts of the appliance catch fire, never try and put out the flames with water. Unplug from the mains and smother the flames with a damp cloth.
- Given differences in legislation, if the appliance is used in a country other than that where it was bought, have it checked by an authorised service centre.
- This appliance is designed for domestic use only.
- Professional or inappropriate use, or failure to observe the instructions absolves the manufacturer from all responsibility and invalidates the guarantee.
- Adjustments, repairs and replacement of the power cable must be carried out by personnel authorised by the manufacturer or the service centre only.

Repairs performed by unauthorised personnel could be dangerous.

- Do not let the power cable dangle and keep it away from hot parts of the appliance.
- Do not unplug the appliance from the outlet by pulling on the cord.
- Do not leave the appliance exposed to the elements, (rain, direct sunlight, frost, etc.).
- Before doing any cleaning or operation, unplug the appliance from the electrical outlet. Do not immerse the appliance, the plug, or the electrical cord in water.
- In case of break down or improper functioning of the appliance, turn off the appliance without tampering with it. For necessary repairs or replacement of the electrical cord, consult the technical service centre authorised by the manufacturer.

This appliance conforms to the Directive 89/336/CEE relative to electromagnetic compatibility.

The materials and the objects destined for contact with food products are in compliance with the regulations of the EEC directive 89/109.

**Keep these instructions**