

ELECTRIC STOVE

Instructions for use

STUFA ELETTRICA

Istruzioni d'uso e manutenzione

POÊLE ÉLECTRIQUE

Mode d'emploi et entretien

ELEKTRISCHER KAMINOFEN

Bedienungsanleitung

ESTUFA ELÉCTRICA

Instrucciones para el uso y el mantenimiento

LAREIRA ELÉCTRICA

Instruções de utilização e manutenção

ELEKTRIČNA PEĆ

Upute za uporabu

GENERAL INSTRUCTIONS

Remove the stove from the packaging, checking that neither the stove nor the power cable has been damaged during transportation. Do not operate the stove if damaged.

The pebbles/coal are found within the packaging down the sides of the stove, so ensure that the accessories are removed before discarding any packaging.

FITTING THE LEGS

Remove the legs from the polystyrene packaging. Lay the stove on its back on a rug or soft surface in order to prevent damaging the paint finish.

Screw the three legs firmly into the three holes in the base of the stove and place it in an upright position.

POSITIONING OF THE STOVE

Your stove is designed for use throughout your living area, such as against a wall, in a corner or within a fireplace to add instant warmth and ambience.

Position the fire so that the plug socket is accessible.

Always ensure there is sufficient airflow, otherwise the operation of the stove will be compromised.

IMPORTANT: Always operate the stove with the legs attached. Failure to do this will present a danger of overheating.

PLACING THE PEBBLES/ COAL

Depending on which stove you have purchased you will find pebbles or coal packed with your stove. In order to place the pebbles/coal on the shelf within the stove you will need to remove the silver front panel.

The front panel is held in place by two magnets at the top and by two pegs at the bottom.

Remove the silver front panel of the stove as follows:

1. Firmly hold both sides of the silver front panel
2. Carefully pull the top of the panel towards you, away from the magnets
3. Slide the panel upwards until the pegs come out of their holes

Once the stove is placed in your chosen location, unpack the pebbles/coal from the accessory box. The pebbles/ coal are natural; therefore variation in size, shape and colour will occur.

Arrange the coal/ pebbles as you wish using as many as you require.

If your stove has pebbles, we suggest spreading the smaller ones across the shelf as a base. The 3 large pebbles should then be placed on top with the medium ones used to fill any gaps where light could escape.

To replace the front panel, relocate and slide the pegs back into their holes and push the top of the panel to reconnect with the magnets.

LIGHT PATTERN AND PIPE ACCESSORY PACKS

To customise the stove to your liking the following accessories are available for purchase:

1. Accessory packs of different coloured filters are available.
2. A metal stove "mock flue" pipe is available as an additional accessory. If this is not available for sale through your retailer please contact Customer Services.

OPERATING THE STOVE

The stove is controlled by a row of 3 switches located above the stove's front right leg.

Turning on the Light Pattern and Flame Effect

The light pattern can operate with or independently from the heat.

The nearest switch to the front of the stove turns the light pattern on and off.

Pressing this switch down, turns the light pattern on with no heat, so that you may enjoy the flame effect all year round. When this switch is pressed up, the light pattern is off.

Heat Levels

For minimum heat, press the switch marked with one bar (1kW).

For maximum heat, press both the switch marked with one bar and the switch marked with two bars (2kW).

Automatic Safety Cut Out

This heater is fitted with an automatic cut out to prevent any damage due to overheating. The heater will automatically cut out if the airflow is obstructed. To reset the stove, disconnect the plug from the power socket for a few minutes, remove the cause of obstruction and allow a suitable cooling period before plugging it in again.

Noise

As with all fan driven appliances the stove will make some noise due to the movements of air occurring, this is perfectly normal.

MAINTENANCE

Before any maintenance/cleaning is undertaken always disconnect the stove from the power supply.

Replacing light bulbs

The heater fitted with two 60W daylight (craftlight) bayonet cap bulbs.

The heater comes fitted with two 40W red bayonet cap bulbs.

Replacements are available from good hardware/large DIY stores.

To change the bulbs you will need to remove the silver front panel, but first, allow a suitable time for the bulbs to cool.

The bulbs can easily be changed as follows:

1. Firmly hold both sides of the silver front panel
2. Carefully pull the top of the panel towards you, away from the magnets
3. Slide the panel upwards until the pegs come out of their holes
4. Now the bulbs can be changed (use bulbs as described above).
5. Replace the panel by relocating and sliding the pegs back into their holes and pushing the top of the panel to reconnect with the magnets.

Please note that replacement bulbs are not covered by the guarantee of the product.

Cleaning

The fire can be cleaned with a soft damp cloth. Do not use metal polish or harsh scouring agents.

WARNINGS

- Do not use the stove in a bathroom or in the vicinity of bathtubs, washbasins, showers or swimming pools.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- Never install the stove directly underneath a fixed mains socket.
- Never for any reason cover the appliance during operation.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of appliance.
- In order to avoid any danger caused by accidental resetting of the safety system, this appliance must not be powered through an external timer.
- Do not use the fire in rooms which have an area as small as 4m²
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of small children.
- Particular caution should be applied to ensure that young children do not play with or swallow any pebbles or coal.
- Should you wish to connect the fire to a fused spur, this must be carried out by a competent electrician in accordance with the IEE wiring regulations.
- The appliance is not intended for use by young children or infirm persons without supervision.
- The front side of the heater must be positioned at least 50 cm from furniture, walls, curtains, or other objects.



Important: never cover this appliance during operating as this could lead to dangerous overheating.

PROBLEM SOLVING

No power to the fire	Check the wall socket and plug and fuse
No Illumination/ flame effect	Check that fire is switched on. Check that the bulbs are working.
Heater cuts out/ poor or no flame effect	Check that airflow around the stove is not obstructed or the product covered in anyway.

ELECTRICAL CONNECTION (UK Only)

 
Your appliance comes fitted with a plug and will incorporate a 13 amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead and an appropriate one fitted as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse the circuit must be protected by a 15 amp fuse.

If the plug is a moulded-on type, the fuse cover must be refitted when changing the fuse using a 13amp Astra approved fuse to BS1362. In the event of losing the fuse cover, the plug must not be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that marked on the base of the plug.


WARNING - THIS APPLIANCE MUST BE EARTHED **IMPORTANT**

The wires in the mains lead are coloured in accordance with the following code:



Green and yellow: Earth
Blue: Neutral
Brown: Live

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.