

IMPORTANT

- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only.
- Dispose of the plastic bag with care as it represents a hazard for children.
- If the socket and mains lead plug are incompatible, have the socket changed by a qualified electrician only, who should also verify that the cross-section of the socket wires is suitable for the power absorbed by the appliance.
- Bear the following fundamental safety rules in mind:
 - Never touch the appliance with damp hands.
 - Never use the appliance with bare or wet feet.
 - Never unplug the appliance by pulling the power cable or the appliance itself.
 - Never allow the appliance to be used by children or unfit persons without supervision.
 - Never leave the appliance plugged in as it could be a safety hazard.
 - Never place the iron under the tap to top up with water. Always use the measure provided.
 - If the mains lead is damaged, have it replaced immediately by a qualified electrician.
 - The safety of this appliance is guaranteed only if correctly connected to a proper and effective earth system as specified by current electrical safety standards and regulations. This fundamental safety requisite should be verified. If in doubt, ask a qualified electrician to check the mains system thoroughly. Failure to earth the appliance absolves the manufacturer of all liability for damage.
- When the appliance is to be discarded, after unplugging from the mains, the lead should be cut as close as possible to the iron to make the appliance unusable.
- Before cleaning or servicing, disconnect the appliance by removing the plug from the socket.
- In the event of malfunction and/or faulty operation, switch off the appliance and take it to a service centre.
- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered inappropriate and consequently dangerous.
- The manufacturer is not liable for damage caused by inappropriate

te, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.

- In the event of malfunction, take the iron to an authorised service centre.
- Never overfill the tank and never add stain removers or similar products.
- Save these instructions for future reference.

This appliance conforms to safety standards and is constructed to avoid generating radio interference in accordance with EC Directive 87/308.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to

obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

MAIN COMPONENTS


A	Plate	F	Super steam button
B	Spray	G	Spray button
C	Opening for filling tank with cover	H	Indicator light
D	Display	I	Steam regulator/automatic cleaning function
E	ON/OFF - temperature regulation button		

Read this manual thoroughly before installing and using the appliance. This will ensure optimum results and maximum safety.



Important: Before plugging the appliance in, check that the mains voltage corresponds to the voltage (V) indicated on the rating plate of the iron. The socket must be efficiently earthed.

STEAM IRONING

This iron works with normal tap water.


- a) Before filling the tank, make sure the steam regulator (I) is in the  position ("dry" position) (fig. 1). Make sure the mains lead is unplugged from the mains socket.
- b) Open the tank opening cover (C) and, with the iron in a vertical position, fill the tank with water (fig. 2).
The iron must always be unplugged from the mains whenever the tank is filled or topped-up with water.
- c) Plug the iron into the mains. You will hear a beep, the indicator light (H) comes on and "STAND BY" flashes on the display;
- d) Select the required temperature by pressing button (E). If you select "MAX", "●●●" or "●●", the plate temperature will be suitable for steam ironing. If you select "MAX" and "●●●" the steam will be dry, if you select "●●" the steam will be wetter.

Make sure the fabric to be ironed is suitable for steam ironing. When using the iron for the first time, you are recommended to pass it several times over a piece of cloth.

- e) "STAND BY" is still displayed. When the selected temperature is reached, you will hear two beeps, "STAND BY" disappears and the display indicates the selected temperature.
- f) "STAND BY" will appear and disappear on the display during ironing, according to the temperature of the iron. This is part of normal operation.
- g) Continuous steam delivery is obtained by positioning the steam regulator (I) in the segment between the  and the  position (to obtain more steam) (Fig. 1). Steam delivery stops whenever the iron is placed in a vertical position on the rear rest (position recommended while

pausing during ironing) or when the iron is horizontal with the steam regulator in the dry position.

Note: On the back of the iron there is a useful guide giving information on the temperature to set according to the garment being ironed:

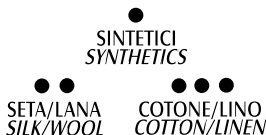


Remember that the steam function can only be used when the highest temperatures are selected.

- h) Turn the iron off by pressing button (E) until "STAND BY" reappears on the display and the display light goes off.

DRY IRONING


- Plug in the iron and select the temperature. If there is water in the tank, position the steam regulator in the dry position ~~ON~~ (fig. 1).
- Wait until "STAND BY" disappears from the display (D). When the selected temperature is reached you will hear two beeps.
- If the fabric to be ironed is slightly damp or you iron fast, you can use a higher temperature. If, on the other hand, the garments are dry or you iron slowly, use a lower temperature.
- Turn the iron off by pressing button (E) until "STAND BY" reappears on the display (D) and the display light goes off.

SUPER STEAM (FIG. 3)

- Position the steam regulator (I) in the dry position (fig. 1).
- Select maximum temperature by pressing button (E) until the word "MAX" appears on the display (D). Wait until "STAND BY" disappears from the display (D). When the selected temperature is reached, you will hear two beeps. Press the super steam button  (F). For correct operation of the super steam function, you must wait a few seconds between one burst of steam and the next.

VERTICAL IRONING (FIG. 4)

Enables delicate garments to be steamed without resting them on the ironing board: **pay attention to the temperature used to steam curtains.**

- Position the steam regulator (I) in the dry position. Select maximum temperature by pressing button (E) until "MAX" appears on the display (D).
- Wait until "STAND BY" disappears from the display (D). When the selected temperature is reached you will hear two beeps. Hold the iron in the vertical position and move it near the garment, then press the super steam button (F)  until "STAND BY" appears on the display. Wait a few seconds until it disappears before proceeding with another burst of steam.

Never direct the "vertical" steam jet at a garment hanging in a wardrobe or worn by a person. Vertical ironing should always be carried out with the garment hanging on a clothes stand and always away from other garments, elements, people and animals.

SPRAY (FIG. 5)


If while ironing you note particularly resistant creases or your garment requires a higher level of dampness, you can use the spray. Make sure the tank contains water. Press the spray but-

ton  (G) repeatedly, directing the spray jet towards the parts of the garment to be dampened.

Never use the spray when ironing silk as the drops of water could mark the fabric.

AFTER IRONING

Turn the iron off by pressing button (E) until "STAND BY" reappears on the display (D) and the display light goes off. To extend the working life of the iron, whenever you finish ironing, you are recommended to empty the tank as follows:

- Unplug from the mains socket.
- Open the cover (C) and empty the iron, holding it point downwards and shaking it gently over a basin or sink.
- To dry the remaining moisture, turn the iron on again at maximum temperature for about two minutes with the steam regulator (I) in the  position.
- Unplug from the mains socket and allow to cool.
- Clean the plate with a dry cloth as traces of moisture could mark it.
- Wind the mains lead around the cable winder.
- Store the iron in a vertical position.

MAINTENANCE AND CLEANING

After use, always wait until the iron is cold before putting away. Allow to cool in a vertical position. Keep the surface of the plate clean. Do not rest or use the iron on zips, hooks, rings etc to avoid scratching the plate.


Clean the plate with a damp cloth only, never use abrasives or solvents.

DESCALING SYSTEM

This iron has a permanent resin scale filter installed in the tank enabling normal tap water to be used. The resins reduce the hardness of the water and therefore prolong the working life of the iron.

AUTOMATIC CLEANING FUNCTION

At regular intervals, the iron should be cleaned in depth. Proceed as follows:

- select minimum temperature "●"
- position the steam regulator (I) in the "dry" position ("X").
- fill the tank to "MAX" level
- plug in the iron and select "MAX" temperature. Leave the iron to heat up for about two minutes.
- rotate the steam regulator (I) to the  position and leave for a few seconds.
- place a napkin on the work surface.
- hold the iron in a horizontal position a few centimetres above the napkin and discharge the steam until the tank is empty. During this operation you can press the super steam button (F) a number of times, remembering to pause for at least five seconds between one burst of steam and the next.
- Turn the iron off by pressing button (E) until "STAND BY" reappears on the display and the display light goes off. Unplug the iron, leave to cool and clean the outside with a soft cloth

ANTI-DRIP SYSTEM

This iron has an anti-drip system which automatically shuts off steam production when too low a temperature is set. During operation, this device may produce a squeaking sound while the iron is heating up and cooling down.

This is perfectly normal and indicates that the device is functioning correctly.

AUTO SHUT-OFF

If the iron is not used and left in the horizontal or lateral position for more than 30 seconds, the "AUTO SHUT-OFF" device is activated. Shutting down of the iron is indicated by a long beep.

If the iron is left in a vertical position, the auto shut-off device is triggered after eight minutes.

When the iron is turned off, "AUTO-OFF" appears on the display (D) and the display light goes off. When work is resumed, "AUTO-OFF" disappears from the display and the display light comes on again. If the temperature has dropped, "STAND BY" is displayed until the selected temperature is reached (indicated by two beeps).

NB: if the control button is pressed while the appliance is in "AUTO SHUT-OFF", the display comes on again and a temperature lower than the previous temperature is selected.