

Dear customer,
Congratulations and thank you for choosing our company.


GB

Our products are the result of exhaustive technical tests backed by consolidated experience in the design and production of home cleaning appliances.

We have produced this manual to enable you to get the best from your appliance and appreciate its quality to the full.

If you follow our tips, we are sure the appliance will give you complete satisfaction and long and faithful service.

This appliance will make your everyday household cleaning easier.

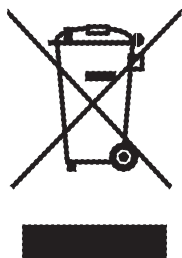

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

DESCRIPTION


- | | | | |
|----------|---|-----------|--|
| A | Multipurpose nozzle for upholstered furniture | H | ON/OFF pedal |
| B | Crevice and brush tool | I | Suction power regulator |
| C | Carpet/floor brush | L | Cable winder pedal |
| D | Flexible hose/handgrip | M | Dust collection container release button |
| E | Telescopic extension with standby position | N | Rear filter (certain models only) |
| F | Dust bag full indicator | N1 | HEPA filter (certain models only) |
| G | Accessory compartment | O | Air outlet grill |

IMPORTANT


- Read this manual carefully and keep for future reference.
- **Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate.**
- Connect the appliance to sockets with a minimum current rating of 10 A only.
- When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket.
- Never wash the appliance with triethylene or other solvents.
- Never vacuum up liquids.
- Never leave the appliance turned on when unattended. Keep away from children and unfit persons.
- Use the appliance for domestic use only as described in the instructions.
- If the appliance appears defective, do not use.
- For repairs or to buy accessories, contact an authorised technical service centre only.
- The manufacturer cannot be held responsible for any damage caused by tampering or improper or incorrect use of the product.
- **To replace the power cable, contact an authorised service centre only.**

The manufacturer reserves the right to modify appliances and tools without warning.

Never unplug the appliance by pulling the power cable or the appliance itself.

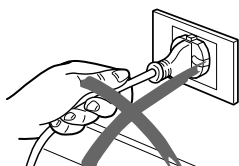


Avoid the power cable getting tangled in the wheels of the appliance.

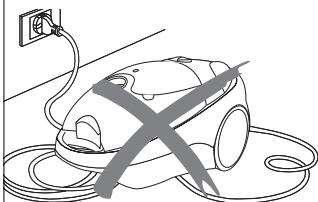

Never vacuum up matches, ash or cigarette ends when still lit.




Never use the appliance on wet surfaces.

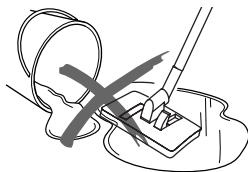

Avoid obstructing the air intake or air vent grill.



Never vacuum up needles, staples or wire.

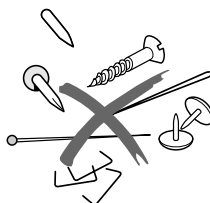


ASSEMBLY INSTRUCTIONS

Always unplug from the mains before attaching or removing tools.

Fitting tools

Attach the hose to the coupling on the appliance, pressing the two levers at the sides and pushing it in as far as it will go (fig. 1).

To remove the hose, press on the two levers at the sides and pull the hose out.

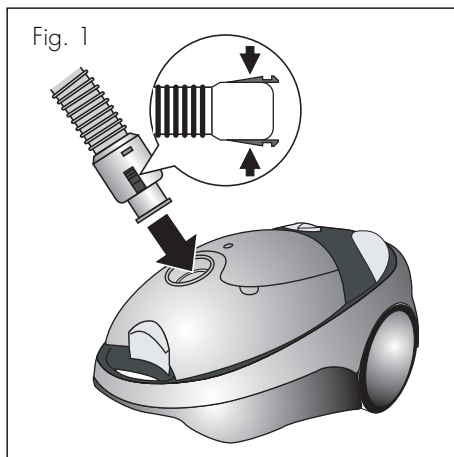


Vacuum tubes

Connect the telescopic extension tube to the end of the hose handgrip.



After fitting the extension tube to the handgrip, rotate the inner tube towards the right and pull it out for the required length (Fig.2). Fix by rotating the tube towards the left, then fit the chosen nozzle to the other end of the tube.


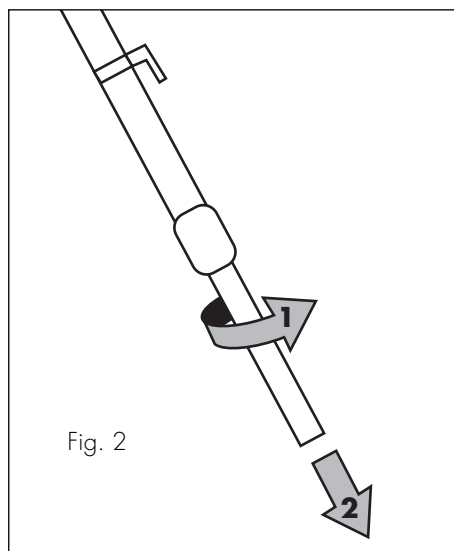
NB: All vacuuming tools can be connected either directly to the hose handgrip or to the rigid tube.



USING THE CLEANING TOOLS

- **Two position carpet/floor brush**


Pos. 1: to clean hard floors, bristles out ().
Pos. 2: to clean carpets and rugs, bristles in ().

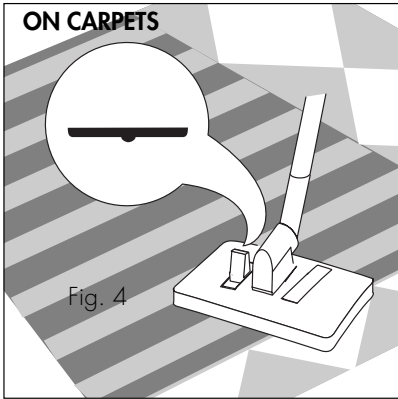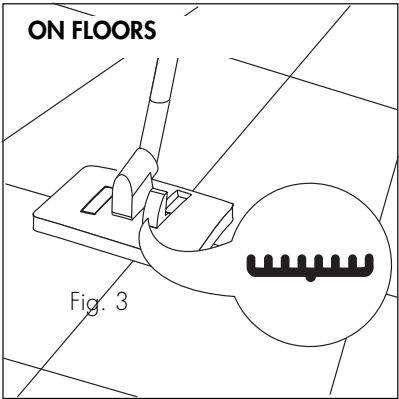

Select the position of the bristles using the lever on the brush.


- **Multipurpose nozzle for upholstered furniture**

To clean upholstered furniture, mattresses, garments, car seats etc.
For curtains, set the power to minimum.

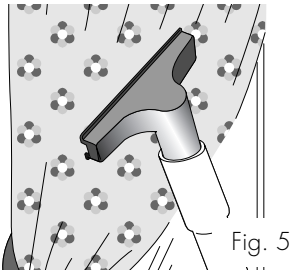

- **Crevice tool with brush**

To clean corners, edges, drawers, etc.
To use the brush, turn the end of the tool in the direction indicated by the arrow. The bristles make the tool particularly suitable for removing dust from fabrics, furniture, books, curtains, mouldings and garments.


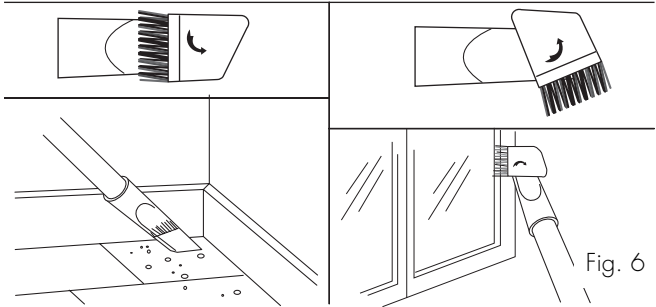


INSTRUCTIONS

Before using the appliance, extract the power cable completely and plug into the mains.

To rewind the cable, unplug and press the cable wind pedal

ⓐ (L) (fig.7) .

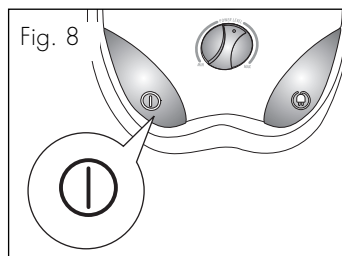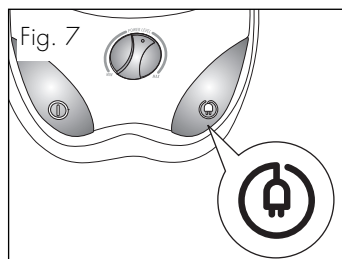


Turning on

To turn the appliance on and off, press the ON/OFF ⓐ (H) (fig.8).


Electronic suction power regulation (Fig.9)

Suction power can be varied using the electronic regulator (H) on the appliance. The electronic regulator enables suction power to be varied according to the type of surface to be treated. Maximum suction power can be used to vacuum dust from carpets or hard floors (marble, ceramics, cotto, etc.), while reduced suction power can be used to clean curtains or other light fabrics.

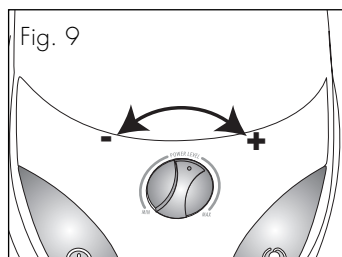

Mechanical suction power regulation (Fig.10)


The hose handgrip incorporates a mechanical suction regulator. Suction can be adjusted rapidly and practically by simply moving the slide.

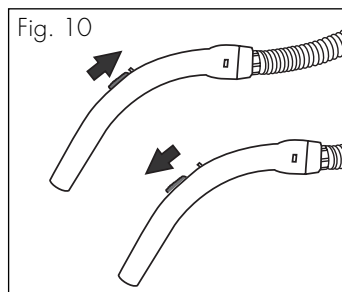

CLEANING


Dust bag full indicator (fig.11)

The dust bag full indicator (**F**) signals when the dust bag needs changing or the tool being used is clogged. The dust bag should be changed before the whole length of the indicator becomes red to guarantee maximum hygiene and the quality of air emitted into the room.

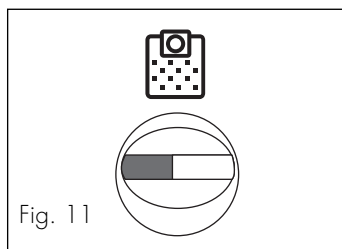

Replacing the bag



To change the dust bag, press the dust collection container release button (**M**) and lift the cover (fig. 12), extract the bag holder (fig.13), remove the dust bag and throw away. Thread the new dust bag into the guides and push in as far as it will go (fig. 14a). Replace the bag holder (fig.14b) and close the cover of the appliance pressing lightly. The hose coupling automatically enters into the hole in the dust bag. You are recommended to replace the dust bag often when vacuuming up fine dirt such as flour, talcum powder, etc.

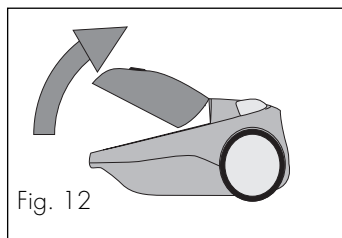

NOTE:

The appliance has a safety device which prevents the dust collection container cover from being closed unless a dust bag is in place.


Never operate the vacuum cleaner without the dust bag as this could damage operation of the appliance.

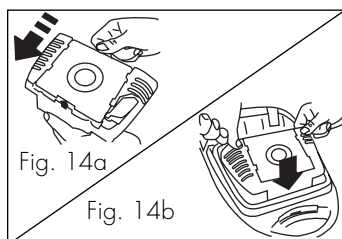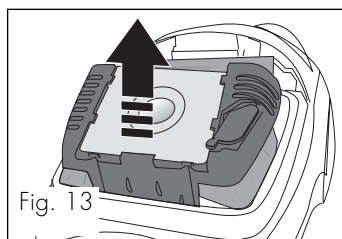

Motor protection filter (Fig. 15)

To guarantee a long working life and protect the motor it is essential to keep the motor protection filter clean. To access the filter, open the dust collection container, extract the dust bag and remove the filter holder (fig. 15). Then extract the filter from the filter holder.

If the filter is not excessively dirty, simply remove the dust. If the filter is very dirty, wash and dry it. Make sure the filter is completely dry before replacing in the filter holder, then in the appliance.

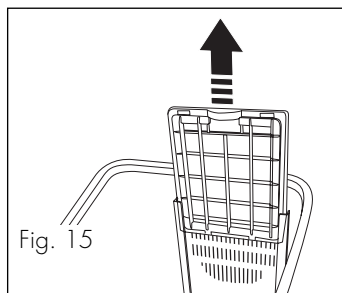

Rear filter

According to the model, your appliance is fitted with either a micro filter or a high efficiency filter (**HEPA Filter****).

The filter is located under the air outlet grill. To replace, press and lift the grill (●) (fig.16). To replace the filter, rest in position then reclose the grill with a light pressure until the clip hooks into place. If your appliance has an HEPA filter, make sure you position it with the rubber side facing the appliance. You are recommended to replace the filter at least every five dust bag changes. For models with an HEPA filter, you are recommended to replace it every four dust bag changes.

****** The HEPA (High Efficiency Particulate Air) filter removes impurities down to 0.3 microns in size, filtering all types of particulate and even bacteria.

Important:

Never use the appliance without the filter.

TUBE HOUSING

To enable it to be put away safely and tidily, the vacuum cleaner has an extension tube storage system. Insert the mount on the telescopic extension tube into the special housing on the bottom of the appliance. (Fig.17)

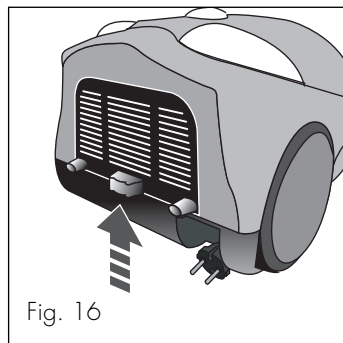


Fig. 16

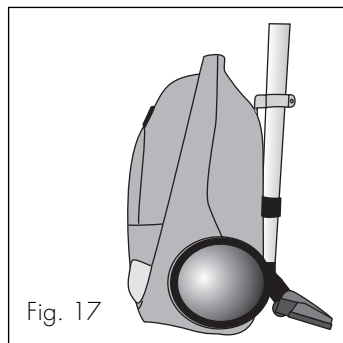


Fig. 17

IMPORTANT

If the appliance is turned on with the suction power regulator at maximum but vacuum power is low, check the tubes, dust bag, motor filter in the dust collection container and rear filter. If this does not resolve the problem, take the appliance to an authorised service centre.