

**GB**

*Dear customer*

*Congratulations and thank you for choosing our company.*

*Our products are the result of exhaustive technical tests backed by consolidated experience in the production of home cleaning appliances. We have produced this manual to enable you to get the best from your appliance and appreciate its quality to the full.*

*If you follow our tips, we are sure the appliance will give you complete satisfaction and long and faithful service.*

*This appliance will make your everyday household cleaning easier.*

**Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.**



At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

## DESCRIPTION


- |          |   |           |                                     |
|----------|---|-----------|-------------------------------------|
| <b>A</b> | Multipurpose nozzle for upholstered furniture   | <b>L</b>  | Cable wind pedal                    |
| <b>B</b> | Crevice tool                                    | <b>M</b>  | Vacuum power regulator              |
| <b>C</b> | Crevice tool with brush                         | <b>N</b>  | ON/OFF pedal                        |
| <b>D</b> | Brush for delicate floors (certain models only) | <b>O</b>  | Dust bag full indicator             |
| <b>E</b> | Carpet/floor brush                              | <b>P</b>  | Dust bag compartment opening button |
| <b>F</b> | Tool holder                                     | <b>Q</b>  | Rear filter (certain models only)   |
| <b>G</b> | Flexible hose with handgrip                     | <b>Q1</b> | HEPA filter (certain models only)   |
| <b>H</b> | Parking position clip                           | <b>R</b>  | Air discharge grille                |
| <b>I</b> | Telescopic extension                            |           |                                     |

## IMPORTANT


- Read this manual carefully and keep for future reference.
- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate.
- Connect the appliance to sockets with a minimum current rating of 10 A only.
- When not in use or before cleaning or maintenance, always unplug the appliance from the mains socket.
- Never wash the appliance with triethylene or other solvents.
- Never vacuum up liquids.
- Never leave the appliance turned on when unattended. Keep away from children and unfit persons.
- Use the appliance for domestic use only as described in the instructions.
- If the appliance appears defective, do not use.
- For repairs or to buy accessories, contact an authorised technical service centre only.
- The manufacturer cannot be held responsible for any damage caused by tampering or improper or incorrect use of the product.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre in order to avoid all risk.
- Never allow the appliance to be used by persons (including children) with psychological, physical or sensory impairments or with insufficient knowledge, unless closely supervised and instructed by someone responsible for their safety. Always supervise children. Make sure they do not play with the appliance.

*The manufacturer reserves the right to modify appliances and tools without warning.*

Never unplug the appliance by pulling the power cable or the appliance itself.

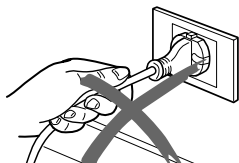


Make sure the power cable does not tangle in the wheels of the appliance.

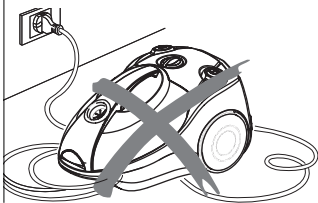


Never vacuum up matches, ash or cigarette ends when still lit.




Never use the appliance on wet surfaces.

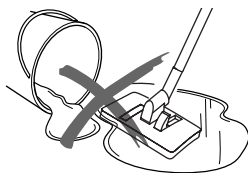

Do not obstruct the suction port or the air vent grille.

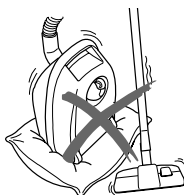

Never vacuum up needles, staples or pieces of string.

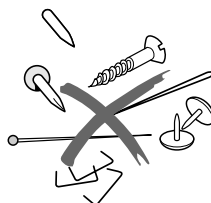


## ASSEMBLY INSTRUCTIONS

***Always unplug from the mains before attaching or removing tools.***

### Fitting the tools

Insert the flexible hose in the coupling on the appliance, press the lateral fixing levers and push as far as it will go (Fig.1).

To remove the hose, press the lateral fixing levers and pull the hose out.

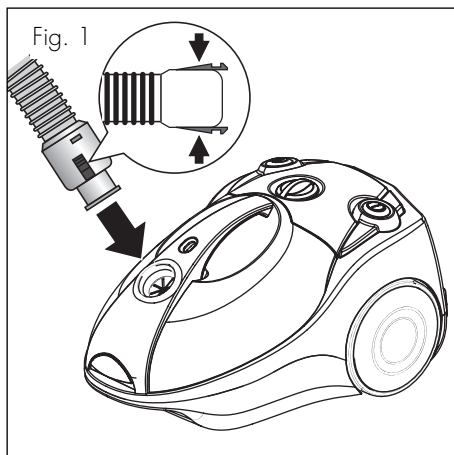


### Telescopic extension

Connect the telescopic extension to the end of the hose handgrip.

After attaching the telescopic extension to the handgrip, rotate the inner tube towards the right and pull out to the required length (fig. 2). To fix, rotate the tube to the left.


Now fit the chosen tool to the other end of the extension.

N.B: All vacuuming tools can be connected either directly to the hose handgrip or to the telescopic extension

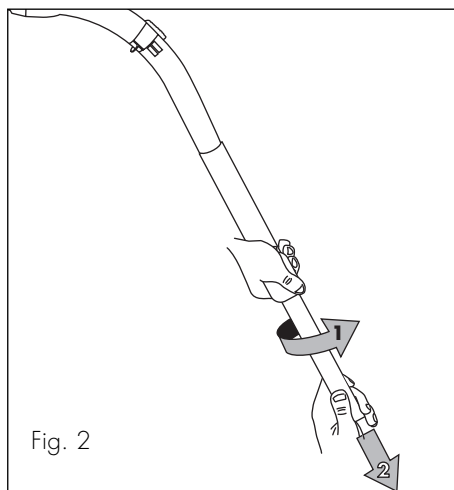

### Tool holder (Fig. 3)


The tool holder on your appliance enables you to keep the smallest tools close at hand. After attaching the tools to the tool holder, hook the tool holder to the hose near the handgrip.


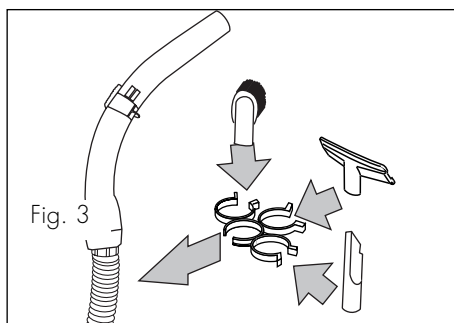


# USING THE CLEANING TOOLS

- **Two position carpet/floor brush**

Pos. 1 : to clean hard floors, bristles out (  ).


Pos. 2: to clean carpets and rugs, bristles in (  ).

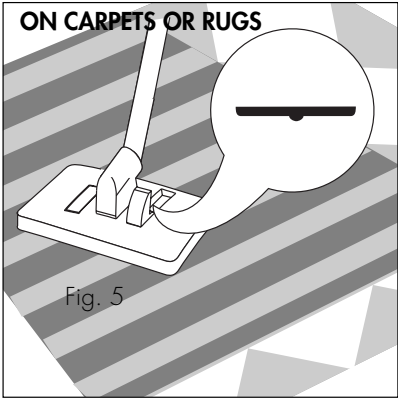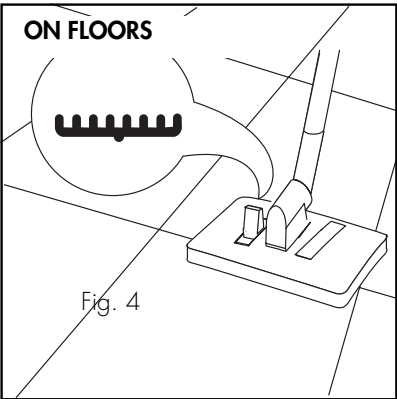

Use the lever on the brush to set the position of the bristles.


- **Multipurpose nozzle for upholstered furniture**

To clean upholstered furniture, mattresses, garments, car seats etc. Set minimum power for curtains.

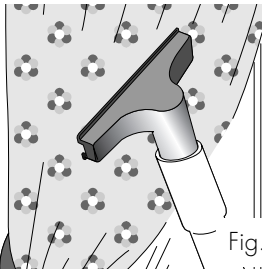


- **Crevice tool**

To clean radiators, corners, edges, drawers, etc.

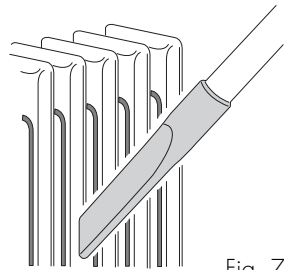


- **Dusting brush**

Fitted with a joint to facilitate cleaning. Particularly suitable for removing dust from fabric, furniture, books, curtains, frames and clothing.

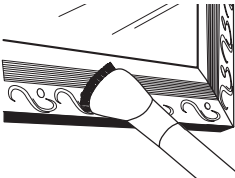


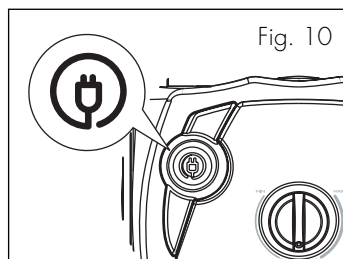
- **Brush for cleaning delicate floors**

This special brush has soft natural horsehair bristles and felt wheels which run over even the most delicate floor without damaging it, leaving it perfectly clean

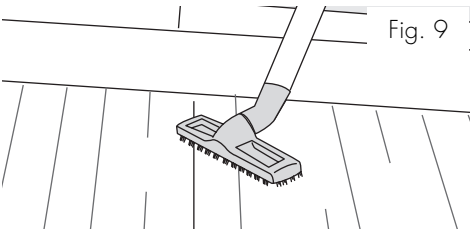


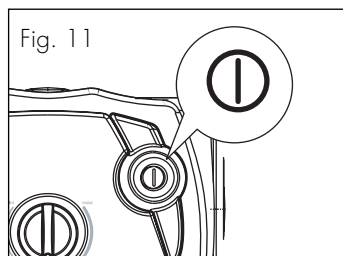
## INSTRUCTIONS

Before using the appliance, extract the power cable completely and plug into the mains. To rewind the cable, unplug and press the cable wind pedal  (L) (fig. 10).



### Turning on

To turn the appliance on and off, press the ON/OFF pedal switch  (N) (fig. 11).




### Electronic suction power regulation (fig. 12)

The electronic regulator (M) on the appliance varies the suction power.


The electronic regulation enables suction power to be varied according to the type of surface to be cleaned.

The maximum power of the appliance can therefore be exploited to vacuum dust from carpets or hard floors (marble, ceramics, cotto, etc) and a lower suction power to clean curtains or other light fabrics.

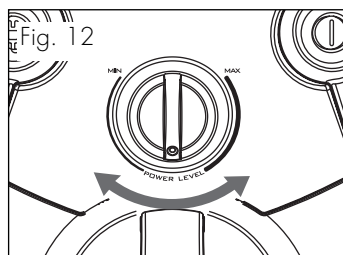

### Manual suction power regulation (fig. 13)


The hose handgrip incorporates a mechanical suction regulator. This enables suction power to be varied rapidly and practically by simply moving the slide.

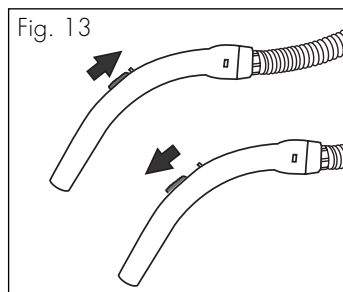

## CLEANING

### Dust bag full indicator (fig. 14)

The dust bag full indicator (●) indicates when the dust bag needs changing or the vacuum hose is blocked. You should change the bag before the full length of the indicator turns red to guarantee optimum hygiene and the quality of the air emitted into the environment.


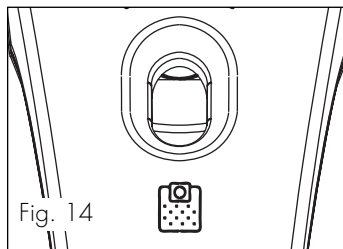


### Replacing the dust bag

To change the dust bag, press the dust bag compartment opening button (P) and lift the cover (fig. 15). Remove the dust bag support (fig. 16a), close the bag by pulling the tab (fig. 16b), remove the bag and throw away. Insert the new dust bag into the guides, following the direction of the arrow (fig. 17a) and push as far as it will go.

Replace the dust bag support (fig. 17b) and close the cover of the appliance by exerting light pressure. The hose coupling automatically enters the hole in the dust bag.

You should change the dust bag frequently when vacuuming up very fine dirt such as flour, talcum powder, etc.

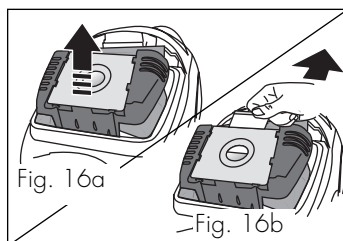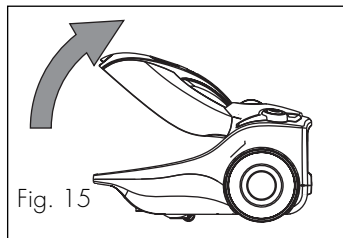


### NB:

The appliance has a safety device which prevents the dust bag compartment cover being closed when there is no dust bag in place.

### Never use the appliance without the dust bag.

This could damage operation of the appliance.

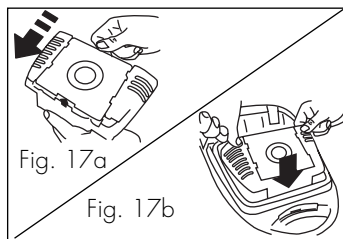


### Motor protection filter (fig. 18)

To extend the working life of the appliance and protect the motor, it is vital to keep the motor protection filter clean.

To access the filter, open the dust bag compartment, extract the dust bag and remove the filter holder (fig. 17).

Then remove the filter from the filter holder.

If the filter is not excessively dirty, simply remove the dust. If particularly clogged, it must be washed and dried. Make sure the filter is completely dry before putting back in the filter holder, then in the appliance.

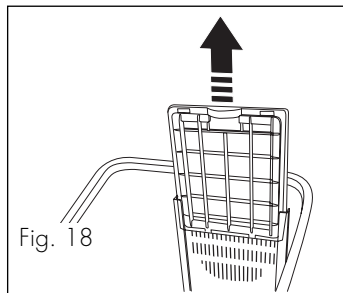

## Back filter

Depending on the model, your appliance is fitted with a microfilter or high efficiency filter (**HEPA Filter\*\***)

This is housed under the air outlet slits.

To replace, press and lift the grille (R) (fig. 19).

Replace with the new filter, then close the grille, pressing lightly until it clicks into place. If your appliance has a **HEPA** filter, make sure the rubber part is facing the appliance.

You should replace the filter at least every five dust bag changes. For **HEPA** filter models, replace the filter every four dust bag changes.

*\* The HEPA Filter (High Efficiency Particulate Air) removes impurities down to a size of 0.3 microns, filtering all types of particle and even bacteria.*

## Important warning:



Never use the appliance without the filter.

## PARKING POSITION

The telescopic extension can be stored away tidily using the special clip.

Insert the extension mount in the special clip (H) at the bottom of the appliance (Fig. 20).

The tools provided can also be stored tidily on the tool holder attached to the flexible hose.

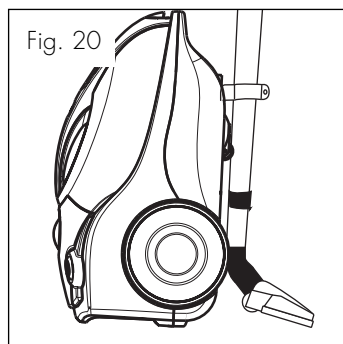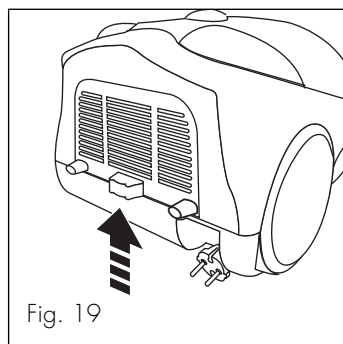

## IMPORTANT WARNING

If the appliance is turned on and the vacuum power regulator is at maximum, but vacuum power is low, check the hose and extension, the dust bag, the motor filter in the dust bag compartment and the back filter.

If this does not resolve the problem, take the appliance to an authorised service centre.