

**GB****GENERAL WARNINGS**

Read this instruction booklet carefully before using the appliance.

This is the only way to ensure the best results and maximum safety for the user.

Keep this booklet with care for future reference.

1. After having removed the packaging, make sure that the appliance is complete. If in doubt, do not use the appliance and only contact qualified personnel or an authorised service centre.
2. The appliance must be used exclusively for the purposes it has been expressly designed for, that is, to dry bath towels and garments. All other uses are considered incorrect and thus dangerous. Take care when using the appliance with particularly delicate garments (wool, silk, nylon, etc). The manufacturer cannot be held responsible for any damage caused by improper, erroneous and unreasonable use.  
**NOTE:** This appliance is designed exclusively for drying fabrics washed in water.
3. The use of any electrical appliance requires the observance of a number of fundamental rules, specifically:
  - DO NOT TOUCH the appliance with wet or damp hands or feet.
  - DO NOT LEAVE the appliance exposed to the elements.
  - DO NOT ALLOW the appliance to be used by children or unfit persons without supervision.
  - DO NOT unplug the appliance from the outlet by PULLING on the cord.
4. If the plug fitted to the appliance does not match the power outlet, have the outlet replaced with one that is suitable by qualified personnel.
5. To dispose of the appliance definitively, after having unplugged it from the power outlet, it should be rendered unusable by cutting the power cord.
6. The electrical feed cord must be replaced only by officially authorised personnel.

**Do not use water directly on the appliance or in its immediate vicinity.**

**DO NOT IMMERSE IN WATER.**

**DESCRIPTION OF THE APPLIANCE**

**A**= Swing arm

**B**= ON/OFF switch with signal light

**C**= Towel warmer

**D**= Towel warmer/upright fastening screws

**E**= Base with wheels

**F**= Upright/Base screws

**G**= Upright

**H**= Knob

**INSTALLATION**

Insert the base with wheels **E** onto the upright **G**, as shown in figure 1, then fasten the parts together using the three screws (**F**).

Insert the towel warmer **C** on the upright assembly **G/E**, making sure that the die **X** on the upright is correctly fitted to the corresponding guide **Y** (see Figure 2), after inserting the heated towel rail into the stand (**G**), fix it with the screw (**D**) supplied, pushing the end of the plastic part (**I**) downwards to align it with the holes (fig3).

The position of the appliance must not allow a person to touch the controls from inside the bathtub or in the shower. Keep the appliance at least 50 cm from flammable objects and substances. The power outlet used for this appliance must be outside of the areas in which the presence of water may represent a source of danger. (Fig. 5)

### ELECTRICAL CONNECTION

- Before plugging the appliance into the power outlet, carefully check that the mains voltage in your home corresponds to the value in V indicated on the appliance.
- Check that the power outlet is suitably rated for the data shown on the appliance's rating plate.
- THIS APPLIANCE CONFORMS TO EEC DIRECTIVE 89/336 AND THE ITALIAN MINISTERIAL DECREE 476/92 ON ELECTROMAGNETIC COMPATIBILITY.

### INSTRUCTION FOR USE

To switch on the appliance, press switch **B**. The light on the switch will indicate that the appliance is on. The appliance is useful for warming or drying bath towels. By pulling knob **H** and at the same time lifting the swing arm **A**, it can be moved to position 2 (see Fig. 6). On releasing knob **H**, the swing arm **A** is locked in position 2. To switch the appliance off, press switch **B** again. This position may be useful for warming or drying longer items, such as beach towels, dressing gowns, etc. To switch the appliance off, press switch **B** again.

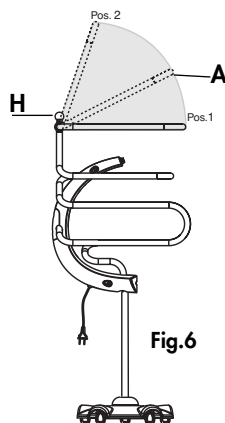


Fig.6

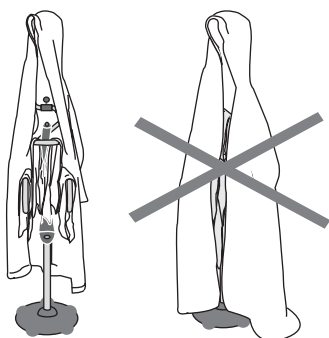


Fig.7

**Never cover the ON/OFF switch (fig.7)**

### MAINTENANCE

Before performing any operations, always check that the appliance is unplugged from the power outlet. This appliance does not require special maintenance, however, when cleaning, do not use abrasive cloths or equipment that may damage its appearance, but rather a cloth dipped in warm water and/or neutral detergent.