

GB



IMPORTANT: Do not cover the appliance during functioning, this could cause a dangerous temperature increase of the radiator.

1. GENERAL INSTRUCTIONS

Take the radiator out of its packing box and remove any polystyrene pieces or any other packaging material that might be lodged inside it.

Make sure that the radiator has not been damaged during transit and that the mains cable is in working order.

2. FITTING THE FEET

Remove the feet and the wheels from the polystyrene packing. Turn the radiator upside-down on a rug or a soft surface in order to prevent damaging the paint finish.

Insert the anchor tabs on the feet into the slots in the radiator (fig. 1).

Use the 2 screws supplied with the appliance to fasten the feet in position (fig. 2). Fit the wheels to the spindles on the feet and push firmly until they click into position. Pull each wheel to check that it is correctly inserted.

3. ELECTRICAL CONNECTION

- Before using the appliance check that your supply voltage is the same of that shown on the rating label of the unit and that the power socket and power supply line correspond to the load specified.
- Check also that the current capacity of your fuses. **CONNECT YOUR HEATER TO EARTH PROVIDED SOCKET ONLY.**
- This appliance complies with EEC Directive 89/336, relating to electro-magnetic compatibility.

4. OPERATION AND USE

Plug the heater into the electric socket and the light  will come on.

Setting the clock

 
Set the clock to the correct time, proceeding as follows:

- Press the **"hour"** button until the display shows the hours for the correct time, then release the button.
- Press the **"min"** button until the display shows the minutes for the correct time, then release the button.

When setting the correct time, the numbers will flash on the display.

The clock will continue to flash for a few seconds after the adjustment has been made then stop on the correct time and start working.

To change the time, press the **"hour"** or **"min"** button for at least 5 seconds, then proceed as above to modify both hours and minutes.

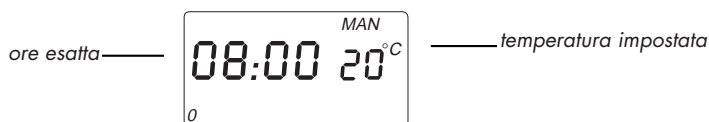

OPERATION OF HEATER - WITHOUT TIMER - (MANUAL)

To operate the heater without timer press the **"ON MODE"** button. By pressing the **"ON MODE"** button one or more times, the appliance will select the operating heating power, as follows:

Maximum power



 
Medium power



Minimum power



Off



If Maximum power has been selected, press the “+” or “-” button to select the desired comfort temperature from 5 to 35°C. By pressing the “+” or “-” button the desired temperature (shown on the right side of the display) will increase or decrease by 1°C. Keep pushbutton pressed to move through the temperature in fast mode.



This heater has Electronic Climate Control which automatically monitors and selects the ideal power setting to maintain your chosen temperature.

If the selected temperature is higher than the actual room temperature, the appliance will start automatically and rapidly heat the room until it reaches the selected temperature. The unit will automatically maintain the temperature at a constant level, by switching between maximum, medium, minimum power and OFF (If the room temperature exceeds the selected temperature level the appliance will switch off).

If medium power level has been selected using the “**ON MODE**” button, the appliance will modulate between medium, minimum power and OFF to maintain a selected temperature.

FROST STAT FUNCTION

Press the “**ON MODE**” button (it is recommended to select the maximum power level). Set the temperature to 5°C with the “-” button. When set in this way, the appliance will switch on automatically only if the room temperature falls below 5°C, thereby preventing freezing, at minimum energy consumption.

N.B. This function is not guaranteed in the event of power failures, lasting more than 2 minutes.

5) PROGRAMMING THE ELECTRONIC TIMER

The timer allows you to set 2 programmes in a 24 hour period.

1- Press the “ AUTO” button, this accesses the 1st programme (programme A). The yellow timer ON lamp will light up.

 
- 2- Set the start time for your programme by pressing the "HOUR" button to set the hour and the "MIN" button to set the minutes.
- 3- To select how long you require the heater to be on, push the "+min" button repeatedly until your chosen operating timespan appears. The time periods you are able to choose from are (15', 30', 45', 1hr, 2hr, 4hr (max)).
- 4- To program a second time period (programme B), press the "⌚ AUTO" button twice and then proceed as above to select the start hours and minutes. The set time will be the same as for the first programme. When the operating time is changed, the time of both programmes is updated.
- 5- Use the "⬆ +" or "⬆ -" buttons to set the desired comfort temperature, as described above.



Display when setting
programme A




Display when setting
programme B



Display when setting for
45 mins operating time

 6- When set in this way the heater will automatically switch on at the set time for the designated time period and automatically maintain the preset comfort temperature. To cancel a programme, press the "⌚ AUTO" button and then the "hour" buttons until the display shows as below.



TIMER OVERRIDE

To operate the appliance without using the timer, press the "ON MODE" button (Fig.3). The yellow lamp will go off.

IMPORTANT

You must leave the heater plugged in at the mains socket to keep the heater's memory programmed.

If the heater loses its electricity supply for more than 2 minutes, e.g. if unplugged or in the event of a power failure, the heater's programmes will be lost, and the timer will not work until reset. In such an instance the display will show flashing numbers.

On using the appliance for the first time, turn it on to the maximum power and the highest temperature setting for at least 2 hours. This is to eliminate the 'new odour', which is released by the appliance. During this time ensure that the room is well ventilated.

5. MAINTENANCE

Your oil filled radiator is absolutely free from maintenance, fully reliable and will give many years of trouble free service. Wipe radiator with soft damp cloth; do not use detergents or abrasives.

If necessary, use a vacuum cleaner to remove any built-up dirt (fig. 4).

6. MPORTANT NOTES

- Do not use your heater close to bath, wash-basin, shower and swimming pool.
- Do not use your radiator to dry laundry.
- Do not lay the cable on the hot unit.
- The heater must always service in upright position.
- If the electric cable has been damaged, it must be replaced by the manufacturer or the technical service centre or by a qualified person so as to avoid all risks.
- In order to eliminate the radiator's "new" smell, set it to maximum power for at least two hours when used for the first time. During this operation, the room in which the radiator is located must be ventilated.
- It is perfectly normal for the radiator to make "creacking" sounds when used for the first time.
- The heater must not be located immediately below a fixed socket-outlet.
- The container of this heater is filled with a precise quantity of special oil, so that repairs requiring the opening of the oil container must only be made by the manufacturer or his service agent. Any oil leakage must be reported to the manufacturer or his service agent.
- Do not use this appliance in rooms having a floor area of less than 4m².
- If the appliance is scrapped, provisions on the disposal of oil must be respected.
- Do not rest the cable on the appliance while still hot.