



Living innovation

Timer operation

First of all set the digital clock to the correct time

- **Press hour button until the display shows the correct hours**
- **Press min button until the display shows the correct minutes**

To adjust time once set, hold the hour or min button down for at least 5 seconds until the display starts flashing, then proceed as above.

To set the timer

Make sure the display shows the correct time

- 1) **Press the timer button A or B once**
You are able to set 2 timed operation periods (programme A and programme B)

- 2) To set the start time for programme A, press hour and minute buttons until the display shows the time you wish the heater to come on

- 3) To set the off time, press the timer button A again and proceed as above. Finally, to confirm the OFF time, press the timer button A again.



To set programme B:

Follow the same procedure using timer B button.

Finally set the confort temperature using thermostat buttons 1 and 2

The set temperature is shown on the right hand side of the display

To cancel a programme, press timer button A or B once and then press the hour button until the display shows " - - : - - ".

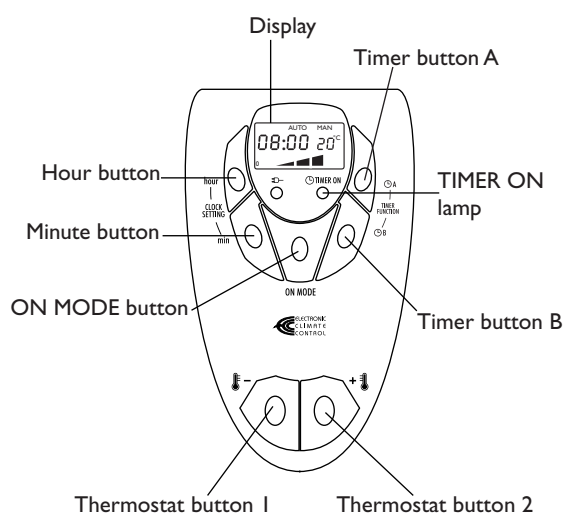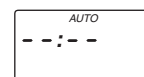

Timer Override

To operate the appliance without using the timer, press ON/MODE button

The yellow **TIMER ON** lamp will go off

To go back to timed operation press timer button A or B.




Living innovation


To switch the heater on

1) Press ON/MODE button as shown below:


Press once for
Maximum Power:

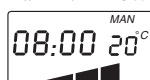

Press twice for
Medium Power:

 


Press three times
for Minimum Power:

 

Press four times
for Off:



 Correct time Set temperature

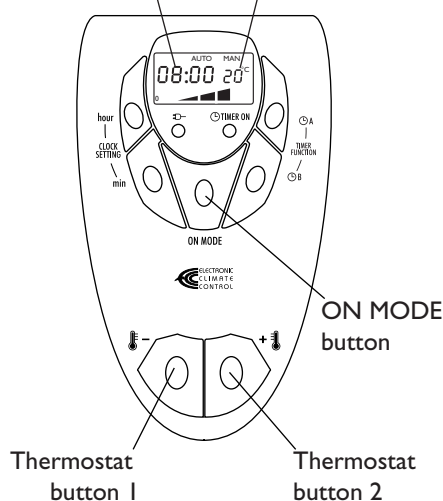

- 2) Set the comfort temperature required by using thermostat buttons 1 and 2. The set temperature is shown on the right hand side of the display
- 3) The Electronic Climate Control selects the ideal power setting to maintain your chosen temperature.

Please note: The power setting you have selected will be the maximum setting the heater works at.

If your heater is not working:

- Check the timer light is not on. If it is, press the ON/MODE button to return to manual function.
- The room temperature may be higher than the selected temperature; therefore the heater has turned itself off.

For full details please read the instruction booklet