 




# ELECTRIC CONVECTOR HEATER

Instructions for use

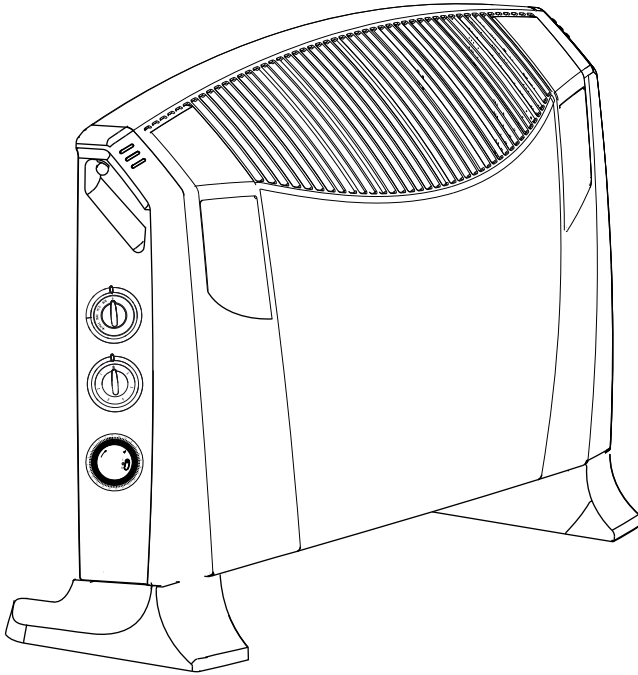

Proudly distributed by  
**De'Longhi New Zealand Limited**  
25 Carbine Road  
Mt Wellington  
Auckland, New Zealand  
PO Box 58-056  
Greenmount  
Manukau 2141  
Auckland, New Zealand  
Customer Service Ph: 0508 200 300  
Fax: 0508 200 301  
e-mail: delonghi@delonghi.co.nz

  **De'Longhi Australia Pty Ltd**  
Po Box 4156  
**MILPERRA BC NSW 1891**  
**Australia**  
Customer Service Ph: 1800 126659  
Fax: 1800 706932  
e-mail: delonghi@delonghi.com.au

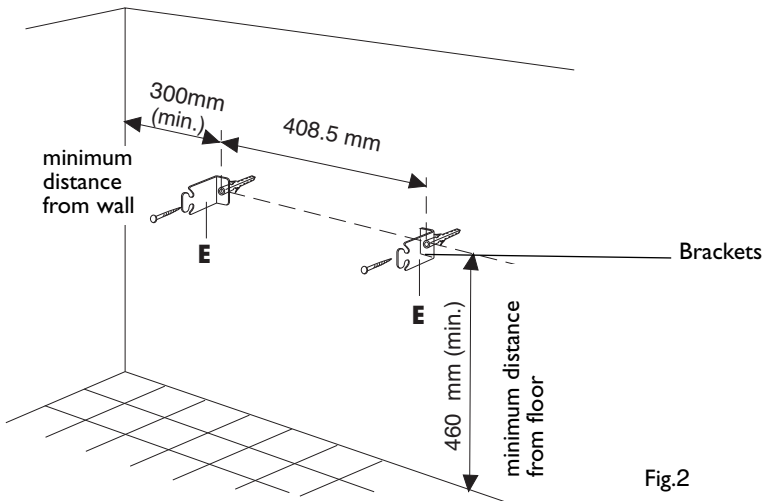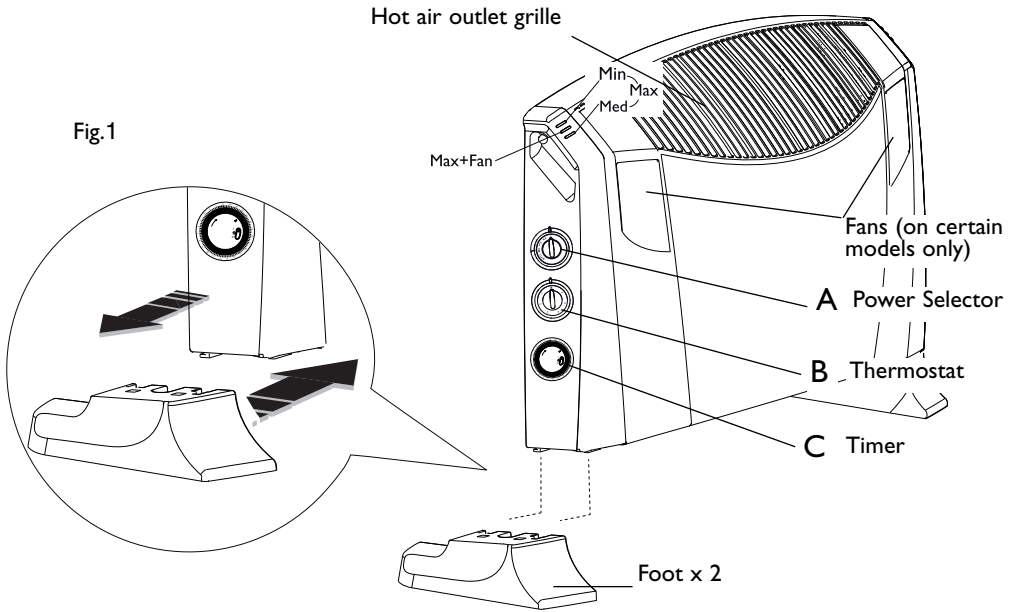

## 1. ELECTRICAL CONNECTIONS

- Before plugging into the mains, make sure the voltage of your mains supply corresponds to the V value indicated on the appliance and that the socket and power line are appropriate for the load required.
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 2004/108/EEC ON RADIO INTERFERENCE SUPPRESSION.

## 2. Attaching the feet

To fit the feet, proceed as follows: Insert the foot into the guide on the side and push as far as it will go until the two teeth hook in place (fig. 1).

## 3. Wall mounting

**IMPORTANT:** before drilling the wall, make sure the area is free of electrical wires or pipes. To fix your convector heater to the wall, use the brackets "E" and "F" provided and appropriate screws and anchors (provided).

Proceed as follows:

- Fix the brackets "E", making sure the distances are as shown in fig. 2.
- Hang the heater on the two brackets fixed to the wall. Insert the two brackets "F" in the back of the convector base as shown in fig.3-4.

Mark the bracket fixing points on the wall. (When mounted, block the base of the heater in a fixed position to prevent it being removed).

- Remove the heater, drill the wall and insert the anchors.
- Fix the heater again, inserting the brackets "F" into the base of the heater and fixing them to the holes in the wall using the screws.

Now your heater is mounted on the wall.

**The appliance must not be positioned directly underneath a fixed power point.**

**Position the appliance in such a way that the plug is easily accessible even after installation.**

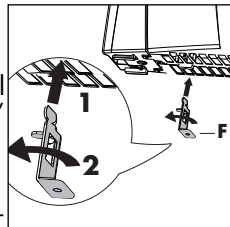 


Fig. 3

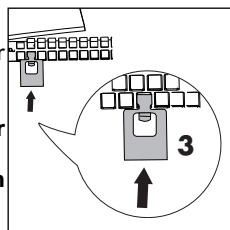 


Fig. 4

## 4. Operation and use

### Turning on

Plug into the mains, turn the thermostat dial (B) to maximum and turn the appliance on by means of the power selector (A) (fig.1) as described below:

- Turn the power selector knob (A) to the **Min** position to select minimum power (the Min power light comes on).
- Turn the power selector knob (A) to the **Med** position to select medium power (the Med power light comes on).
- Turn the power selector knob (A) to the **Max** position to select maximum power (the Max power light comes on). In the fan version, both Min and Med lights come on.

### 5. Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat dial (B) slowly anticlockwise until the lights go out and no further. The thermostat will automatically regulate the temperature set and keep it constant.

In spring or autumn or on mild days, you can save energy by using minimum power.


### 6. Frost prevention mode


With the thermostat dial in the \* position and one of the power levels selected, the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

### 7. Models with fan

A number of models have two fans for faster more even heating. To use this function, turn the power selector (A) to the \* Max position (the corresponding light comes on).

## 8. Models with 24 hour timer (C)

To operate the appliance without the timer, place the timer pointer in the I position. To operate the appliance at set times, position the pointer (D) in the position  (fig.5) and proceed as follows:

- To operate the appliance without the timer, place the timer pointer in the I position. To operate the appliance at set times, position the pointer (D) in the  position and proceed as follows:
- Check the time on your clock or watch. If it is 10.00 for example, turn the numbered programmer disk until the number 10 coincides with the pointer marked on the programmer.
- Set the periods of time during which you want the appliance to operate by pushing the teeth outwards. Each tooth corresponds to a period of 15 min. At the end of this procedure, sectors corresponding to the operating periods can be seen.
- In this way, the appliance will function automatically each day at the times set. (Important: the appliance must always be plugged into the socket)
- To modify programming, return the teeth to the initial position and set the new operating periods.
- To turn the appliance off completely, turn the dial (A) to the "0" position and unplug from the mains to avoid the programmer operating uselessly.

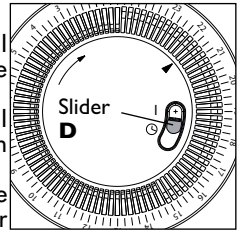 


Fig. 5

## 9. Maintenance

### Always unplug from the mains socket before cleaning.

The convector heater requires no special maintenance. It is sufficient to remove dust with a soft dry cloth. Clean when cold only. Never use abrasive powders or solvents.

### WARNINGS

Important: to avoid the safety system resetting accidentally, this appliance must not be powered through an external timer.

- The first time you use the appliance, operate it for at least 15 minutes with the thermostat at maximum to eliminate the "new" smell. A little smoke due to the protective substances applied to the heating element before transport may be given off.
- Do not use the convector heater near bath tubs, showers, sinks or swimming pools. The appliance must not be placed directly under a fixed socket.
- Do not rest the power cable on the appliance when hot.
- Always use the heater in a vertical position only.
- Do not obstruct the hot air outlet grilles or the air intake grille on the bottom of the appliance.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre or a qualified electrician in order to eliminate all risk.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.
- Do not use this appliance in rooms measuring less than 4m<sup>2</sup>. You should avoid positioning it in currents of air which could disturb operation of the heater.
- The heater must be positioned 50cm from furniture or other objects.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.
- This appliance is intended only for a domestic use.

A safety device trips and turns the appliance off in the event of overheating or if it is placed in strong currents of air. To reset, unplug the appliance from the mains socket and leave to cool down (about five minutes), remove the cause of overheating, plug back into the mains and turn on again. A number of models are fitted with a special device which turns power off if the appliance is tipped over, sloped or knocked. If this occurs, you will hear a beep.



**Important:** To avoid overheating, never under any circumstances cover the appliance during operation as this would lead to a dangerous rise in temperature.

**CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be powered through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by the power provider.