




FAN HEATER
INSTRUCTION MANUAL
SAVE THESE INSTRUCTIONS

RADIATEUR SOUFFLANT
MODE D'EMPLOI
CONSERVEZ CE MODE D'EMPLOI

TERMOVENTILADOR
INSTRUCCIONES PARA EL USO
REPASE Y GUARDE ESTAS INSTRUCCIONES
LEA CUIDADOSAMENTE ESTE INSTRUCTIVO ANTES DE
USAR SU APARATO

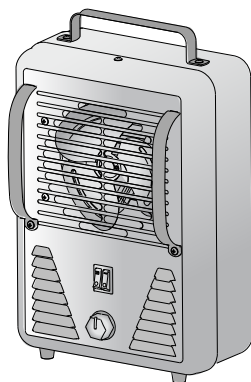


Model/Modèle/Modelo
DUH 500 - DUH500L

Register this product online and receive a free trial issue of Cook's Illustrated. Visit www.delonghiregistration.com.
Visit www.delonghi.com for a list of service centers near you.
(U.S. Only)

Enregistrez ce produit en ligne et recevez un numéro gratuit de Cook's Illustrated. Visitez www.delonghiregistration.com.
Visitez www.delonghi.com pour y voir une liste des centres de réparation proches de chez vous. (É.-U. uniquement)

Registre este producto en línea y reciba un ejemplar gratis de Cook's Illustrated. Visite www.delonghiregistration.com.
Visite www.delonghi.com para ver la lista de centros de servicios cercanos a usted. (Solamente en los Estados Unidos)

ELECTRONIC CHARACTERISTICS/CARACTÉRISTIQUES ÉLECTRONIQUES
CARACTERÍSTICAS ELÉCTRICAS
120V~60Hz 1500W

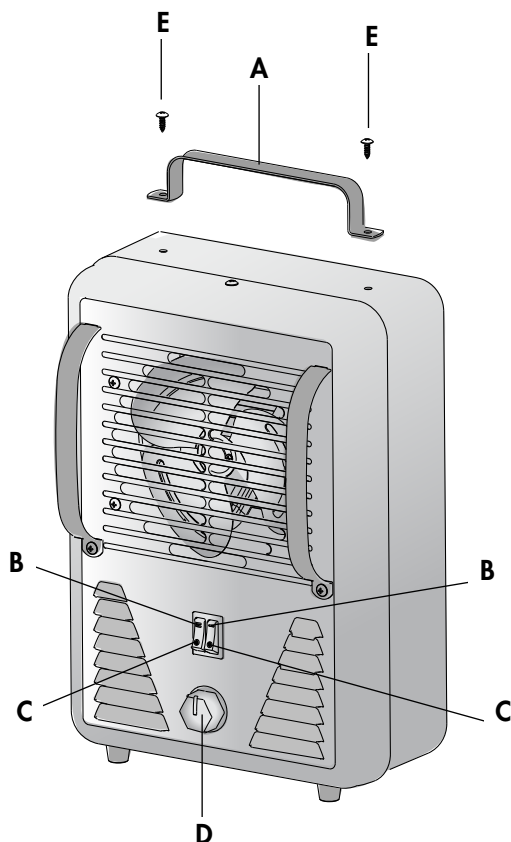

EN

DESCRIPTION OF APPLIANCE

- A. Carry handle
- B. Switch/es
- C. Power indicator Light
- D. Thermostat Control
- E. Screw

FR

DESCRIPTION DE L'APPAREIL

- A. Poignée de transport
- B. Témoin du dispositif de sécurité (rouge)
- C. Témoin de marche (orange)
- D. Bouton thermostat
- E. Sélecteur de fonctions
- F. Tornillo

MX

DESCRIPCIÓN DEL APARATO

- A. Asa para el transporte
- B. Indicador luminoso de seguridad (rojo)
- C. Indicador luminoso de encendido (naranja)
- D. Mando del termostato
- E. Selector de funciones
- F. Vis

SAFETY PRECAUTIONS

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions carefully before using the appliance.
2. This appliance gets very hot when in use. To prevent burns, do not touch hot surfaces with bare skin. Use the handle when moving the appliance. Keep all flammable materials, such as furniture, pillows, bedding, paper, clothing, and curtains at least 3 feet (90 cm) from the front and top of the appliance also avoid contact with the sides and back.
3. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
4. Always disconnect the plug from the power outlet when the appliance is not in use.
5. **Do not operate the appliance with a damaged cord or plug, after faulty operation, or when it has been dropped or damaged in any way. Contact the nearest authorized service facility for examination, electrical or mechanical adjustment, or repair.**
6. Do not use the appliance outdoors.
7. This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. Never position the appliance where it may fall into a bathtub or come in contact with water.
8. Do not run the power cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Keep the cord away from any passageways where it could be tripped over.
9. To disconnect the appliance, turn controls to off, then remove plug from outlet.
10. Do not wrap the cord around the appliance immediately after use.
11. Do not insert or allow foreign objects to get into the air intake or air outlet grille, as this may cause electric shock or fire, or damage the appliance.
12. To prevent a possible fire, do not block air intake or air outlet grille in any way. Do not use the appliance on soft surfaces, such as beds, where the openings may become blocked.
13. Do not cover the appliance while it is functioning in order to avoid overheating and the risk of fire.
14. The internal parts of the appliance can become very hot or produce sparks during operation. Do not use the appliance in areas where gasoline, paints, or other flammable liquids are used or stored.
15. Use this appliance only as described in this manual. Any other use not indicated by the manufacturer may cause fire, electric shock, or injury to persons.
16. To prevent current overload and blown fuses, make sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.
17. It is normal for heater's plug and cord to feel warm to the touch. However, an excessively hot or deformed plug or cord is not normal and may be the result of a defective electrical outlet. Defective outlets must be replaced before using the heater. Plugging the heater into a worn outlet may result in overheating of the power cord or may cause the risk of fire.
18. If the supply cord is damaged, to reduce the risk of malfunction it must be replaced by the manufacturer, its service agent, or a licensed and qualified professional.
19. Always plug the heater directly to a wall outlet. Never use with an extension cord

- or relocable power tap.
20. Make sure that the plug is fully inserted into the outlet. Wall outlets may deteriorate with time, so check the plug periodically for signs of overheating or deformation. If the outlet has deteriorated, stop using it and have it repaired.
 21. Check that neither the appliance nor the power cord have been damaged during shipping.
 22. Make sure that no styrofoam or other packing materials remain in the appliance.
 23. The first time the appliance is used, run it at the maximum power for at least two hours. During this time, ventilate the room thoroughly to eliminate the "new" smell released by the appliance. It is completely normal for the appliance to emit "creaking" sounds the first time it is run.
 24. During use check frequently to determine if your plug outlet or faceplate is hot.
 25. **CAUTION: To prevent electric shock, make sure the wide prong of the plug is inserted in the wide slot of the outlet.**
 26. **CAUTION: Risk of fire. Do not open. No user serviceable parts inside.**

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Your product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

CAUTION

- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- The appliance must be installed so that the switches and other controls cannot be reached from a person standing in a bathtub or a shower.
- The electrical cord must be replaced only by authorized personnel.

ELECTRIC POWER CONNECTION

The fan heater must be connected to a properly polarized A/C 110/120 V household outlet in perfect working condition.

Keep loose clothing or bedding, furniture and flammable material away from the wall outlet where the heater is plugged in.

REQUIRED TOOLS FOR ASSEMBLY AND ESTIMATED ASSEMBLY TIME

Required Tools(not included): 1 Screwdriver PH 2 x 100 (Phillips type)

Estimated assembly time (carry handle and screws): 5 minutes

INSTALLATION

The fan heater can be easily positioned on any horizontal support surface in an upright position.

OPERATION

Switching on

Plug into the outlet. Turn the thermostat to maximum. Switch the appliance on using the switch/switches following the procedures given below:

- switch in position «I» = minimum power (indicator light on);
- switch in position «II» = maximum power (indicator light on);

To get the maximum power, both switches must be depressed.

Adjusting the thermostat:

When the room has reached the desired temperature, slowly turn the thermostat knob counter-clockwise until you hear a "click", and not beyond that point. The thermostat will then adjust that set temperature automatically and keep it constant.

Anti-freeze function

With the thermostat in position * and the switches on, the appliance keeps the room at a temperature of approx. 41° F (5° C), preventing freezing with minimum energy consumption.

Switching the appliance off: To turn appliance off, switch off both switches then remove the plug from the electrical outlet.

Additional features: Front Safety Guards- prevent the front grill from touching the floor when the heater is tipped over forward.

- Convenient Carry Handle-allows for easy transport from room to room.

MAINTENANCE AND SERVICE

Always remove the plug from the power socket and allow the heater to cool. After the heater has cooled, clean it with a soft damp cloth, do not use detergents or abrasives. Periodically clean the air intake and outlet grilles during the period in which the heater is in use with a vacuum cleaner. Should the heater not be in use over a certain length of time, wrap the cable and store it in a dry place. This appliance has been built to provide many years of trouble free service. In case of malfunction, do not try to repair the heater yourself: it may result in fire hazard or electric shock. Call the nearest Service Center (see attached list of Service Centers).

ATTENTION

A safety device switches the fan heater off if it accidentally overheats. To reset the unit for normal operation, remove the plug from the outlet for a few minutes, eliminate the cause of overheating (e.g. air intake or outlet grilles obstructed) and then plug the fan heater back in again. Contact your nearest Service Center if the fan heater does not begin normal operation again.

The appliance is equipped with a double tip-over-switch for extra safety. This device turns the appliance off should it fall over or if it is not perfectly stable. To restart the appliance, simply place it upright again.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance doesn't work	• Be sure it is plugged in and that the electrical outlet is working. • Check for any obstruction. • The switches are in the OFF position. • The thermostat may be set too low. • The appliance is not in the upright position.	• Plug into the mains. • Remove the obstruction and let the appliance cool down. If the appliance doesn't work please contact the nearest service center. • Switch on the appliance. • Turn the thermostat to a higher setting until the heater restarts. • Check the appliance is in the upright position in a flat surface.



LIMITED WARRANTY

This warranty applies to all products with De'Longhi or Kenwood brand names.

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents:

Please contact our toll free hotline at **1-800-322-3848** or log onto our website at www.delonghi.com.

For all accessories, spare parts or replacement parts, please contact our parts division at **1-800-865-6330**.

Residents of Canada: Please contact our toll free hotline at **1-888-335-6644** or log onto our website at www.delonghi.com.

Residents of Mexico: Please refer to the Limited Warranty statement for Mexico.

Please refer to the back page of the manual for De'Longhi addresses.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.