



ELECTRIC SUPER PANEL HEATER



Living innovation

Description of heater

The following terms are used throughout the instruction manual

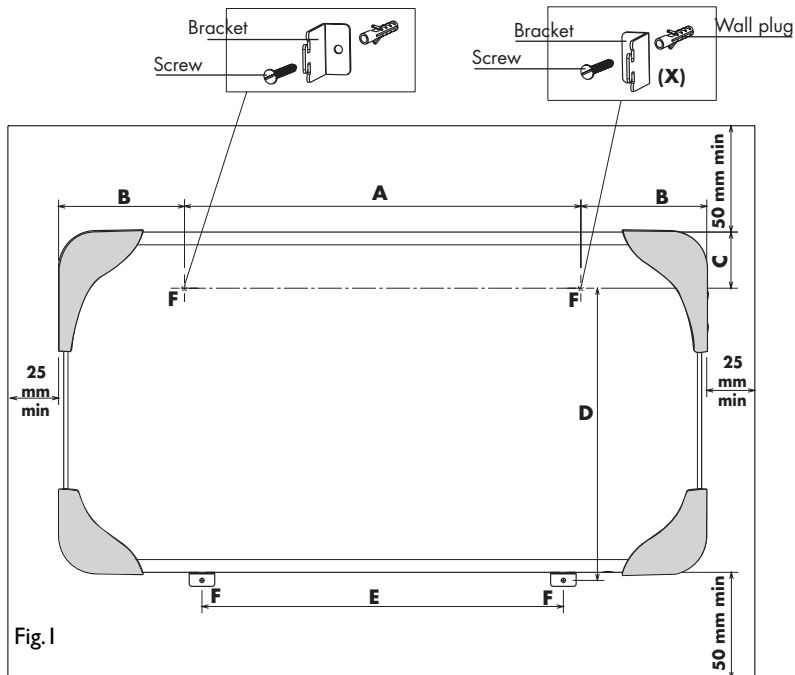 


Fig. I

| Model | A | B | C | D | E |
|-------|-----|-----|----|-----|-----|
| 400 W | 464 | 149 | 65 | 347 | 425 |
| 600 W | 464 | 149 | 65 | 497 | 425 |
| 800 W | 714 | 149 | 65 | 497 | 675 |

All measurements are in mm

HOW TO USE YOUR ELECTRIC SUPER PANEL HEATER

Thank you for choosing this Dè Longhi heater.
Please read this instruction booklet carefully before using this heater. By doing so, you will obtain optimum results with maximum safety.

General instructions

Remove the heater from the packaging. Check that neither the heater nor the power cable has been damaged during transport. Do not operate the heater if damaged. Your heater is suitable for either freestanding or wall mounting usage. Do not assemble the feet if wall mounting.

Free standing operation

To fit the feet to the appliance, proceed as follows:

Slide the foot's tab on the slot provided on the back of the heater then fix the foot with the relevant screw, as shown in fig.2.

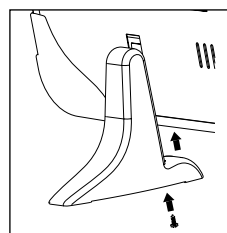 


Fig.2

Installation wall-mounting

The wall mounting kit should contain:

- 2 x Upper brackets (X)
- 2 x Lower brackets (Y)
- 4 x Screws (4,5 x 25)
- 4 x Wall plugs (ø 6 x 30)
- 2 x Feet screws (3,5 x 9,5) (for freestanding operation)

1. Select position for siting the heater ensuring that:
 - a. It is not located directly below a power socket outlet.
 - b. The plug and power outlet can be easily reached after installation.
 - c. No electric cables or other tubes could be damaged.
 - d. Keep away from curtains or inflammable materials.Also note the minimum distances indicated in the description:
2. Before drilling the wall, mark out a template following carefully the dimensions as shown in fig.1.
3. For solid brick block walls, use a 6 mm masonry drill and drill according to the marks "F" you have made and then insert the wall plugs provided.
(For plasterboard we suggest, locating the studding and using No 6 woodscrews directly into the wood, or special plasterboard fixings. For other wall types please seek specialist advice).
4. Mount the wall bracket "X" in the "F" holes using the screws provided.
5. Hang the heater on the brackets.
6. Position the lower brackets (Y) into the tabs located in the base of the heater. See Fig 3. Move the bracket up until it is horizontal and then fix them with the screws provided.

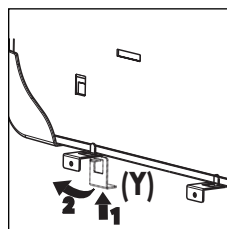 


Fig.3

INSTRUCTIONS FOR USE

Switching on

Plug into the mains socket. Switch the appliance on using the switch/switches following the procedures given:

- switch «Eco» = minimum power (indicator light on);
- switch «Med» = intermediate power (indicator light on);
- both switches «Eco» «Med» = Max (indicator lights on)

To turn appliance off, switch off both switches or remove plug from wall socket.

Maintenance

Before carrying out any maintenance, unplug the heater from the mains and wait for it to cool. The heater requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrated areas of dirt with a vacuum cleaner.

Warnings

- Do not use the heater in a bathroom or in the vicinity of bathtubs, washbasins, showers or swimming pools.
- Never use the heater to dry laundry.
- Never place the power cable on top of the heater while it is hot.
- Only use the heater in an upright position.
- Do not block the hot-air outlet grilles or the intake grille.
- If the power cable is damaged, it must be replaced by the manufacturer or an authorised technical service centre.
We recommend that you not place the heater in a draught, because strong draughts of air may adversely affect the equipment's operational efficiency.
- **IMPORTANT:** Never for any reason cover the appliance during operation as this could lead to dangerous overheating.
- The use of an extension lead is not recommended, as overheating of the extension lead may occur during the operation of the heater.
- This appliance is filled with a precise quantity of oil and repairs which require it to be opened must be carried out exclusively by the manufacturer or an authorised service centre. In the case of oil leaks, contact the manufacturer or the authorised service centre.
- When scrapping the appliance, respect legislation on the disposal of oil.
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of young children.
- Position the appliance so that the plug and the outlet can be easily reached even after installation.

ELECTRICAL CONNECTION

- Before plugging the appliance into the mains, check that your supply voltage is the same as that shown on the rating plate of the appliance and that the electric installation is suitable to the power shown on the rating plate.
- If using more than one appliance at a time, it is important to ensure that the ring main is adequate to cope with the power requirements.
- This appliance complies with EEC Directive 89/336 relating to electromagnetic compatibility.


Electrical connection (U.K. only)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below. **warning:** Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard. With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse. If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.
- B) If your appliance is not fitted with a plug or if it must be replaced, please follow the instructions provided below:


warning - this appliance must be earthed
important

The wires in the mains lead are coloured in accordance with the following code:

| | |
|------------------|---------|
| Green and yellow | Earth |
| Blue | Neutral |
| Brown | Live |

 

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow. The blue wire must be connected to the terminal marked with the letter N or coloured black. The brown wire must be connected to the terminal marked with the letter L or coloured red.

5712000000/06.02