

IMPORTANT

- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only.
- Dispose of the plastic bag with care as it represents a hazard for children.
- If the socket and the plug on the appliance are incompatible, the socket should be changed for a suitable type by a qualified electrician who should ensure that the cross-section of the wires leading to the socket is suitable for the power absorbed by the appliance.
- Bear the following fundamental safety rules in mind:
 - Never touch the appliance with damp hands.
 - Never use the appliance with bare or wet feet.
 - Never immerse the appliance in water.
 - Do not aim the steam at people or animals.
 - Never unplug the appliance by pulling the power cable or the appliance itself.
 - The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - Never leave the appliance plugged in as it could be a safety hazard.
 - Never place the iron under the tap to top up with water. Always use the measure provided.
 - If the power cable is damaged, it must be replaced by the manufacturer or an authorised service centre to avoid all risk.
 - The safety of this appliance is guaranteed only if

correctly connected to a proper and effective earth connection as specified by current electrical safety standards and regulations. This fundamental safety requisite should be verified. If in doubt, ask a qualified electrician to check the mains system thoroughly. Failure to earth the appliance absolves the manufacturer of all liability for damage.

- When the appliance is to be discarded, after unplugging from the mains, the lead should be cut as close as possible to the iron to make the appliance unusable.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
- In the event of malfunction and/or faulty operation, switch off the appliance and take it to an authorised service centre.
- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.
- Never overfill the tank and never add stain removers or similar products.
- The filling aperture must not be opened during use.
- Save these instructions for future reference.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable;
- The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking
- If the appliance is dropped causing visible damage,

do not use. Take to a professional service centre.

- The iron should be placed on a flat surface extremely resistant to high temperatures.

This appliance conforms to safety standards and is constructed to avoid generating radio interference in accordance with EC Directive 87/308.

MAIN COMPONENTS

- A Plate
- B Spray
- C Opening for filling tank with cover
- D Indicator light
- E Steam regulator
- F Spray button
- G Super steam button
- H Thermostat knob
- I SELF CLEAN button
- L Power (lit steadily)/Auto-off (flashing) light (certain models only)

Read this manual thoroughly before using the appliance. This will ensure optimum results and maximum safety.

Important: Before plugging the appliance in, check that the mains voltage corresponds to the voltage (V) indicated on the rating plate of the iron. The socket must be efficiently earthed.

The first time you use the iron, remove the plate protection.

N.B.: When used for the first time, the appliance may give out smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used

in assembling the steam generator. You are recommended to ventilate the room.

STEAM IRONING

Before steam ironing, make sure the fabric is suitable for this kind of ironing. The machine works with normal **tap water**. If the water is very hard, we suggest using demineralized water diluted 50/50 with tap water. **Never use demineralised water.** Never use chemical substances or detergents (e.g. perfumed water, essences, descaling solutions, etc).

- a) Before filling the tank, make sure the steam regulator **E** is in the ~~ON~~ position ("dry" position) (fig. 1). Make sure the power cable is unplugged from the mains socket.
- b) Open the cover of the opening **C** and pour the water into the iron (fig. 2). It is important that the iron is always unplugged from the mains every time you fill or top up the water in the tank.
- c) Plug the iron into the mains socket.
- d) A special segment on the thermostat knob **H**  identifies the steam range. The steam will be wet if the thermostat pointer **H** is at the beginning of the segment and dryer if it is towards the end. Make sure the fabric to be ironed is suitable for steam ironing. When using the iron for the first time, you are recommended to pass it several times over a piece of cloth first.
- e) After these checks, select the required temperature by rotating the thermostat knob **H**.
- f) The indicator light **D** will come on to show the iron is on. After about a minute in the case of maximum temperature, the indicator light will go off showing that the iron

is ready for use.

- g) Continuous steam delivery is obtained by positioning the steam regulator **E** in the 1, 2 or 3 position (3= +steam; 1= -steam). Steam delivery ceases whenever the iron is placed in a vertical position on the rear rest (position recommended during pauses in ironing) or with the iron horizontal when the steam regulator **E** is in the dry position .

Note: On the back of the iron there is a useful guide giving information on the temperature to set according to the garment being ironed:

- ● ● COTONE/COTTON
COTON/BAUMWOLLE
- ● LINO/LINEN
LIN/LEINEN
- ● SETA/SILK LANA/WOOL
SOIE/SEIDE LAINE/WOLLE
- SINTETICI/SYNTHETICS
SYNTHETIQUE/SYNTHETISCH

Remember that the steam function can only be used when the thermostat is in the  position.

DRY IRONING

- Plug in the iron and select the temperature, if there is water in the tank, position the steam regulator **E** on the dry position  (fig. 1).
- Wait until the indicator light **D** goes off showing that the required temperature has been reached.
- If the fabric to be ironed is slightly damp or you iron fast, you can use a higher temperature. If, on the other hand, the garments are dry or you iron slowly, use a higher temperature.

TURBO (SUPER STEAM) (FIG. 3)

- Place the thermostat knob **H** on maximum.
- When the indicator light **D** goes off, press the super steam button  **G**.

For correct operation of the super steam function, you must wait a few seconds between one burst of steam and the next.

VERTICAL IRONING

Enables delicate garments to be steamed without resting them on the ironing board: **pay attention to the temperature used to steam hanging fabrics.**

Position the steam regulator **E** on the dry position .

Rotate the thermostat knob **H** clockwise as far as it will go (maximum steam position). When the indicator light **D** goes off, place the iron in a vertical position and move it near the garment. Press the super steam button  **G** until the indicator light **D** comes on again. Wait until the light goes off before continuing vertical ironing.

When the light (**D**) goes off, place the iron in an upright position and move it near the garment, then press the turbo button (**G**). For efficient vertical ironing, wait for a few seconds between one burst of steam and the next until the light **D** goes off.

Never direct the "vertical" steam jet at a garment hanging in a wardrobe or worn by a person. Vertical ironing should always be carried out with the garment hanging on a clothes stand and always away from other garments, elements, people and animals.

SPRAY (FIG. 4)

If during ironing, you note particularly resistant creases or if your garment requires a higher level of dampness, you can use the spray. Make sure the tank contains water. Press the spray button  (F) repeatedly, directing the spray jet towards the parts of the garment to be dampened.

Never use the spray when ironing silk as the drops of water could mark the fabric.

AFTER IRONING

To extend the working life of the iron, whenever you finish ironing, you are recommended to empty the tank as follows:

- Unplug from the mains socket.
- Open the cover and empty the iron, holding it point downwards and shaking it gently over a basin or sink.
- To dry the remaining moisture, turn the iron on again with the thermostat in the maximum position for about two minutes with the steam regulator in the MAX position.
- Unplug from the mains socket and allow to cool.
- Clean the plate with a dry cloth as traces of moisture could mark it.
- Wind the power cable around the cable winder.
- Store the iron in a vertical position.

MAINTENANCE AND CLEANING

After use, always wait until the iron is cold before putting away. Allow to cool in a vertical position. Keep the surface of the plate clean. Do not rest or use the iron on zips, hooks, rings etc to avoid scratching the plate. Clean the

plate with a damp cloth only, never use abrasives or solvents. If the amount of steam drops during use, this could be caused by excessive build-up of limescale. To remove, proceed as follows:

- fill the tank to the "MAX" level;
- plug the appliance into the mains and place the thermostat in the MAX position. When the iron has reached the required temperature (light off), unplug the appliance and leave in a horizontal position;
- place over a sink;
- press the SELF CLEAN button;
- turn the steam regulator clockwise as far as it will go. The limescale rod is released and the regulator lifts up;
- release the SELF CLEAN button;
- plug the appliance into the mains and leave in operation for at least two minutes to dry the plate.
- at the end, unplug the appliance from the mains. Leave the iron to cool and clean the outside with a soft cloth.

SCALE PREVENTION SYSTEM (ANTICALC)

The ANTICALC resin filter installed in the tank filters impurities, thus ensuring constant steam delivery during ironing. The resin softens the water and improves the performance of the iron over time.

AUTO SHUT-OFF (CERTAIN MODELS ONLY)

If the iron is not used and left horizontally for 30 seconds, it turns off automatically. If the iron is not used and left vertically or on its side, the automatic shut-off device trips after eight minutes. The light (L) flashes to indicate auto-off. To begin ironing again, shake the iron slightly forwards until the light (L) comes on steadily.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

ELECTRICAL CONNECTION (UK ONLY)

- A) If your appliance comes fitted with a plug, it will incorporate a 13 Amp fuse. If it does not fit your socket, the plug should be cut off from the mains lead, and an appropriate plug fitted, as below.

WARNING: Very carefully dispose of the cut off plug after removing the fuse: do not insert in a 13 Amp socket elsewhere in the house as this could cause a shock hazard.

With alternative plugs not incorporating a fuse, the circuit must be protected by a 15 Amp fuse.

WARNING - THIS APPLIANCE MUST BE EARTHED

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green and yellow:	Earth
Blue:	Neutral
Brown:	Live



As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

If the plug is a moulded-on type, the fuse cover must be re-fitted when changing the fuse using a 13 Amp Asta approved fuse to BS 1362. In the event of losing the fuse cover, the plug must NOT be used until a replacement fuse cover can be obtained from your nearest electrical dealer. The colour of the correct replacement fuse cover is that as marked on the base of the plug.

- B) If your appliance is not fitted with a plug, please follow the instructions provided below:

The green and yellow wire must be connected to the terminal in the plug marked with the letter E or the earth symbol  or coloured green or green and yellow.

The blue wire must be connected to the terminal marked with the letter N or coloured black.

The brown wire must be connected to the terminal marked with the letter L or coloured red.