

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. Use appliance only for it's intended use.
2. To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
3. The appliance should always be turned to "MIN" before plugging or unplugging from outlet. Never yank the cord to disconnect from outlet, instead grasp plug and pull to disconnect.
4. Always disconnect appliance from electrical outlet before filling with water, emptying or when not in use.
5. Do not allow cord to touch hot surface. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
6. Do not operate the iron with a damaged cord or in the event the iron has been dropped or damaged. To avoid risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.
7. Not intended for use by children. Close supervision is necessary for any appliance being used by or near children. Unsupervised use can result in fire or personal injury. Do not leave the appliance unattended while plugged in ,on an ironing board, or while it is still hot.
8. Burns can occur from touching hot metals parts, hot water or steam . Use caution when you turn the iron upside down. There may be hot water in the reservoir.
9. The use of an accessory attachment is not recommended by

De' Longhi and may result in fire, electric shock or personal injury.

SPECIAL INSTRUCTION

1. To avoid a circuit overload, do not operate a high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.
3. After removing the packing, make sure the appliance is not damaged .If in doubt do not use the appliance and contact an authorized Customer Service Center.
4. To repair or if power cable is damaged and requires replacement, contact your local dealer or an authorized Customer Service Center, in order to avoid compromising the efficiency of your appliance. For the same reason you are always recommended to use original spare parts.

The use of all electrical appliances implies the observance of some fundamental rules. **IN PARTICULAR:**

- Never touch the appliance with wet or damp hands or feet.
DO NOT IMMERSE THE APPLIANCE IN WATER.
- Never use appliance in bathrooms.
- Never pull the power cable or the appliance with wet or damp feet.
- Never let children or unfit persons use the appliance without supervision.
- Never leave the appliance plugged in as it could be a safety hazard.
- Before cleaning or servicing, disconnect the appliance by unplugging it from the outlet.
- Never fill the appliance under running water.

- Do not direct the steam jet toward people , animals , or iron clothes when they are being worn as this could be dangerous.
- After ironing ,allow the iron to cool before putting away.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

SAVE THESE INSTRUCTIONS

**THIS APPLIANCE IS FOR
HOUSEHOLD USE ONLY**

MAIN COMPONENTS

- A** Plate
- B** Spray
- C** Opening for filling tank with cover
- D** Indicator light
- E** Steam regulator
- F** Spray button
- G** Super steam button
- H** Thermostat knob
- I** SELF CLEAN button
- L** Power (lit steadily)/Auto-off (flashing) light (certain models only)

***Read this manual thoroughly before using the appliance.
This will ensure optimum results and maximum safety.***

Important: Before plugging the appliance in, check that the outlet voltage corresponds to the voltage (V) indicated on



the rating plate of the iron. The outlet must be efficiently grounded.

The first time you use the iron, remove the plate protection.

Note: When used for the first time, the appliance may give out smoke and an odor for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the steam generator. You are recommended to ventilate the room.

STEAM IRONING

Before steam ironing, make sure the fabric is suitable for this kind of ironing. The machine works with normal **tap water**. If the water is very hard, we suggest using demineralized water diluted 50/50 with tap water. **Never use demineralized water.** Never use chemical substances or detergents (e.g. perfumed water, essences, descaling solutions, etc).


- a) Before filling the tank, make sure the steam regulator **E** is in the  position ("dry" position) (fig. 1). Make sure the power cable is unplugged from the outlet.
- b) Open the cover of the opening **C** and pour the water into the iron (fig. 2). It is important that the iron is always unplugged from the outlet every time you fill or top up the water in the tank.
- c) Plug the iron into the outlet.
- d) A special segment  on the thermostat knob **H** identifies the steam range. The steam will be wet if the thermostat pointer **H** is at the beginning of the segment and dryer if it is towards the end. Make sure the fabric to be ironed is suitable for steam ironing. When using

the iron for the first time, you are recommended to pass it several times over a piece of cloth first.

- e) After these checks, select the required temperature by rotating the thermostat knob **H**.
- f) The indicator light **D** will come on to show the iron is on. After about a minute in the case of maximum temperature, the indicator light will go off showing that the iron is ready for use.
- g) Continuous steam delivery is obtained by positioning the steam regulator **E** in the 1, 2 or 3 position (3= more steam; 1= less steam). Steam delivery ceases whenever the iron is placed in a vertical position on the rear rest (position recommended during pauses in ironing) or with the iron horizontal when the steam regulator **E** is in the dry position ~~3~~.


Note: On the back of the iron there is a useful guide giving information on the temperature to set according to the garment being ironed:

- ● ● COTONE/COTTON
COTON/BAUMWOLLE
- LINO/LINEN
LIN/LEINEN
- ● SETA/SILK LANA/WOOL
SOIE/SEIDE LAINE/WOLLE
- SINTETICI/SYNTHETICS
SYNTHETIQUE/SYNTHETISCH

Remember that the steam function can only be used when the thermostat is in the  position." data-bbox="528 778 588 822"/>


DRY IRONING

- Plug in the iron and select the temperature, if there is water in the tank, position the steam regulator **E** on the

dry position  (fig. 1).

- Wait until the indicator light **D** goes off showing that the required temperature has been reached.
- If the fabric to be ironed is slightly damp or you iron fast, you can use a higher temperature. If, on the other hand, the garments are dry or you iron slowly, use a higher temperature.

TURBO (SUPER STEAM) (FIG. 3)


- Place the thermostat knob **H** on maximum.
- When the indicator light **D** goes off, press the super steam button  **G**.

For correct operation of the super steam function, you must wait a few seconds between one burst of steam and the next.

VERTICAL IRONING

Enables delicate garments to be steamed without resting them on the ironing board: **pay attention to the temperature used to steam hanging fabrics.**

Position the steam regulator **E** on the dry position .


Rotate the thermostat knob **H** clockwise as far as it will go (maximum steam position). When the indicator light **D** goes off, place the iron in a vertical position and move it near the garment. Press the super steam button  **G** until the indicator light **D** comes on again. Wait until the light goes off before continuing vertical ironing.

When the light (**D**) goes off, place the iron in an upright position and move it near the garment, then press the turbo button (**G**). For efficient vertical ironing, wait for a few

seconds between one burst of steam and the next until the light **D** goes off.

Never direct the "vertical" steam jet at a garment hanging in a wardrobe or worn by a person. Vertical ironing should always be carried out with the garment hanging on a clothes stand and always away from other garments, elements, people and animals.

SPRAY (FIG. 4)

If during ironing, you note particularly resistant creases or if your garment requires a higher level of dampness, you can use the spray. Make sure the tank contains water. Press the spray button  (**F**) repeatedly, directing the spray jet towards the parts of the garment to be dampened.

Never use the spray when ironing silk as the drops of water could mark the fabric.

AFTER IRONING

To extend the working life of the iron, whenever you finish ironing, you are recommended to empty the tank as follows:

- Unplug from the outlet.
- Open the cover and empty the iron, holding it point downwards and shaking it gently over a basin or sink.
- To dry the remaining moisture, turn the iron on again with the thermostat in the maximum position for about two minutes with the steam regulator in the **MAX** position.
- Unplug from the outlet and allow to cool.
- Clean the plate with a dry cloth as traces of moisture

could mark it.

- Wind the power cable.
- Store the iron in a vertical position.

MAINTENANCE AND CLEANING

After use, always wait until the iron is cold before putting away. Allow to cool in a vertical position. Keep the surface of the plate clean. Do not rest or use the iron on zips, hooks, rings etc to avoid scratching the plate. Clean the plate with a damp cloth only, never use abrasives or solvents. If the amount of steam drops during use, this could be caused by a build-up of limescale. To remove, proceed as follows:

- fill the tank to the "MAX" level;
- plug the appliance into the outlet and place the thermostat in the MAX position. When the iron has reached the required temperature (light off), unplug the appliance;
- place over a sink in a horizontal position;
- press the SELF CLEAN button;
- shake the appliance gently to drain the water in the tank through the plate, taking the impurities with it.
- release the SELF CLEAN button;
- plug the appliance into the outlet and leave in operation for at least two minutes to dry the plate.
- unplug the appliance from the outlet. Leave the iron to cool and clean the outside with a soft cloth.

SCALE PREVENTION SYSTEM (ANTICALC)

The ANTICALC resin filter installed in the tank filters impurities, thus ensuring constant steam delivery during ironing. The resin softens the water and improves the performance of the iron over time.

AUTO SHUT-OFF (CERTAIN MODELS ONLY)

If the iron is not used and left horizontally for 30 seconds, it turns off automatically. If the iron is not used and left vertically or on its side, the automatic shut-off device trips after eight minutes. The light (L) flashes to indicate auto-off. To begin ironing again, shake the iron slightly forwards until the light (L) comes on steadily.

This warranty applies to all products with De'Longhi or Kenwood brand names.

LIMITED WARRANTY

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a product's replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting

from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents: Please contact our toll free hotline at 1-800-322-3848 or log onto our website at www.delonghi.com.

For all accessories, spare parts or replacement parts, please contact our parts division at 1-800-865-6330.

Residents of Canada: Please contact our toll free hotline at 1-888-335-6644 or log onto our website at www.delonghi.com.

Residents of Mexico: Please refer to the Limited Warranty statement for Mexico.

Please refer to the back page of the manual for De'Longhi addresses.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.