

INDEX

DESCRIPTION OF THE APPLIANCE	7
USING THE APPLIANCE FOR THE FIRST TIME.....	8
PREPARATIONS FOR USE.....	8
What water to use.....	8
Filling the tank.....	8
Adjusting plate temperature.	9
STEAM IRONING	9
DRY IRONING.....	10
VERTICAL IRONING	10
TURBO FUNCTION	11
SPRAY BUTTON	11
NO-DRIP SYSTEM	11
AUTO-OFF	11
AFTER IRONING	12
Cleaning and maintenance	12
Limescale prevention and SELF CLEAN	12
LIMITED WARRANTY	13

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. Use appliance only for it's intended use.
2. To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
3. The appliance should always be turned to "MIN" before plugging or unplugging from outlet. Never yank the cord to disconnect from outlet, instead grasp plug and pull to disconnect.
4. Always disconnect appliance from electrical outlet before filling with water, emptying or when not in use.
5. Do not allow cord to touch hot surface. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
6. Do not operate the iron with a damaged cord or in the event the iron has been dropped or damaged. To avoid risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.
7. Not intended for use by children. Close supervision is necessary for any appliance being used by or near children. Unsupervised use can result in fire or personal injury. Do not leave the appliance unattended while plugged in ,on an ironing board, or while it is still hot.
8. Burns can occur from touching hot metals parts, hot water or steam . Use caution when you turn the iron upside down. There may be hot water in the reservoir.

9. The use of an accessory attachment is not recommended by Dè Longhi and may result in fire, electric shock or personal injury.

SPECIAL INSTRUCTION

1. To avoid a circuit overload, do not operate a high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.
3. After removing the packing, make sure the appliance is not damaged. If in doubt do not use the appliance and contact an authorized Customer Service Center.
4. To repair or if power cable is damaged and requires replacement, contact your local dealer or an authorized Customer Service Center, in order to avoid compromising the efficiency of your appliance. For the same reason you are always recommended to use original spare parts.

The use of all electrical appliances implies the observance of some fundamental rules. **IN PARTICULAR:**

- Never touch the appliance with wet or damp hands or feet.
DO NOT IMMERSE THE APPLIANCE IN WATER.
- Never use appliance in bathrooms.
- Never pull the power cable or the appliance with wet or damp feet.
- Never let children or unfit persons use the appliance

without supervision.

- Never leave the appliance plugged in as it could be a safety hazard.
- Before cleaning or servicing, disconnect the appliance by unplugging it from the outlet.
- Never fill the appliance under running water.
- Do not direct the steam jet toward people, animals, or iron clothes when they are being worn as this could be dangerous.
- After ironing, allow the iron to cool before putting away.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

DESCRIPTION OF THE APPLIANCE

(page 3)

- A.** Plate
- B.** Spray
- C.** Tank fill hole cap
- D.** Steam regulator
- E.** Spray button
- F.** ON/auto-off light (certain models only)
- G.** “Steam ready” light

- H. Thermostat knob
- I. "Self Clean" button
- L. "Turbo" button
- M. Water measure

USING THE APPLIANCE FOR THE FIRST TIME

- The first time you use the iron, remove the plate protection (if present).
- **When used for the first time, the appliance may give off smoke and an odor for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the appliance.** You are recommended to ventilate the room.

PREPARATIONS FOR USE

What water to use

The machine works with normal tap water.

If the water is very hard, we recommend using demineralized water diluted 50/50 with tap water.

Never use distilled water alone.

Never use chemical substances or detergents (e.g. perfumed water, essences, descaling solutions, etc).

Filling the tank



It is important that the iron is always unplugged from the outlet every time you fill up the water tank.

- Make sure the appliance is unplugged from the outlet.
- Make sure the steam regulator **D** is in the  position ("dry") (fig. 1).
- Open the tank fill hole cap **C**.
- Fill the measure to the level mark (300 ml), then pour the water into the iron (fig. 2).
- Close the tank fill hole cap.

Adjusting plate temperature.

Please note:

On the back of the iron there is a useful guide giving information on the temperature to set according to the garment being ironed:

- SINTETICI/SYNTHETICS
SYNTHETIQUE/SYNTHETISCH
 - SETA /SILK/SOIE/SEIDE
LANA/WOOL/LAINE/WOLLE
 - LINO/LINEN/LIN/LEINEN
COTONE/COTTON
COTON/BAUMWOLLE
- Plug the iron into the outlet. (*Models with auto-off only:* the light **F** comes on to indicate that the appliance is connected to an electricity supply.)
 - The “steam ready” light **G** comes on.
 - Select the required temperature by turning the thermostat knob **H** (fig. 3).
 - After about a minute (for maximum temperature), the steam ready light “**G**” goes off to indicate that the iron is ready for use.

STEAM IRONING

Please note:

Before steam ironing, make sure the fabric is suitable for this kind of ironing.

Remember that the steam function can only be used when the thermostat is on the segment indicated by the steam symbol.

- Fill the tank and set plate temperature as described above.
- Move the steam regulator to select the required amount of steam: .
- Wait for the “steam ready” light **G** to go off.

To discharge steam, just place the iron in a horizontal position.



Steam stops when the iron is placed upright on the rear rest (the recommended position during pauses in ironing).

DRY IRONING

- Set plate temperature as described above.
- Move the steam regulator to the  position (“dry”).
- Wait for the “steam ready” light **G** to go off.

The iron is ready to use.

If the fabric to be ironed is slightly damp or you iron fast, you can use a higher temperature. If, on the other hand, the garments are dry or you iron slowly, you are recommended to use a lower temperature.

VERTICAL IRONING

This function enables delicate garments to be steamed without resting them on the ironing board. **Pay particular attention to the temperature when steaming curtains.**

- Make sure the steam regulator **D** is in the  position (“dry”) (fig. 1).
- Set plate temperature to **MAX**.
- Wait for the “steam ready” light **G** to go off.
- Hold the iron vertically and move it near the garment.
- Press and release the Turbo button (**L**).

For correct vertical ironing, wait a few seconds between one burst of steam and the next until the “steam ready” light **G** goes off.



Danger of burns!

Never direct the “vertical” steam jet at a garment hanging in a wardrobe or worn by a person.

Vertical ironing should always be carried out with the garment hanging on a clothes stand and always away from other garments, elements, people and animals.

TURBO

TURBO FUNCTION

Press this button to obtain a powerful jet of steam, useful to eliminate creases.

EN

- Set plate temperature to **MAX**.
- Move the steam regulator to the steam  position.
- Wait for the “steam ready” light **G** to go off.
- Press and release the Turbo button (**L**).

To use the turbo function correctly, wait a few seconds between one burst of steam and the next.

SPRAY BUTTON

If during ironing, you note particularly resistant creases or if your garment requires a higher level of dampness, you can use the spray.

- Fill the tank and set plate temperature as described above.
- Press the spray  button (**E**) repeatedly, directing the spray jet towards the parts of the garment to be dampened.

Never use the spray when ironing silk as the drops of water could mark the fabric.

NO DRIP

NO-DRIP SYSTEM

This iron has a no-drip system which automatically shuts off steam production when the temperature is set too low.

During operation, the device may emit creaking noises as the iron heats up and cools down.

This is perfectly normal and part of correct operation.

AUTO OFF

AUTO-OFF

- If the iron is left unused in a horizontal position for 30 seconds, it goes off automatically.
- If the iron is not used in an upright position, the auto-off

device trips after 8 minutes.

The light **(F)** flashes to indicate auto-off. To begin ironing again, shake the iron slightly forwards until the light **(F)** comes on steadily.

AFTER IRONING

To extend the working life of the iron, whenever you finish ironing, you are recommended to empty the tank as follows:

- Unplug the iron from the outlet.
- Empty the iron by holding it tip downwards and shaking it gently over a basin or sink.
- To dry residual moisture, turn the iron on again with the thermostat at maximum for about 2 minutes.
- Unplug the iron from the outlet and allow to cool.
- Clean the plate with a dry cloth as traces of moisture could mark it.
- Wind the power cable.
- Store the iron in an upright position.

Cleaning and maintenance

After use, always wait until the iron is cold before putting away. Leave to cool in an upright position.

- Keep the surface of the plate clean.
- Clean the plate with a damp cloth only, never use abrasives or solvents.
- Do not rest or use the iron on zips, hooks, rings etc. to avoid scratching the soleplate.

Limescale prevention



and SELF CLEAN

The resin filter installed in the tank filters impurities, thus ensuring constant steam delivery during ironing.

The resin softens the water and improves the long term performance of the iron.

However, if the amount of stream drops during use, this could be caused by a build-up of limescale.

To remove, proceed as follows:

- Fill the tank.
- Plug the appliance into the outlet and place the thermostat in the MAX position.
- When the iron has reached the required temperature (light off), unplug the appliance.
- Place over a sink and in a horizontal position.
- Press the SELF CLEAN I button and hold it down.
- Shake the appliance gently to drain the water in the tank through the plate, taking the impurities with it.
- Release the SELF CLEAN button.
- Plug the appliance into the outlet and leave in operation for at least two minutes to dry the plate.
- After this time, unplug the appliance from the outlet.
- Leave the iron to cool and clean the outside with a soft cloth.

This warranty applies to all products with De'Longhi or Kenwood brand names.

LIMITED WARRANTY

What does the warranty cover?

We warrant each appliance to be free from defects in material and workmanship. Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts or part thereof, other than parts damaged in transit. In the event of a products replacement or return, the unit must be returned transportation prepaid. The repaired or new model will be returned at the company expense.

This warranty shall apply only if the appliance is used in accordance with the factory directions, which accompany it, and on an Alternating current (AC) circuit.

How long does the coverage last?

This warranty runs for one year (1) from the purchase date found on your receipt and applies only to the original purchaser for use.

What is not covered by the warranty?

The warranty does not cover defects or damage of the appliance, which result from repairs or alterations to the appliance outside our factory or authorized service centers, nor shall it apply to any appliance, which has been subject to abuse, misuse, negligence or accidents. Also, consequential and incidental damage resulting from the use of this product or arising out of any breach of contract or breach of this warranty are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation may not apply to you.

How do you get service?

If repairs become necessary, see contact information below:

U.S. Residents: Please contact our toll free hotline at 1-800-322-3848 or log onto our website at www.delonghi.com.

For all accessories, spare parts or replacement parts, please contact our parts division at 1-800-865-6330.

Residents of Canada: Please contact our toll free hotline at 1-888-335-6644 or log onto our website at www.delonghi.com.

Residents of Mexico: Please refer to the Limited Warranty statement for Mexico.

Please refer to the back page of the manual for De'Longhi addresses.

The above warranty is in lieu of all other express warranties and representations. All implied warranties are limited to the applicable warranty period set forth above. This limitation does not apply if you enter into an extended warranty with De'Longhi. Some states do not allow limitations on how long an implied warranty lasts, so the above exclusions may not apply to you. De'Longhi does not authorize any other person or company to assume for it any liability in connection with the sale or use of its appliance.

How does state law apply?

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.