

## SAFETY

### Fundamental safety warnings



#### *Danger!*

This is an electrical appliance and may cause electric shock.

You should therefore respect the following safety warnings:

- Never touch the appliance with damp hands.
- Never use the appliance with bare or wet feet.
- Never immerse the appliance in water.
- Never unplug the appliance by pulling the power cable or the appliance itself.
- If the socket and power cable plug are incompatible, the socket should be changed for a suitable type by a qualified professional.

Adapters, multiple sockets and/or extensions should not be used.

- To add water, turn the ironing system off using the switch, then unplug from the mains. Never fill the appliance under running water.
- Always unplug the appliance from the mains socket before filling the steam generator with water.
- If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's customer services in order to avoid all risk.
- Never unscrew the cap while the appliance is plugged in.
- Before cleaning or servicing, disconnect the appliance by unplugging from the mains.
- In the event of malfunction and/or faulty operation, switch off the appliance and take it to customer services.
- Before using the appliance, check that the mains supply voltage corresponds to the voltage indicated on the rating plate. Connect the appliance to an efficiently earthed power supply and sockets with a minimum current rating of 10 A only.



#### *Danger of burns!*

- Do not open the cap while the appliance is in use AND BEFORE ALL THE WATER HAS BEEN USED UP. This occurs when steam is no longer discharged by the iron.

To add water, unplug from the mains and wait about 15 minutes to avoid sudden temperature changes.

Place a cloth over the cap and unscrew slowly to allow residual steam to escape gradually.

- Never aim the steam at persons or animals.
- The user must never leave the iron unattended when plugged in.
- During use, the steam generator should not be moved.
- **IMPORTANT:** the tube connecting the iron and steam generator may become hot.

- **IMPORTANT:** the metal iron rest may become hot. Take care to avoid burns.
- All contact between the hot base and cables must be rigorously avoided.



#### *Important!*

- After removing the packaging, make sure the appliance is complete and undamaged. If in doubt, do not use the appliance and contact qualified personnel only.
- Do not leave packaging (plastic bags, polystyrene foam, etc.) within reach of children as it could be dangerous.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Never mix the water in the steam generator with stain removers, additives or perfumed oils. This reduces the safety of the appliance and irreparably damages the steam generator which would have to be replaced.
- Use the iron rest ONLY. If it is damaged, use an original replacement only.
- The appliance must be used and rested on a stable heat resistant surface.
- When placing the iron on the iron rest, make sure the appliance is resting on a stable surface.
- Do not use the appliance if it has been dropped and there are visible signs of damage or leaks. If the ironing system is dropped causing visible damage to the appliance (steam generator or iron), do not use. Take to customer services.

### Disposal



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

### APPROPRIATE USE

- This appliance must be used exclusively for the purpose for which it was expressly conceived. Any other use is considered improper and thus dangerous.
- The manufacturer is not liable for damage caused by inappropriate, incorrect or irresponsible use or for damage resulting from repairs carried out by unqualified personnel.

## DESCRIPTION OF THE APPLIANCE

(see page 3)

- A** Iron rest
- B** Control panel
- C** Steam/cable tube compartment
- D** Cable tidy
- E** Funnel
- F** Steam generator cap

### Control panel

- G** "Steam ready" light
- H** Steam generator button with light
- I** Steam regulation dial
- J** Iron button with light

## PREPARATIONS FOR USE

### What water to use

The appliance works with normal **tap water**.

In case of very hard water (hardness above 27°F) we suggest using 50% distilled water diluted with tap water.



**Important!**

Never use other types of water, chemical substances or detergents (e.g. perfumed water, essences, water softener, etc). Do not use mineral or other types of water (such as rainwater or water for batteries or air conditioners etc.).

### Filling the steam generator



**Danger!**

Make sure the cable is unplugged from the mains socket.



- Unscrew the steam generator cap **F** and fill the tank with water using the funnel **E** (fig. 1).
- Screw up the cap **F** fully and plug the iron into the mains socket.  
Each time you turn the system on, always **FILL** the steam generator completely.



**Danger of burns!**

Never unscrew the cap **F** with the steam generator under pressure.

### Steam ironing

- *Two-button models:* press the  button **J** (iron on) and the  button **H** (steam generator on). The lights on the corresponding buttons come on (fig. 2).
- Wait for the "steam ready" light **G** to go off.
- Proceed by pressing the steam button.



**Please note:**

- When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in

assembling the steam generator and iron.

You are recommended to ventilate the room.

- The light **G** goes on and off during ironing according to the temperature of the steam generator.  
It is part of normal operation and not a cause for concern.
- Each time the iron is used (including for the first time) or if you have not used steam for several minutes, press the steam delivery button a number of times away from the ironing board.  
This will eliminate condensation from the steam circuit.

EN

### Steam regulator I (fig. 4)

The steam regulation dial **I** enables the quantity of steam to be increased or decreased according to the fabric being ironed.

When you turn the iron on, you are recommended to turn the steam regulation dial to the maximum steam position.

### Topping up the steam generator with water

When the water in the steam generator runs out, the iron no longer delivers steam.

To fill again, proceed as follows:

- Turn the steam generator off using the button **H**.  
Release any steam left using the steam control on the iron.
- Turn the appliance off by also pressing the button **J**.
- Unplug from the mains socket and wait 15 minutes for the appliance to cool down.
- Unscrew the cap slowly and fill as described in the paragraph "filling the steam generator".

### Dry ironing

- To dry iron, turn the appliance on by pressing the button 

### After ironing

To put the appliance away tidily, place the steam/cable tube in the compartment **C** and wrap the power cable around the cable tidy **D** (fig. 3).

Store the iron in a dry place.



**Please note:**

- After ironing, the water remaining in the steam generator need not be drained.  
However, the appliance should be drained of water if left unused for long periods.

## PROBLEMS RESOLVABLE WITHOUT CONTACTING CUSTOMER SERVICES

| PROBLEM   | CAUSE  | SOLUTION   |
|---|--|--|
| The appliance does not come on.                                 | <ul style="list-style-type: none"> <li>The appliance is not plugged into a mains socket.</li> </ul>  | <ul style="list-style-type: none"> <li>Make sure the appliance is correctly connected and press the iron and steam generator ON buttons.</li> </ul>                        |
| Water leaks out from the holes in the bottom of the sole plate. | <ul style="list-style-type: none"> <li>Water has condensed inside the tubes because steam is being used for the first time, or has not been used for some time.</li> </ul> | <ul style="list-style-type: none"> <li>Press the steam button several times away from the ironing board. This will eliminate cold water from the steam circuit.</li> </ul> |
|   | <ul style="list-style-type: none"> <li>The ironing system is positioned on an unstable and/or sloping surface.</li> </ul>  | <ul style="list-style-type: none"> <li>Rest the ironing system on a stable flat surface.</li> </ul>  |
| Brown coloured fluid leaks from the sole plate.                 | <ul style="list-style-type: none"> <li>Chemical water softeners or additives have been poured into the steam generator.</li> </ul>   | <ul style="list-style-type: none"> <li>Products must never be poured into the steam generator.</li> </ul>  |
| The first time the appliance is turned on, you notice smoke     | <ul style="list-style-type: none"> <li>Some parts have been treated with sealer/lubricant which evaporates the first time the iron heats up.</li> </ul>                    | <ul style="list-style-type: none"> <li>This is normal and will stop when you have used the iron a few times.</li> </ul>  |
| Steam leaks from the bottom of the steam generator.             | <ul style="list-style-type: none"> <li>The steam generator has not been filled before commencing ironing.</li> </ul>   | <ul style="list-style-type: none"> <li>Each time you turn the system on, always FILL the steam generator completely.</li> </ul>  |
|   | <ul style="list-style-type: none"> <li>The ironing system is positioned on an unstable and/or sloping surface.</li> </ul>  | <ul style="list-style-type: none"> <li>Rest the ironing system on a stable flat surface.</li> </ul>  |
| While heating up, the appliance vibrates                        | <ul style="list-style-type: none"> <li>The steam generator was not filled before turning the system on.</li> </ul>   | <ul style="list-style-type: none"> <li>Turn the appliance off, leave it to cool completely, unscrew the cap and fill the steam generator with water.</li> </ul>            |
| After filling the steam generator, steam leaks from the cap.    | <ul style="list-style-type: none"> <li>The cap is not screwed up tightly.</li> </ul>   | <ul style="list-style-type: none"> <li>Screw the cap up completely.</li> </ul>   |
|   | <ul style="list-style-type: none"> <li>The cap gasket is worn.</li> </ul>  | <ul style="list-style-type: none"> <li>Contact the manufacturer's customer services.</li> </ul>  |