 




Focal Point **SFR3020.S - SFR3140.M**

 
Please retain these instructions for future reference

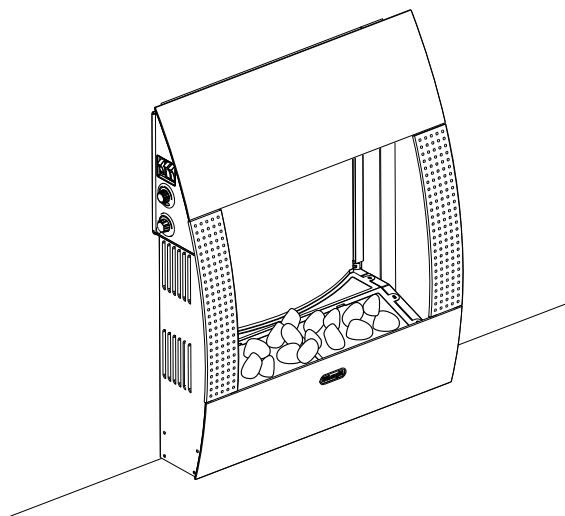

Living innovation

Description of appliance

MODEL SFR3140.M shown

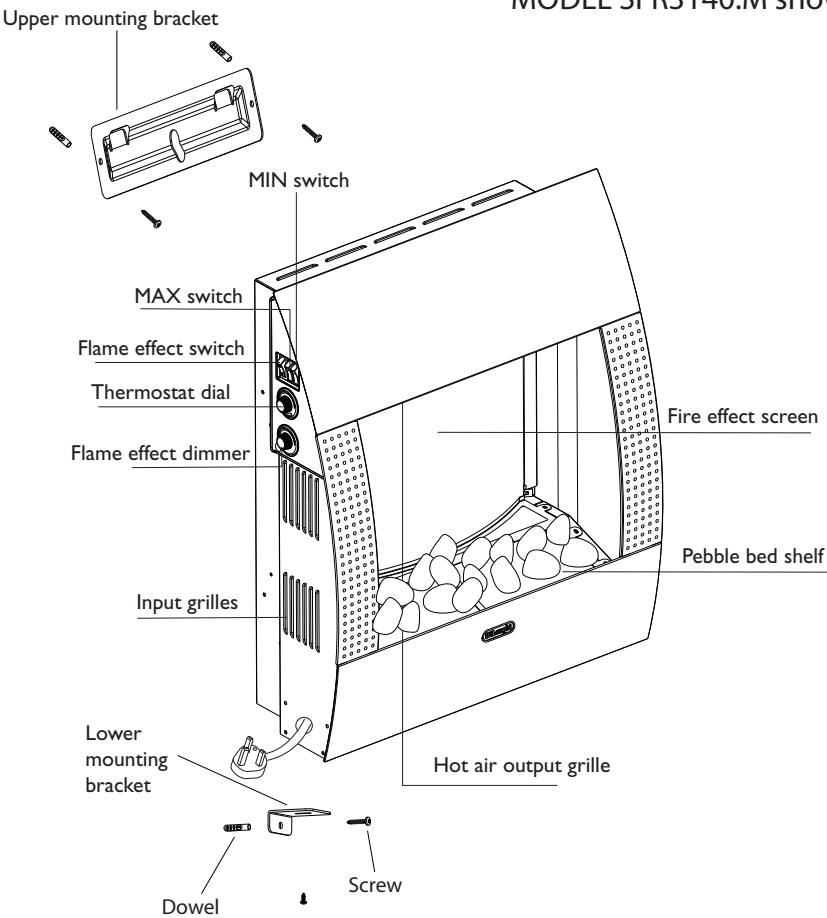

Thank you for choosing this De'Longhi electric fire. To get the very best out of your new appliance please read these instructions before using it. This will ensure that you gain optimum results and use the appliance safely.

SAFETY WARNINGS

- Do not use the appliance in a bathroom or in the vicinity of bathtubs, washbasins, showers or swimming pools.
- Do not use the appliance to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- Never install the appliance directly underneath a fixed mains socket.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Please refer to enclosed guarantee leaflet for details.
- The use of an extension lead is not recommended, however if it is necessary then carefully follow the extension lead's instructions, and most importantly ensure that the extension lead is correctly rated in accordance with the appliance being used and NEVER overloaded.
- In order to avoid any danger caused by accidental resetting of the safety system, this appliance must not be powered through an external timer.
- Do not use the fire in rooms which have an area as small as 4m²
- As with any electrical appliance, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of small children.
- Particular caution should be applied to ensure that young children do not play with or swallow any pebbles or coal.
- Should you wish to connect the fire to a fused spur, this must be carried out by a competent electrician in accordance with the IEE wiring regulations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance
- The front face of the appliance must be positioned at least 50 cm from furniture, walls, curtains, or other objects.



WARNING: In order to avoid overheating, never under any circumstances cover the appliances during operation, as this would lead to dangerous overheating.

Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Important - UK only

- The wires in the cord are coloured as follows:
Green and Yellow = Earth
Blue = Neutral
Brown = Live.
- The appliance must be protected by a 13A approved (BS1362) fuse.
- warning: this appliance must be earthed.

Note:

- For non-rewireable plugs the fuse cover **MUST** be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your De'Longhi Authorised Repairer (see guarantee leaflet).
- If a non-rewireable plug is cut off it must be destroyed immediately. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This appliance complies with European Economic Community Directive 2004/108/EEC.

General instructions

Your appliance is designed for use throughout your living area, such as against a wall or niche, to add instant warmth and ambience.

Position the fire so that the plug socket is accessible.

Always ensure there is sufficient airflow around the appliance otherwise the operation of the appliance will be compromised.

Installation in a niche

The ideal installation is built-in in a niche with the following dimensions 430x600x76 mm (fig. 1) placed on the floor and hooked to the supplied bracket fig.2. Fix the bracket following carefully the dimensions in fig. 3.

Mark the position for fixing the bracket to the wall. Drill the wall for the dowels and insert them. Then insert in the holes the two screws supplied.

Note: when the installation is complete, check the appliance is correctly mounted to the wall by pulling it outwards.

Wall Installation

If you wish to mount the appliance to the wall after having hooked the appliance as previously described, insert the lower bracket into the bottom of the base as shown in fig. 4.

Placing the pebbles

Once the appliance is placed in your chosen location, unpack the pebbles from the accessory box and arrange inside the appliance on the pebble bed shelf.

Arrange the pebbles as you wish using as many as you require. We suggest spreading the smaller ones across the shelf as a base. The large pebbles should then be placed on top with the medium ones used to fill any gaps where light could escape.

OPERATING THE APPLIANCE

Controls

The flame effect switch is located on the top left hand side of the appliance. Pushed in, it will illuminate the fire with no heat, so that you may enjoy the flame effect all year round. Pushed again the switch will return to its outer position and turn the fire off. To use the heating element (the heater element is under the hood), press both buttons. The heater is 2 kW and is thermostatically controlled.

Heat Levels

Model SFR3140.M

For minimum heat, switch the MIN switch on.

For maximum heat, switch the MAX switch on.

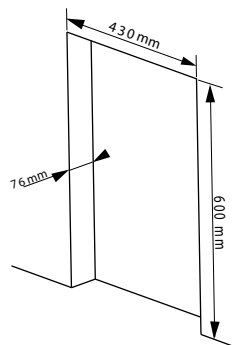 


Fig. 1

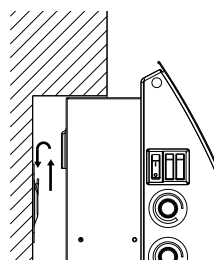 


Fig. 2

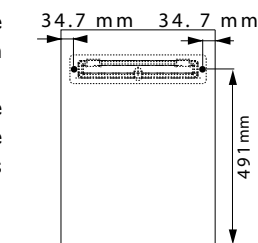 


Fig. 3

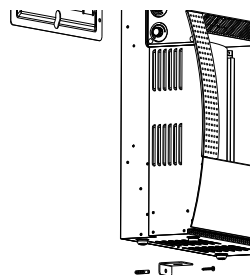 


Fig. 4

Model SFR3020.S

Switch the “**O/I**” switch on.

We suggest that you turn the thermostat up to the maximum. Then, once the required room temperature is achieved, turn the thermostat towards minimum until you hear a click and the heater turns off. The thermostat will then regulate the room temperature automatically. ***Please note that there can be several °C drop or rise in temperature to activate or deactivate the thermostat. The temperature is taken from near to the fire and therefore some fluctuations may arise. Other situations such as the size of the room, the airflow within the room, and the proximity to other heat sources may cause fluctuations in the thermostat's efficiency.***

Turning on the Flame Effect

The fire effect can be on whether or not the heating is on ( position).

Flame effect dimmer

The appliance has a fire effect intensity regulator enabling the flame light to be increased or reduced.

Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat dial slowly until a "click" is heard and no further. This temperature will be regulated automatically and kept constant by the thermostat.

Automatic Safety Cut Out

This appliance is fitted with an automatic cut out device to prevent any damage due to overheating. The appliance will automatically cut out if the airflow is obstructed. To reset the appliance, disconnect the plug from the power socket for a few minutes, remove the cause of obstruction and allow a suitable cooling period before plugging it in again.

Noise

As with all fan driven appliances the appliance will make some noise due to the movements of air occurring, this is perfectly normal.

Maintenance

Before any maintenance/cleaning is undertaken always disconnect the appliance from the power supply and allow to cool down.

Replacing light bulbs

Tools required: correct screwdriver (not included in the box).

Remove the pebbles from the pebble bed shelf, then remove the pebble bed shelf by removing the screws provided as shown in fig. 5. The light bulbs must be replaced only with 40W 220-240V screw type E27. Please note that replacement bulbs are not covered by the guarantee of the product.

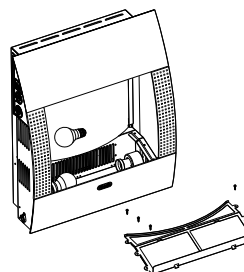 


Fig. 5

Cleaning

The appliance can be cleaned with a soft damp cloth. Do not use metal polish or harsh scouring agents.

Service and Customer Care

- If the cord is damaged it must, for safety reasons, be repaired by De'Longhi or an authorised De'Longhi repairer.
- Please refer to the enclosed guarantee leaflet for service and assistance details.

PROBLEM SOLVING

No power to the fire	Check the wall socket, plug and fuse
No Illumination/ flame effect	Check that fire is switched on. Check that the bulbs are working.
Appliance cuts out/ poor or no flame effect	Check that airflow around the appliance is not obstructed and the product is not covered in any way.



De' Longhi Appliances via Seitz, 47 - 31100 - Treviso - Italia

5713110061/06.08